D40S-9 D45S-9 D50C-9 D55C-9 D40SC-9 D45SC-9 D50SC-9

D35S-9

D55SC-9



Operation & Maintenance Manual



Operation & Maintenance Manual

D35S-9, D40S-9, D45S-9 D50C-9, D55C-9 FDB41, FDB42, FDB43, FDB44, FDB45 (DM03P Tier-4)

D40SC-9, D45SC-9, D50SC-9, D55SC-9 FDB41, FDB42, FDB43, FDB44 (DM03V Stage V)

Doosan Corporation Industrial Vehicle

Address : 468, Injung-ro, Dong-gu, Incheon, Korea Tel : 82-32-211-5000 http://www.doosan-iv.com SB2504E00

Forklifts

SB2504E00 7.2020

Operation & Maintenance Manual

Forklifts

D35S-9, D40S-9, D45S-9

D50C-9, D55C-9

FDB41, FDB42, FDB43, FDB44, FDB45 (DM03P Tier-4)

D40SC-9, D45SC-9, D50SC-9, D55SC-9

FDB41, FDB42, FDB43, FDB44 (DM03V Stage V)

Translation of the original instruction

This document is the informational asset of Doosan Corporation. Thus, unauthorized access, revision, distribution and copying of this document are strictly prohibited.

A WARNING

Do not start, operate or service this machine unless you have read and understood these instructions and received proper training.

Unsafe or improper use of the machine may cause serious injury or death. Operators and maintenance personnel must read this manual and receive training before operating or maintaining the machine.

This manual should be kept with the machine for reference and periodically reviewed by the machine operator and by all personnel who will come into contact with it.

A WARNING

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- Always start and operate the engine in a well-ventilated area.
- If in an enclosed area, vent the exhaust to the outside.
- Do not modify or tamper with the exhaust system.
- Do not idle the engine except as necessary.

For more information go to www.P65warnings.ca.gov/diesel.

Table of Contents

Information Section

Safety Section

mportant Safety Information	4
Safety	5
Warning Signs and Labels	5
General Hazard Information	.10
Operation Information	.11
Before Starting the Lift Truck	.12
Maintenance Information	.14
If Optional Suspension Seat (weight adjusting	1
type) Equipped	19
Avoiding Lift Truck Tipovers	.22
Safety Rules	.24
How to Survive in a Tipover	.30

General Section

Declaration of Conformity Specifications	
Noise and Vibration	
Capacity Chart	41
Capacity Chart (with Side Shifter)	43
Serial Number	57
Operator's Warning and Identification Plate	58

Operation Section

Operator's Station and Monitoring Systems Weight Scale Option (Load Cell Type)	70
Seat Switch System	
Lift Truck Controls	
Fuel and DEF/Ad-Blue Replenishment	
Before Starting the Engine	88
After Starting the Engine	92
Lift Truck Operation	100
Mono-Ped Control System (If Equipped)	102
Operating Techniques	103
Parking the Lift Truck	108
Lift Fork Adjustment	
Storage Information	
Transportation Hints	111
Towing Information	
Parking Brake Forced Release Method	114

Maintenance Section

Inspection, Maintenance and Repair of Lift Truck Forks
Tire Inflation Information
Torque Specifications
Cooling System Specifications123
Specifications of Fuel and DEF/Ad-Blue 125
Lubricant Specifications127
Lubricant Viscosities and Refill Capacities
Maintenance Intervals130
When Required134
Every 10 Service Hours or Daily143
First 50 - 100 Service Hours or a Week 147
Every 500 Service Hours or 3 Months 151
Every 1000 Service Hours or 6 Months
Every 2000 Service Hours or Yearly167
Every 2500 Service Hours or 15 Months171
Every 5000 Service Hours or 30 Months172

Environment Protection Section

Environment Protection173	5
---------------------------	---

Index Section

Foreword

Literature Information

This manual should be stored in the operator's compartment in the literature holder or seat back literature storage area.

This manual contains safety, operation, transportation, lubrication and maintenance information.

Some photographs or illustrations in this publication show details or attachments that can be different from your lift truck. Guards and covers might have been removed for illustrative purposes.

Continuing improvement and advancement of product design might have caused changes to your lift trucks which are not included in this publication.

Read, study and keep this manual with the lift truck.

Whenever a question arises regarding your lift truck, or this publication, please consult your DOOSAN dealer for the latest available information.

Safety

The Safety Section lists basic safety precautions. In addition, this section identifies the text and locations of warning signs and labels used on the lift truck. Read and understand the basic precautions listed in the Safety Section before operating or performing lubrication, maintenance and repair on this lift truck.

Operator Restraint System (If Equipped)

This manual contains safety, operation and maintenance information for the DOOSAN operator restraint system. Read, study and keep it handy.

👠 WARNING

Your DOOSAN truck comes equipped with an operator restraint system. Should it become necessary to replace the seat for any reason, it should only be replaced with another DOOSAN operator restraint system.

Photographs or illustrations guide the operator through correct procedures of checking, operation and maintenance of the DOOSAN operator restraint system.

SAFE and EFFICIENT OPERATION of a lift truck depends to a great extent on the skill and alertness on the part of the operator. To develop this skill the operator should read and understand the Safe Driving Practices contained in this manual.

Forklift trucks seldom tipover, but in the rare event they do, the operator may be pinned to the ground by the lift truck or the overhead guard. This could result in serious injury or death.

Operator training and safety awareness is an effective way to prevent accidents, but accidents can still happen. The DOOSAN operator restraint system can minimize injuries. The DOOSAN operator restraint system keeps the operator substantially within the confines of the operator's compartment and the overhead guard.

This manual contains information necessary for Safe Operation. Before operating a lift truck make sure that the necessary instructions are available and understood.

Operation

The Operation Section is a reference for the new operator and a refresher for the experienced one. This section includes a discussion of gauges, switches, lift truck controls, attachment controls, transportation and towing information.

Photographs and illustrations guide the operator through correct procedures of checking, starting, operating and stopping the lift truck.

Operating techniques outlined in this publication are basic. Skill and techniques develop as the operator gains knowledge of the lift truck and its capabilities.

Maintenance

The Maintenance Section is a guide to equipment care. The illustrated, step-by-step instructions are grouped by servicing intervals. Items without specific intervals are listed under "When Required" topics. Items in the "Maintenance Intervals" chart are referenced to detailed instructions that follow.

Maintenance Intervals

Use the service hour meter to determine servicing intervals. Calendar intervals shown (daily, weekly, monthly, etc.) can be used instead of service hour meter intervals if they provide more convenient servicing schedules and approximate the indicated service hour meter reading. Recommended service should always be performed at the interval that occurs first.

Under extremely severe, dusty or wet operating conditions, more frequent lubrication than is specified in the "Maintenance Intervals" chart might be necessary.

Perform service on items at multiples of the original requirement. For example, at "Every 500 Service Hours or 3 Months", also service those items listed under and "Every 10 Service Hours or Daily".

Environment Management

Note that DOOSAN INDUSTRIAL VEHICLE is ISO 14001 certified which is harmonized with ISO 9001. Periodic ENVIRONMENTAL AUDITS & ENVIRONMENTAL PERFORMANCE EVALUATIONS have been made by internal and external inspection entities. LIFE-CYCLE ANALYSIS has also been made through out the total product life. ENVIRONMENT MANAGEMENT SYSTEM includes DESIGN FOR ENVIRONMENT from the initial stage of the design.

ENVIRONMENT MANAGEMENT SYSTEM considers environmental laws & regulations, reduction or elimination of resource consumption as well as environmental emission or pollution from industrial activities, energy saving, environment-friendly product design (lower noise, vibration, emission, smoke, heavy metal free, ozone depleting substance free, etc.), recycling, material cost reduction, and even environmentally oriented education for the employee.

Important Safety Information

Most accidents involving product operation, maintenance and repair are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. A person must be alert to potential hazards, and use common sense. Persons must also have the necessary training, skills and tools before attempting to perform these functions.

Improper operation, lubrication, maintenance or repair of this product can be dangerous and could result in injury or death.

Do not operate or perform any lubrication, maintenance or repair on this product, until you have read and understood the operation, lubrication, maintenance and repair information.

Safety precautions and warnings are provided in this manual and on the product. If these hazard warnings are not heeded, bodily injury or death could occur to you or other persons.

The hazards are identified by the "Safety Alert Symbol" and followed by a "Signal Word" such as "WARNING" as shown below.

🛕 WARNING

The meaning of this safety alert symbol is as follows:

Attention! Become Alert! Your Safety is Involved.

The message that appears under the warning, explaining the hazard, can be either written or pictorially presented.

Operations that may cause product damage are identified by NOTICE labels on the product and in this publication.

DOOSAN cannot anticipate every possible circumstance that might involve a potential hazard, and common sense is always required. The warnings in this publication and on the product are therefore not all inclusive. Before any tool, procedure, work method or operating technique not specifically recommended by DOOSAN is used, you must be sure that it is safe for you and others. You should also ensure that the product will not be damaged or made unsafe by the operation, lubrication, maintenance or repair procedures you choose.

The information, specifications, and illustration in this publication are on the basis of information available at the time it was written. The specifications, torques, pressures, measurements, adjustments, illustrations, and other items can change at any time. These changes can affect the service given to the product. Obtain the complete and most current information before starting any job. DOOSAN dealers have the most current information available.

Safety

The safety rules and regulations in this section are representative of some, but not all rules and regulations that apply to lift trucks. Rules and regulations are paraphrased without representation that they have been reproduced verbatim.

Please refer to 29 CFR 1910.178 in the Code of Federal Regulations, the National Fire Protection Association No. 505 (NFPA). American National Standards Institute/Industrial Truck Standards Development Foundation, ANSI/ITSDF B56.1 Safety Standard for Low lift and High Lift Trucks. UL 558 Fire Safety Standard for Internal Combustion Engine-Powered Industrial Trucks and subsequent revisions for a complete list of rules and regulations as to the safe operation of powered industrial lift trucks. Since regulations vary from country to country outside of U.S.A., operate this lift truck in accordance with local regulations.

DOOSAN lift trucks are manufactured in accordance with the National Fire Protection Association (NFPA) No. 505 and the American National Standards Institute, Inc. / Industrial Truck Standards Development Foundation (ANSI/ITSDF) B56.1, Safety Standard for Low and High Lift Trucks and, for European models, according to the regulations and standards laid down in EU Machinery Directive 2006/42/EC and EMC directive 2014/30/EU.

The most effective method of reducing the risk of serious injury or death to you or others is for you to know how to properly operate this lift truck, to be alert and to avoid actions or conditions that could cause accidents.

Do not operate a lift truck if it is in need of maintenance, repair or appears to be unsafe in any way. Report all unsafe conditions immediately to your supervisor, then contact your authorized lift truck dealer. Do not attempt any adjustments or repairs unless trained and authorized to do so.

Warning Signs and Labels

There are several specific safety signs on your lift truck. Their exact location and description of the hazard are reviewed in this section. Please take the time to familiarize yourself with these safety signs.

Make sure that you can read all warning and instruction labels. Clean or replace these labels if you cannot read the words or see the pictures. When cleaning the labels use a cloth, water and soap. Do not use solvent, gasoline, etc.

You must replace a label if it is damaged, missing or cannot be read. If a label is on a part that is replaced, make sure a new label is installed on the replaced part. See your dealer for new labels.

Training Required to Operate or Service Warning



Located on the front side of the FCU.

WARNING

Improper operation or maintenance could result in injury or death. Do not operate or work on the lift truck unless you are properly trained. Read and understand the Operation and Maintenance Manual. Additional manuals are available from DOOSAN Lift Truck dealers.

This label also provides allowable lift truck capacity information.

General Warnings to Operator



Located on the right side of the operator's seat.

🚺 WARNING

Only trained and authorized personnel may operate this machine. For safe operation, read and follow the operation and maintenance Manual furnished with this lift truck and observe the following warnings:

- 1. Before starting machine. Check all controls and warning devices for proper operation.
- Refer to machine identification plate for allowable machine capacity. Do not overload. Operate machines equipped with attachments as partially loaded machines when not handling a load.
- 3. Put directional control or shift lever in neutral before "ON - OFF" switch is turned on.
- Start, turn and brake smoothly. Slow down for turns, slippery or uneven surfaces. Extremely poor surfaces should be repaired. Avoid running over loose objects or holes in the roadway surfaces. Use extreme caution when turning on inclines.
- 5. Travel with load as low as possible and tilted back. If load interferes with visibility, travel with load trailing.
- 6. When operating on a slope, place the load side on the higher part of the slope.
- Watch out for pedestrians and obstructions. Secure enough clearance above the overhead guard so that it will not bump against anything in the truck's way.
- 8. Do not permit a person to ride on forks or machine at any time.
- **9.** Do not allow anyone to stand or pass under the elevated portion of any machine.
- **10.** Make sure operating surface can safely support machine.
- **11.** Operate machine and attachments only from operator's position.
- 12. Do not handle unstable or loosely stacked loads.
- **13.** Use minimum tilt when picking up or depositing a load.

- 14. Use extreme care when handling long, high or wide loads to ensure stability and durability of the truck.
- **15.** Forks should be completely under load and spread apart as far as load permits.
- Machine should be equipped with overhead guard or equivalent protection. Where load requires it, use load backrest extension. Use extreme caution if operating without these devices.
- 17. After parking, lower the forks to the floor. Put directional control or shift lever in neutral. Set parking/secondary brake. Turn "ON - OFF" switch off. Check wheels if machine is on incline. Disconnect battery when storing electric machines.
- Observe safety rules when handling fuel for engine powered machine and when changing batteries for electric machines.
- 19. Avoid overuse of the inching pedal as this may cause the automatic transmission oil to overheat or the clutch to slip. Do not use as a footrest or for long periods of time.
- 20. If user operates continuously pushing work or both brake pedal and accelerator pedal were depressed at the same time, it may cause the automatic transmission oil to overheat or the clutch to slip.

Pressure Warning

\Lambda WARNING

Contents under pressure may be hot. Allow to cool before opening.



Located on the radiator top tank by the radiator cap.

Hand Placement Warning



No hands. Do not place hands in this area. Do not touch, lean on, or reach through the mast or permit others to do so.

No Standing On Forks Warning, No Standing Under Forks Warning

🛝 WARNING

Do not stand or ride on the forks. Do not stand or ride on a load or pallet on the forks. Do not stand or walk under the forks.



Located on the lift cylinder.

Load Backrest Must Be In Place Warning



Operation without this device in place may be hazardous.



Located on the mast.



Located on the load backrest.

Overhead Guard Must Be In Place Warning

🛝 WARNING

Operation without this device in place may be hazardous. This guard conforms to A.N.S.I.B56.1 and F.E.M. Section IV. This design has been tested with an impact of (appropriate value).




Located on the Overhead Guard.

Brake Pedal Adjustment Warning

\Lambda WARNING

Improper adjustment could result in injury or death. It has to be adjusted by drawing dimension on free condition. For safe, don't unfasten clevis and nut. It has to be adjusted by trained personnel.

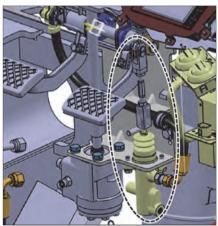

Located inside Brake pedal box.

Electrical Parking Brake





Push the front side of the parking brake switch to engage the brake.

Pushe the rear side of the parking brake switch to engage the brake.

Applying the parking brake puts the transmission in NEUTRAL. The parking brake must be applied when leaving the lift truck and when starting the engine. If the operator leaves the seat without applying the parking brake, an audible alarm will sound.

🛝 WARNING

When leaving machine apply parking brake! Parking brake is not automatically applied. Alarm will sound if parking brake is not applied.

🛦 WARNING

Correct adjustment is necessary to provide adequate braking. See the MAINTENANCE section for adjustment procedures. The lift truck may creep at engine idle and can cause damage, injury or death. Always apply the parking brake when leaving the lift truck. The parking brake is NOT automatically applied.

No Riders Warning

🛝 WARNING

To avoid personal injury, allow no riders. A lift truck is designed for only one operator and no riders.



Located beside the operator's station.

Moving Fan Warning



To avoid personal injury, stay clear of moving fan.



Located on the shroud and upper cover.

Hot Muffler Warning

🛝 WARNING

Be careful not to touch muffler because it's very hot when or after operating.





Located under muffler.

General Hazard Information



Attach a "Do Not Operate" or similar warning tag to start switch or controls before servicing or repairing the lift truck.

Do not start or service the lift truck when a "DO NOT OPERATE" or similar warning tag is attached to the start switch or controls.

Wear a hard hat, protective glasses and other protective equipment as required by job conditions.

Know the width of your attachments so proper clearance can be maintained when operating near fences, boundary obstacles, etc.

Do not wear loose clothing or jewelry that can catch on controls or other parts of the lift truck.

Keep the lift truck, especially the deck and steps, free of foreign material such as debris, oil tools and other items which are not part of the lift truck.

Secure all loose items such as lunch boxes, tools and other items which are not part of the lift truck.

Know the appropriate work-site hand signals and who gives them. Accept signals from one person only.

Always use the overhead guard. The overhead guard is intended to protect the lift truck operator from overhead obstructions and from falling objects.

A truck that is used for handing small objects or uneven loads must be fitted with a load backrest.

If the lift truck must be operated without the overhead guard in place due to low overhead clearance, use extreme care. Make sure there is no possibility of falling objects from any adjacent storage or work area. Make sure the load is stable and fully supported by the carriage and the load backrest extension (if equipped).

Do not raise loads any higher than necessary and never raise a load higher than 1830 mm (72 in) with the overhead guard removed.

Always use load backrest extension when the carriage or attachment does not fully support the load.

The load backrest extension is intended to prevent the load or any part of the load from falling backwards into the operator's station.

When operation the lift truck, do not depend only on flashing lights or back-up alarm (if equipped) to warn pedestrians.

Always be aware of pedestrians and do not proceed until the pedestrians are aware of your presence and intended actions and have moved clear of the lift truck and/or load.

Do not drive lift truck up to anyone standing in front of an object.

Obey all traffic rules and warning signs.

Keep hands, feet and head inside the operator station. Do not hold onto the overhead guard while operating the lift truck. Do not climb on any part of the mast or overhead guard or permit others to do so.

Do not allow unauthorized personnel to ride on the forks or any other part of the lift truck, at any time. When working in a building or dock, observe floor load limits and overhead clearances.

NOTICE

Inhaling Freon gas through a lit cigarette or other smoking method or inhaling fumes released from a flame contacting Freon can cause bodily harm or death. Do not smoke when servicing air conditioners or wherever Freon gas may be present.

LPG Truck contains 0.35kg of HFC-134a, of which the CO2 equivalent value is 0.572 tons.

Diesel Truck contains 0.35kg of HFC-134a, of which the CO2 equivalent value is 1.001 tons.

The GWP of HFC-134a is 1,430.

This is only for the trucks with air-conditioner option.

The above capacity information written on the film is attached to the truck.

Inhaling Freon gas through a lit cigarette or other smoking method or inhaling fumes released from a flame contacting Freon can cause bodily harm or death. Do not smoke when servicing air conditioners or wherever Freon gas may be present.

Never put maintenance fluids into glass containers.

Use all cleaning solutions with care.

Do not use steam, solvent, or high pressure to clean electrical components.

Report all needed repairs.

When you handle DEF/AD-Blue, wear protective equipment and observe Precautions for Handling.



Inspect the part of the chain that is normally operated over the crosshead roller. When the chain bends over the roller, the movement of the parts against each other causes wears.

Inspect to be sure that chain link pins do not extend outside of the bore hole.

If any single link pin is extended beyond its connecting corresponding link, it should be suspected of being broken inside of its bore hole.

Inspect the chain anchor and the anchor links for wear.

Do not change any factory set adjustment values (including engine rpm setting) unless you have both authorization and training. Especially Safety equipment and switches may not be removed or adjusted incorrectly. Repairs, adjustments and maintenances that are not correct can make a dangerous operating condition.

For any checkup, repair, adjustments, maintenance and all other work concerning your forklift truck, please contact your DOOSAN dealer. We would like to draw your attention to the fact that any secondary damages due to improper handling, insufficient maintenance, wrong repairs or the use of other than original DOOSAN spare parts waive any liability by DOOSAN.

Operation Information

Mounting and Dismounting

Mount and dismount the lift truck carefully.

Clean your shoes and wipe your hands before mounting.

Face the lift truck when mounting and dismounting.

Use both hands face the lift truck when mounting and dismounting.

Use the handgrips for mounting and dismounting.

Do not try to climb on or off the lift truck when carrying tools or supplies.

Never get on or off a moving lift truck.

Do not use any controls as handholds when entering or leaving the operator's station.

Never get on or off a moving lift truck. Never jump off the lift truck.

Keep hands and steering wheel free of slippery material.

Before Starting the Lift Truck

Perform a walk-around inspection daily and at the start of each shift. Refer to the topic "Walk-around Inspection" in "Every 10 Service Hours or Daily" section of this manual.

Adjust the seat so that full brake pedal travel can be obtained with the operator's back against the seat back.

Make sure the lift truck is equipped with a lighting system as required by conditions.

Make sure all hydraulic controls are in the HOLD position.

Make sure the direction control lever is in the NEUTRAL position.

Make sure the parking brake is engaged.

Make sure no one is standing and/or working on, underneath or close to the lift truck before operating the lift truck.

Operate the lift truck and controls only from the operator's station.

Make sure the lift truck horn, lights, backup alarm (if equipped) and all other devices are working properly. Check for proper operation of mast and attachments.

Pay particular attention to unusual noises or erratic movement which might indicate a problem.

Make sure service and parking brakes, steering, and directional controls are operational.

Make sure all personnel are clear of lift truck and travel path.

Refer to the topic "Lift Truck Operation" in the "Operation Section" of this manual for specific starting instructions.

Starting the Lift Truck



Do not start the engine or move any of the controls if there is a "DO NOT OPERATE" or similar warning tag attached to the start switch or controls.

Before Operating the Lift Truck

Test brakes, steering controls, horn and other devices for proper operation. Report faulty performance.

Do not operate lift truck until repaired.

Learn how your lift truck operates. Know its safety devices. Know how the attachments work.

Before moving the lift truck, look around. Start, turn and brake smoothly.

An operator must constantly observe his lift truck for proper operation.

Operating the Lift Truck

Always keep the lift truck under control.

Obey all traffic rules and warning signs.

Never leave the lift truck with the engine operating, or with the parking brake disengaged.

Operate the engine only in a well ventilated area.

Lower a mast, with or without load, before turning or traveling. Tip over could result. Watch out for overhead obstructions.

Always observe floor load limits and overhead clearance.

Start, turn, and brake smoothly, slow down for turns, grades, slippery or uneven surfaces.



Use special care when operation on grades. Do not angle across or turn on grades. Do not use lift truck on slippery grades. Travel with forks downgrade when unloaded. Travel with load upgrade.

Do not overload, or handle offset, unstable, or loosely stacked loads. Refer to load capacity plate on the lift truck. Use extreme caution when handing suspended, long, high or wide load.



Tilt elevated load forward only when directly over unloading area and with load as low as possible.

Do not stunt ride or indulge in horseplay.

Always look and keep a clear view of the path of travel.

Travel in reverse if load or attachment obstructs visibility.

Use extreme caution if visibility is obstructed.

Stay in designated travel path, clear of dock edges, ditches, other drop-offs and surfaces which cannot safely support the lift truck.

Slow down and use extra care through doorways, intersections and other location where visibility is reduced.

Slow down for and avoid pedestrians, other vehicles, obstruction, pot holes and other hazards or objects in the path of travel.

Always use overhead guards except where operation conditions do not permit. Do not operate lift truck in high stacking areas without overhead guards.

When stacking, watch for falling objects. Use load backrest extension and overhead guard.

Refer to the topic "Operation Techniques" in the "Operation Section" of this manual.

Loading or Unloading Trucks/Trailers

Do not operate lift trucks on trucks or trailers which are not designed or intended for that purpose. Be certain truck or trailer brakes are applied and wheel chocks in place (or be certain unit is locked to the loading dock) before entering onto trucks or trailers.

If trailer is not coupled to tractor, make sure the trailer landing gear is properly secured in place. On some trailers, extra supports may be needed to prevent upending or corner dipping.

Be certain dock plates are in good condition and properly placed and secured. Do not exceed the rated capacity of dock boards or bridge plates.

Lift Truck Parking

When leaving the operator station, park the lift truck in authorized areas only. Do not block traffic.



- Park the lift truck on level ground, lowering the fork and tilting the mast forward until the fork tips touch the floor.
- Move the direction control lever to NEUTRAL.
- Engage the parking brake.
- Turn the key switch off and remove the key.
- Turn the disconnect switch to OFF and remove the key (if equipped).
- Block the drive wheels when parking on an incline.

📐 WARNING

Do operate the disconnecting switch after 30 seconds from start key-off. (if equipped)

Otherwise Engine Control Unit (ECU) can be damaged.

Maintenance Information

Perform all maintenance unless otherwise specified as follows ;

- Park the lift truck in authorized areas only.
- Park the lift truck on level ground, lowering the fork and tilting the mast forward until the fork tips touch the floor.
- Place the transmission controls in neutral.
- Engage the parking brake.
- Stop the engine.
- Remove the start switch key and turn the disconnect switch OFF (if equipped).
- Block the drive wheels when parking on an incline.

Pressure Air

Pressure air can cause personal injury. When using pressure air for cleaning, wear a protective face shield, protective clothing and protective shoes.

The maximum air pressure must be below 205 kPa (30 psi) for cleaning purposes.

Fluid Penetration

Always use a board or cardboard when checking for a leak. Escaping fluid under pressure, even a pinhole size leak, can penetrate body tissue, causing serious injury, and possible death. If fluid is injected into your skin, it must be treated by a doctor familiar with this type of injury immediately.

Crushing or Cutting Prevention

Support equipment and attachments properly when working beneath them. Do not depend on hydraulic cylinders to hold it up. Any attachment can fall if a control is moved, or if a hydraulic line breaks.

Never attempt adjustments while the lift truck is moving or the engine is running unless otherwise specified.

Where there are attachment linkages, the clearance in the linkage area will increase or decrease with movement of the attachment.

Stay clear of all rotating and moving parts.

Keep objects away from moving fan blades.

They will throw or cut any object or tool that falls or is pushed into them.

Do not use a kinked or frayed wire rope cable. Wear gloves when handling the wire rope cable.

Retainer pins, when struck with force, can fly out and injure nearby persons. Make sure the area is clear of people when driving retainer pins.

Wear protective glasses when striking a retainer pin to avoid injury to your eyes.

Chips or other debris can fly off objects when struck. Make sure no one can be injured by flying debris before striking any object.

Falling Objects Protective Structure(FOPS)

This is an attached guard located above the operator's compartment and secured to the lift truck.

To avoid possible weakening of the Falling Objects Protective Structure (FOPS), consult a DOOSAN dealer before altering, by adding weight to, welding on, or cutting or drilling holes into the structure.

The overhead guard is not intended to protect against every possible impact. The overhead guard may not protect against some objects penetrating into the operator's station from the sides or ends of the lift truck.

The lift truck is equipped with an overhead guard and FOPS as standard. If there is a possibility of overhead objects falling through the guard, the guard must be equipped with smaller holes or a Plexiglas cover.

Any altering done that is not specifically authorized by DOOSAN invalidates DOOSAN's FOPS certification.

The protection offered by this FOPS will be impaired if it has been subjected to structural damage.

Structural damage can be caused by an overturn accident, by falling objects, etc.

Do not mount any item such as fire extinguishers, first aid kits and lights by welding brackets to or drilling holes in any FOPS structure. See your DOOSAN dealer for mounting guidelines.

Burn Prevention

Coolant

At operating temperature, the engine coolant is hot and under pressure. The radiator and all lines to heaters or the engine contain hot water or steam. Any contact can cause severe burns.

Steam can cause personal injury.

Check the coolant level only after engine has been stopped and the filler cap is cool enough to remove with your bare hand.

Remove the cooling system filter cap slowly to relieve pressure.

Cooling system additive contains alkali that can cause personal injury. Avoid contact with the skin and eyes and do not drink.

Allow cooling system components to cool before draining.

Oils

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact the skin.

At operation temperature, the hydraulic tank is hot and can be under pressure.

Remove the hydraulic tank filter cap only after the engine has been stopped and the filter cap is cool enough to remove with your bare hand.

Remove the hydraulic tank filter cap slowly to relieve pressure.

Relieve all pressure in air, oil fuel or cooling systems before any lines, fittings or related items are disconnected or removed.

Batteries

Batteries give off flammable fumes which can explode.

Do not smoke when observing the battery electrolyte levels.

Electrolyte is an acid and can cause personal injury if it contacts skin or eyes.

Always wear protective glasses when working with batteries.

Fire or Explosion Prevention

All fuels, most lubricants and some coolant mixtures are flammable.

Fuel leaked or spilled onto hot surfaces or electrical components can cause a fire.

Do not smoke while refueling or in a refueling area.

Do not smoke in areas where batteries are charged, or where flammable materials are stored.

Batteries in series can be located in separate compartments.

When using jumper cables always connect positive(+) cable to positive(+) terminal of battery connected to starter solenoid and negative(-) cable from external source to starter negative(-) terminal.

(If not equipped with starter negative(-) terminal, connect to engine block.)

See the Operation Section of this manual for specific starting instructions.

Clean and tighten all electrical connections. Check daily for loose or frayed electrical wires. Have all loose or frayed electrical wires tightened, repaired or replaced before operation the lift truck.

Keep all fuels and lubricants stored in properly marked containers and away from all unauthorized persons.

Store all oily rags or other flammable material in a protective container, in a safe place.

Do not weld or flame cut on pipes or tubes that contain flammable fluids. Clean them thoroughly with nonflammable solvent before welding or flame cutting on them.

Remove all flammable materials such as fuel, oil and other debris before they accumulate on the lift truck.

Do not expose the lift truck to flames, burning brush, etc., if at all possible.

Shields, which protect hot exhaust components from oil or fuel spray in the event of a line, tube or seal failure, must be installed correctly.

Do not operate in areas where explosive gases exist or are suspected.

Do perform the regeneration of aftertreatment, hot exhaust gas is emitted, in a safe outdoor environment.

Fire Extinguisher

Have a fire extinguisher-type BC and 1.5KG minimum capacity-on rear overhead guard leg with latch and know how to use it. Inspect and have it serviced as recommended on its instruction plate.

Ether

Ether is poisonous and flammable.

Breathing ether vapors or repeated contact of ether with skin can cause personal injury.

Use ether only in well-ventilated areas.

Do not smoke while changing ether cylinders.

Use ether with care to avoid fires.

Do not store replacement ether cylinders in living areas or in the operator's compartment.

Do not store ether cylinders in direct sunlight or at temperatures above 39°C (102°F).

Discard cylinders in a safe place. Do not puncture or burn cylinders.

Keep ether cylinders out of the reach of unauthorized personnel.

Lines, Tubes and Hoses

Do not bend or strike high pressure lines. Do not install bent or damaged lines, tubes or hoses.

Repair any loose or damaged fuel and oil lines, tubes and hoses. Leaks can cause fires. Contact your DOOSAN dealer for repair or replacement.

Check lines, tubes and hoses carefully. Do not use your bare hand to check for leaks. Use a board or cardboard to check for leaks. See Fluid Penetration in the Safety Section for more details. Tighten all connections to the recommended torque. Replace if any of the following conditions are found.


- End fittings damaged or leaking.
- Outer covering chafed or cut and wire reinforcing exposed.
- Outer covering ballooning locally.
- Evidence of kinking or crushing of the flexible part of hose.
- Armoring embedded in the outer cover.
- End fittings displaced.

Make sure that all clamps, guards and heat shields are installed correctly to prevent vibration, rubbing against other parts, and excessive heat during operation.

Tire Information

Explosions of air-inflated tires have resulted from heatinduced gas combustion inside the tires. The heat, generated by welding or heating rim components, external fire, or excessive use of brakes can cause gaseous combustion.

A tire explosion is much more violent than a blowout. The explosion can propel the tire, rim and axle components as far as 500 m (1500 ft) or more from the lift truck. Both the force of the explosion and the flying debris can cause personal injury or death, and property damage.

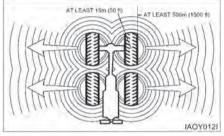

Do not approach a warm tire closer than the outside of the area represented by the shaded area in the above drawing.

Dry nitrogen(N₂) gas is recommended for inflation of tires. If the tires were originally inflated with air, nitrogen is still preferred for adjusting the pressure. Nitrogen mixes properly with air.

Nitrogen inflated tires reduce the potential of a tire explosion, because nitrogen does not support combustion. Also, nitrogen helps prevent oxidation and the resulting deterioration of rubber and corrosion of rim components.

Proper nitrogen inflation equipment and training in its use are necessary to avoid over-inflation. A tire blowout or rim failure can result from improper or misused equipment.

Stand behind the tread and use a self-attaching chuck when inflation a tire.

Servicing, changing tires and rims can be dangerous and should be done only by trained personnel using proper tools and procedures. If correct procedures are not followed while servicing tires and rims, the assemblies could burst with explosive force and cause serious personal injury or death. Follow carefully the specific information provided by your tire or rim servicing personnel or dealer.

DOOSAN forklift is equipped with wheels from different manufacturers.

Please re-use the original parts of the existing wheel, if there is no deformation of the wheel after checked. Mixing up new and old parts may cause incomplete assembly that might lead to unexpected dismantlement of parts and accident.

Operator Restraint System (If Equipped)

Warning Signs and Labels


Your DOOSAN lift truck has the following tipover warning decals.

Make sure that you can read all safety signs. Clean or replace these if you cannot read the words or see the pictures. When cleaning the labels use a cloth, water and soap. Do not use solvent, gasoline, etc. You must replace a label if it is damaged, missing or cannot be read. If a label is on a part that is replaced, make sure a new label is installed on the replaced part. See you DOOSAN Lift Truck dealer for new labels.

The most effective method of preventing serious injury or death to yourself or others is to familiarize yourself with the proper operation of the lift truck, to be alert, and to avoid actions or conditions which can result in an accident.

WARNING

Tipover can occur if the truck is improperly operated. In the event of a tipover, injury or death could result.

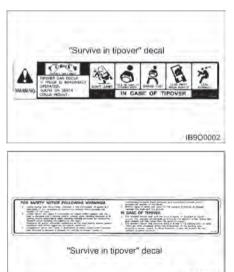

IB900003



The "Survive in tipover" warning is located on the overhead guard. It shows the proper use of the operator restraint system.

Seat Adjustment





Move the lover, slide the seat to the desired position, and release the lever.

Adjust the seat before operating the lift truck. After adjusting, set the seat to make sure it is properly locked. Do not adjust the seat while the truck is in motion.

WARNING

Do not pace your hand or fingers under the seat. Injury may occur as the seat moves up and down.

If Optional Suspension Seat (weight adjusting type) Equipped

Forward and Backward Adjustment

The seat can be adjusted by pushing the lever on the right side of seat.



Adjust the seat before operating the lift truck. After adjusting, set the seat to make sure it is properly locked. Do not adjust the seat while the truck is in motion.

Weight adjustment

Pull the weight adjustment lever upwards and move right or left side. Adjust to driver's weight in 7 steps (50 ~ 110 kg)


Do not place your hand or fingers under the seat. Injury may occur as the seat moves up and down.



Backrest Inclination

The backrest angle can be adjusted by using the lever on the left side of seat.




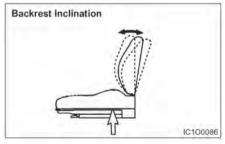

Seat Belt

The Operator Restraint System, Prevents the operator from jumping from the operator's compartment in the event of a forward or side tipover. The system is designed to keep the operator on the seat and in the operator's compartment in the event of a tipover.

Inspection

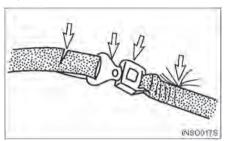

 If the seat belt is torn, if pulling motion is interrupted during extension of the belt, or if the belt cannot be inserted into the buckle properly, replace the seat belt assembly.



 Belt Maintenance – Every 500 service hours. Check that the belt fastening works properly and that winding device is free from run lock when jerked. Check that the belt is suitably fastened to the seat. Check that the seat is correctly secured to the hood and the chassis. On visual inspection, fastenings must be intact, otherwise, contact the safety manager.

👠 WARNING

Your DOOSAN truck comes equipped with a DOOSAN operator restraint system. Should it become necessary to replace the seat for any reason, it should only be replaced with another DOOSAN operator restraint system.




- In the event of a tipover, the seat and restraint system should be inspected for damage and replaced, if necessary.
- **NOTE:** Operator restraints shall be examined at the regular truck service intervals. It is recommended that they be replaced if any of the following conditions are found:
- Cut or frayed strap
- Worn or damaged hardware including anchor points
- Buckle or retractor malfunction
- Loose stitching

👠 WARNING

The seat belt may cause the operator to bend at the waist. If you are pregnant or have suffered from some abdominal disease, consult a doctor before you use the seat belt.

Fasten the Seat Belt

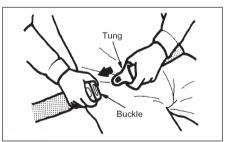


- Grip the plate (connector) of the belt and pull the belt from the retractor. Then insert the plate into the slot of the buckle until a snap is heard. Pull on the belt to confirm it is latched.
- 2. Make sure the belt is not twisted.

🛦 WARNING

If you fasten the belt across your abdomen, the belt may injure your abdomen in an accident.



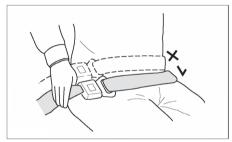

- 3. Be sure to fasten the belt across your hips, not across your abdomen.
- NOTE: The belt is designed to automatically adjust to your size and movement. A quick pull on the belt will confirm that the automatic adjuster will hold the belt position in the event of an accident.


Release the Seat Belt



Push the button of the buckle to release the belt. The belt will automatically retract when released. Hold the plate of the belt and allow the belt to slowly retract.

Avoiding Lift Truck Tipovers


Lift Truck Stability

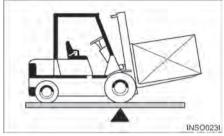

Counterbalanced lift truck design is based on the balance of two weights on opposite sides of a fulcrum (the front axle). The load on the forks must be balanced by the weight of the lift truck.


The location of the center of gravity of both the truck and the load is also a factor. This basic principle is used for picking up a load. The ability of the lift truck to handle a load is discussed in terms of center of gravity and both forward and sideways stability.

Center of Gravity (CG)

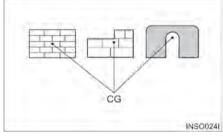


The point within an object, at which the whole weight of the object may be regarded as being concentrated, is called the center of gravity or CG. If the object is uniform, its geometric center will coincide with its CG. If it is not uniform, the CG could be at a point outside of the object. When the lift truck picks up a load, the truck and load have a new combined CG.

Stability and Center of Gravity

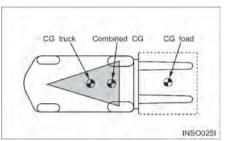


The stability of the lift truck is determined by the location of its CG; or, if the truck is loaded, the combined CG of the truck and load. The lift truck has moving parts and, therefore, has a CG that moves. The CG moves forward or backward as the mast is tilted forward or backward. The CG moves up or down as the mast moves up or down. The CG and, therefore, the stability of the loaded lift truck, is affected by a number of factors such as:

- the size, weight, shape and position of the load
- the height to which the load is lifted
- the amount of forward or backward tilt
- tire pressure
- dynamic forces created when the lift truck is accelerated, braked or turned
- condition and grade of surfaces on which the lift truck is operated

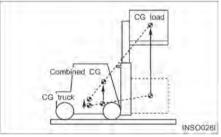

These same factors are also important for unloaded lift trucks. They tip over sideways easier than a loaded lift truck carrying its load in the lowered position.

Lift Truck Stability Base

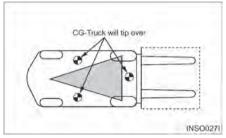


For the lift truck to be stable (not tip over forward or to the side), the CG must stay within the area of the lift truck stability base - a triangular area between the front wheels and the pivot of the steer wheels. If the CG moves forward of the front axle, the lift truck will tip forward. If the CG moves outside of the line on either side of the stability base, the lift truck will tip to the side.

🛝 WARNING

Dynamic forces (braking, acceleration, turning) also affect stability and can produce tipover even when the CG is within the stability triangle.

Capacity Load (Weight and Load Center)

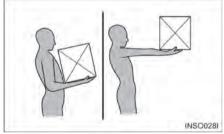

The capacity load of the lift truck is shown on the capacity/nameplate riveted to the truck. It is determined by the weight and load center. The load center is determined by the location of the CG of the load.

The load center shown on the nameplate is the horizontal distance from the front face of the forks, or the load face of an attachment, to the CG of the load.

The location of the CG in the vertical direction is the same as the horizontal dimension.

Remember that, unless otherwise indicated, the capacity load shown on the nameplate is for a standard lift truck with standard backrest, forks and mast, and having no special-purpose attachment. In addition, the capacity load assumes that the load center is no further from the top of the forks than it is from the face of the backrest. If these conditions do not exist, the operator may have to reduce the safe operating load because the truck stability may be reduced. The lift truck should not be operated if its capacity/nameplate does not indicate capacity load.

NOTE: If the load is not uniform, the heaviest portion should be placed closer to the backrest and centered on the forks.

NOTICE

- Capacity/Nameplates originally attached to forklifts sold by DOOSAN shall not be removed, altered or replaced without DOOSAN's approval.
- DOOSAN assumes no responsibility for lift trucks placed in service without a valid DOOSAN Nameplate.
- **3.** If necessary to change your specification, contact your DOOSAN lift truck dealer.

Safety Rules




Only properly trained and authorized personnel should operate forklift trucks. Wear a hard hat and safety shoes when operating a lift truck. Do not wear loose clothing.



Inspect and check the condition of your forklift truck using the operator's check list before starting work. Immediately report to your supervisor any obvious defects or required repairs.



Do not operate your truck in unauthorized areas. Know your forklift truck and think safety. Do not compromise safety. Follow all safety rules and read all warning signs.

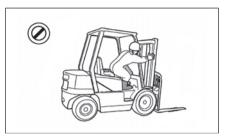

Do not operate a lift truck unless you are in the operator's seat. Keep hands and feet inside the operator's compartment. Do not put any part of the body outside of the operator's compartment. Never put any part of body into the mast structure or between the mast and the truck




Do not start, stop, turn or change direction suddenly or at high speed. Sudden movement can cause the lift truck to tip over. Slow the speed of your truck and use the horn near corners, exits, entrances, and near people.

In case of a truck with the steering knob, Do not operate the steering knob suddenly, to prevent accident caused by quick turning.



Never operate a lift truck with wet hands or shoes. Never hold any controls with grease on your hands. Your hands or feet will slide off of the controls and cause an accident.

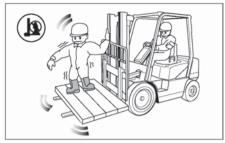

Do not raise anyone on the forks of your lift truck. Do not let other people ride on the truck. Lift trucks are designed to carry loads, not people.



Do not operate your truck without the load backrest extension and overhead guard. Keep the load against the backrest with the mast tilted backward.



Do not lift or move loads that are not safe. Do not pick up an off center load. Such a load increases the possibility of a tipover to the side. Make sure loads are correctly stacked and positioned across both forks. Always use the proper size pallet. Position the forks as wide as possible under the load. Position loads evenly on the forks for proper balance. Do not lift a load with one fork.



Do not overload. Always handle loads within the rated capacity shown on the capacity plate.

Do not add extra counterweight to the truck.

An overload can cause the truck to roll over and cause injury to personnel and damage to the lift truck.




Do not drive on soft ground.

Observe all signs, especially those on maximum permitted floor loadings, elevator capacities and clearance heights.

Handle loads carefully and check them closely for stability and balance.




Do not drive on slippery surfaces. Sand, gravel, ice or mud can cause a tipover. If unavoidable, slow down.

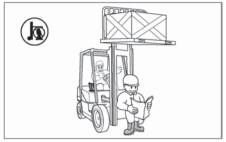

Do not permit anyone to stand or walk under the load or lifting mechanism. The load can fall and cause injury or death to anyone standing below.



Look out for overhead obstructions when raising or stacking loads. Do not travel with a raised load. Do not travel with the mast raised. The lift truck can roll over and cause injury or death to you or other personnel.

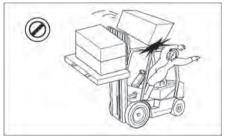

Do not move loose loads that are higher than the load backrest.

Be alert for falling loads when stacking.

Travel with the load tilted back and the forks as low as possible.


This will increase stability to the truck and load and permit better visibility for you.



Do not elevate the load with the mast tilted forward. Do not tilt the elevated loads forwards. This will cause the lift truck to tip over forward.




Do not jump off if your truck starts to tip over. Stay in your seat to survive.

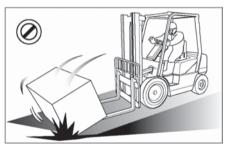

Go up ramps in forward direction and down ramps in reverse direction when moving loads.

Never elevate a load with the ${\rm \bar{f}orklift}$ truck on an incline. Go straight off and straight down. Use an assistant when going up or down a ramp with a bulky load.

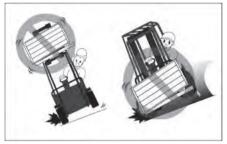

Do not stack or turn on ramps.

Do not attempt to pick-up or deposit a load unless the lift truck is level. Do not turn on or drive across an incline.



Do not go over rough terrain. If unavoidable, slow down. Cross railroad tracks slowly and diagonally whenever possible. A railroad crossing can give a loaded forklift truck a real jolt. For smoother crossing, cross the railroad diagonally so one wheel crosses at a time.




Avoid running over loose objects.

Look in the direction of travel. Look out for other persons or obstructions in your path of travel.

An operator must be in full control of his lift truck at all times.



Do not drive in forward direction when loads restrict your visibility. Operate your lift truck in reverse to improve visibility except when moving up a ramp.

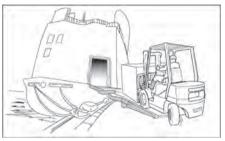

Be careful when operating a lift truck near the edge of a loading dock or ramp. Maintain a safe distance from the edge of docks, ramps and platforms. Always watch tail swing.


The truck can fall over the edge and cause injury or death.



Do not operate on bridge plates unless they can support the weight of the truck and load.

Make sure that they are correctly positioned.

Put blocks on the vehicle you enter to keep it from moving.

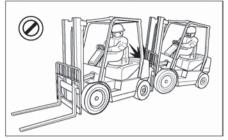

Do not operate your truck close to another truck. Always keep a safe distance from other trucks and make sure there is enough distance to stop safely. Never overtake other vehicles.



Do not use your lift truck to push or tow another truck. Do not let another push or tow your truck. If a truck will not move, call a service technician.




Forklift trucks may only be refueled at specially reserved locations. Switch off the engine when refueling. Smoking and handling of naked flames during refueling are strictly prohibited. This prohibition also applies during the changing of the LPG (liquefied propane gas) tank. Mop up spilt fuel and do not forget to close the fuel tank before restarting the engine.




Park your lift truck in authorized areas only. Fully lower the forks to the floor, put direction lever in NEUTRAL position, engage the parking brake, and turn the key to the OFF position. Remove the key and put blocks behind the wheels to prevent the truck from rolling. Shut off your forklift truck when leaving it unattended.

Check the condition of your forklift truck after the day's work.

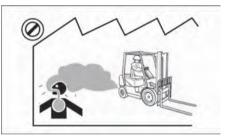


Exhaust from all internal combustion engines contains carbon monoxide, a colorless, odorless, tasteless, poisonous gas. Exposure to carbon monoxide can cause serious injury or health problems, including death, and avoid unnecessary idling of the engine. If nausea, dizziness or headaches are experienced stop the truck and seek fresh air.

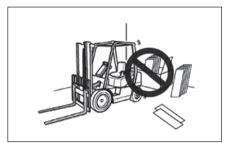

Do not operate forklifts near flammable or combustible materials.

To avoid the discoloration, deformation or combustion of materials (such as lumber, veneer board, paper products and other similar items), always park at least 30 cm (12 inches) away from them.

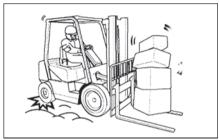

Forklift trucks are not cars. They often have small tires, no suspension, and are very heavy.


The forklift's center of gravity will also change when carrying loads.

Avoid uneven bumps, pot holes and other hazards whenever possible.




Carrying a load suspended on a chain or a cable may unbalance a truck.

Take extra care around pedestrians with a suspended load as it may sway or even strike them.

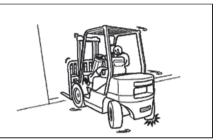


An unloaded forklift may be easier to tip over than a loaded truck.

When traveling without a load, the risk of lateral overturn is greater.

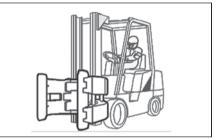

There are many special attachments available to replace the forks on a lift truck.

It is highly recommended that all the operators receive safety and special trainings.

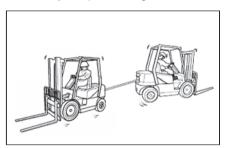


The counterweight draw bar should not be used for towing the forklift or for towing another forklift. Towing is only advised in emergencies, by trained operators and at low speed, no faster than 2 km/h, to a convenient location for repair.

How to Survive in a Tipover

🛦 WARNING

In the event of a tipover, the risk of serious injury or death will be reduced if the operator is using the operator restraint system and follows the instructions provided.

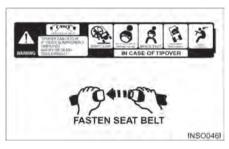

Always use operator restraint system.



DON'T jump.



Hold on tight to the handle.



Spread your legs wide and secure the feet to the inner sides of the compartment.



Lean away from the direction of fall.



Lean forward.

Declaration of Conformity

We,

Manufacturer

Doosan Corporation Industrial Vehicle BG. 468, Injung-ro, Dong-gu, Incheon, Korea 22503

Authorized Representative, Compiler of Technical File According to 2006/42/EC and Keeper of Technical File According to 2000/14/EC Doosan Industrial Vehicle Europe N.V., Mr. Chankyo Chung, Europark-Noord 36 A, 9100 Sint-Niklaas, Belgium

herewith declare

that the following equipment conforms with the appropriate requirements of the Directives 2006/42/EC (Machinery Directive), 2000/14/EC as amended by 2005/88/EC (Noise Emission in the environment by equipment for use outdoors), (EU) 2016/1628 (Exhaust Gas Regulation) and 2014/30/EU (EMC Directive) based on its design and type, as brought into circulation by us.

Description of the equipment:

Type : Lift Truck, Combustion-engine driven, Counterbalanced

Function : Lifting and Moving materials

Family : D40S-9 Series

D45SC-9 Series

Model Name : D35S-9, D40S-9, D45S-9, D50C-9, D55C-9

D40SC-9, D45SC-9, D50SC-9, D55SC-9

Conformity assessment procedure According to 2000/14/EC : Annex V

Applicable EC Directives : 2006/42/EC, 2014/30/EU, 2000/14/EC, (EU) 2016/1628 Applicable harmonized standard : EN 16307-1;2013+A1;2015, EN ISO 3691-1;2015 EN 1175-2;1998+A1;2010, EN 1175-3;1998+A1;2010 EN 12895;2015+A1:2019


* Remark


- Tier 4 Final – Diesel : D35S-9, D40S-9, D45S-9, D50C-9, D55C-9, D55C-9, D40SC-9, D45SC-9, D50SC-9, D55SC-9 (Doosan DM03P engine)

Specifications

CHAR/	ACTERISTICS				
1.2	Model designation			D35S-9	D40S-9
1.3	Drive: Diesel, Gasoline, LP			Diesel	Diesel
1.4	Operator type: Hand, Pedestrian, Standing, Se Order-picker		Seated	Seated	
1.5	Load Capacity	Q	kg (lb)	3,500 (8,000)	4,000 (9,000)
1.6	Load center	С	mm (in)	600 (24)	600 (24)
1.8	Load Distance: Center of Driveaxle to fork	х	mm (in)	560 (22)	560 (22)
1.9	Wheelbase	v	mm (in)	2,015 (79.5)	2,015 (79.5)
WEIGH	т	,			
32	Service weight		kg (lb)	5,795 (12,775)	6,100 (13,450)
33	Axle Loading, Laden Front/Rear		kg (lb)	8,390 / 905 (18,495 / 1,995)	9,115 / 985 (20,095 / 2,170)
34	Axle Loading, Unladen Front/Rear		kg (lb)	2,255 / 3,540 (4,970 / 7,805)	2,425 / 3,675 (5,345 / 8,105)
TYRES	5				
3.1	Tyres: pneumatic (P), superelastic (SE), cushic	on (C)		Р	Р
3.2	Tyre size, Front			8.25 x 15-14PR/ 7.50 x 16-12PR	300 x 15-18PR/ 7.50 x 16-12PR
3.3	Tyre size, Rear			7.00 x 12-12PR	7.00 x 12-12PR
3.5	Wheels, number Front/Rear (x = driven wheels)		x 2/2	x 2/2
3.6	Tread, Front	b11	mm (in)	1,140 / 1,290 (44.9 / 50.8)	1,155 / 1,290 (45.5 / 50.8)
3.7	Tread, Rear	b12	mm (in)	1,115 (43.9)	1,115 (43.9)
DIMEN	SIONS				
4.1	Tilt of Mast/Fork carriage Forward/Backward	α/β	٥	8/10	8 / 10
4.2	Height, Mast lowered	h1	mm (in)	2,225 (87.6)	2,230 (87.8)
4.3	Free Lift	h ₂	mm (in)	160 (6.3)	160 (6.3)
4.4	Lift	h3	mm (in)	3,000 (118.1)	3,000 (118.1)
4.5	Height, Mast Extended	h4	mm (in)	4,265 (167.9)	4,270 (168.1)
4.7	Height of Overhead Guard (Cabin)	h6	mm (in)	2,225 (87.6)	2,230 (87.8)
4.8	Height of Seat	h ₇	mm (in)	1,220 (48.0)	1,225 (48.2)
4.19	Overall Length	l1	mm (in)	4,160 (163.8)	4,200 (165.4)
4.20	Length to Forkface	l ₂	mm (in)	2,99 5(116.3)	3,000 (118.1)
4.21	Overall Width	b1/b2	mm (in)	1,370 (53.9)	1,455 (57.3)
4.22	Fork Dimensions	s/e/l	mm (in)	50 x 150 x 1,050 (2.0 x 5.9 x 41.3)	50 x 150 x 1,050 (2.0 x 5.9 x 41.3)
4.23	Fork carriage ISO 2328, class/type A,B			Ш	Ш
4.24	Fork carriage width	b ₃	mm (in)	1,250 (49.2)	1,250 (49.2)
4.31	Ground Clearance, laden, below mast	m1	mm (in)	150 (5.9)	160 (6.3)
4.32	Ground Clearance, center of wheelbase	m ₂	mm (in)	205 (8.1)	205 (8.1)
4.34.1	Aisle width for pallets 1,000 x 1,200 crossways	A _{st}	mm (in)	4,515 (177.8)	4,560 (179.5)
4.34.2	Aisle width for pallets 800 x 1,200 crossways	A _{st}	mm (in)	4,715 (185.6)	4,760 (187.4)
4.35	Turning Radius	Wa	mm (in)	2,755 (108.5)	2,800 (110.2)
4.36	Internal Turning Radius	b13	mm (in)	805 (31.7)	805 (31.7)
PERFC	RMANCE DATA				
5.1	Travel Speed, Laden/Unladen		km/h (mph)	24/26 (15/16)	24/26 (15 / 16)
5.2	Lift Speed, Laden/Unladen		m/s (fpm)	0.56/0.60 (109/117)	0.55/0.60 (107/117)
5.3	Lowering Speed, Laden/Unladen		m/s (fpm)	0.45/0.50 (88.5 / 98.4)	0.45/0.50 (88.5 / 98.4)
5.5	Drawbar pull, Laden/Unladen (@ 1.6 km/h)		N (lb)	34,075 (7,660)	33,540/- (7,540)
5.6	Max. Drawbar pull, Laden/Unladen		N (lb)	37,498 (8,430)	36,894/- (8,295)
5.7	Gradeability, Laden/Unladen (@ 1.6 km/h)		%	38.5	34.5
5.8	Max. Gradeability, Laden/Unladen		%	43	38.5
5.10	Service Brake			Foot/Hyd	Foot/Hyd

COMB	COMBUSTION ENGINE					
7.1	Engine Manufacturer/type		DI	DI		
7.2	Engine power according to DIN ISO1585	kW (hp)	55.4 (74)	55.4 (74)		
7.3	Rated Speed	min ⁻¹	2200 ~ 2300	2200 ~ 2300		
7.3.1	Torque at 1/min	Nm (ft·lbs)	360 @ 1,400 (265.4)	360 @ 1,400 (265.4)		
7.4	Number of Cylinders/Displacement	cc (cm ³)	4 / 3409	4 / 3409		
7.10	Battery Voltage/normal capacity	V/Ah	12 / 100	12 / 100		
ADDITION DATA						
10.1	Operating pressure for attachments	Bar (psi)	160 (2,320.5)	160 (2,320.5)		
10.2	Oil volume for attachments	l/min (gpm)	110 (29.1)	110 (29.1)		
10.4	Fuel Tank Capacity	l (gal)	105 (27.7)	105 (27.7)		
10.7	Sound level at th driver's ear according to EN 12 053	dB (A)	79	79		




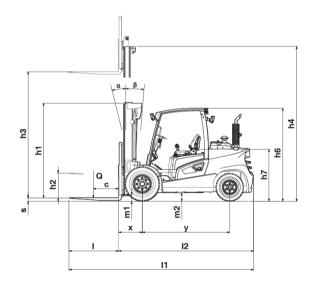


Specifications

CHAR	ACTERISTICS					
1.2	Model designation			D45S-9	D50C-9	D55C-9
1.3	Drive: Diesel, Gasoline, LP			Diesel	Diesel	Diesel
1.4	Operator type: Hand, Pedestrian, Standing, Se	eated,		Seated	Seated	Seated
	Order-picker	1				
1.5	Load Capacity	Q	kg (lb)	4,500 (10,000)	5,000 (11.000)	5,500 (12,000)
1.6	Load center	С	mm (in)	600 (24)	600 (24)	600 (24)
1.8	Load Distance: Center of Driveaxle to fork	х	mm (in)	560 (22)	570(22.5)	570 (22.5)
1.9	Wheelbase	у	mm (in)	2,115 (83.3)	2,115 (83.3)	2,115 (83.3)
WEIGH						
32	Service weight		kg (lb)	6,530 (14,395)	6,930 (15,280)	7,300 (16,095)
33	Axle Loading, Laden Front/Rear		kg (lb)	9,960 / 1,070 (21,960 / 2,360)	10,770 / 1,160 (23,745 / 2,555)	11,565 / 1,235 (25,495 / 2,720)
34	Axle Loading, Unladen Front/Rear		kg (lb)	2,630 / 3,900 (5,800 / 8,595)	2,655 / 4,275 (5,855 / 9,524)	2,705 / 4,595 (5,965 / 10,130)
TYRES	3			(0,000) 0,000)	(0,000) 0,000 0	(0,000) (0,000)
3.1	Tyres: pneumatic (P), superelastic (SE), cushic	on (C)		Р	Р	Р
3.2		1-1		300 x 15-18PR/	300 x 15-18PR/	300 x 15-18PR/
	Tyre size, Front			7.50 x 16-12PR	7.50 x 16-12PR	7.50 x 16-12PR
3.3	Tyre size, Rear			7.00 x 12-12PR	7.00 x 12-14PR	7.00 x 12-14PR
3.5	Wheels, number Front/Rear (x = driven wheels)		x 2/2	x 2/2	x 2/2
3.6	Tread, Front	b11	mm (in)	1,155 / 1,290 (45.5 / 50.8)	1,155 / 1,290 (45.5 / 50.8)	1,155 / 1,290 (45.5 / 50.8)
3.7	Tread, Rear	b ₁₂	mm (in)	1,115 (43.9)	1,115 (43.9)	1,115 (43.9)
DIMEN	ISIONS					
4.1	Tilt of Mast/Fork carriage Forward/Backward	α/β	٥	8/10	8 / 10	8/10
4.2	Height, Mast lowered	h1	mm (in)	2,230 (87.8)	2,230(87.8)	2,230 (87.8)
4.3	Free Lift	h2	mm (in)	160 (6.3)	170 (6.7)	170 (6.7)
4.4	Lift	h₃	mm (in)	3,000 (118.1)	3,050 (120)	3,050 (120)
4.5	Height, Mast Extended	h4	mm (in)	4,420 (174.0)	4,470 (176.0)	4,470 (176.0)
4.7	Height of Overhead Guard (Cabin)	h ₆	mm (in)	2,230 (87.8)	2,230 (87.8)	2,230 (87.8)
4.8	Height of Seat	h7	mm (in)	1,225 (48.2)	1,225 (48.2)	1,225 (48.2)
4.19	Overall Length	h	mm (in)	4,480 (176.4)	4,530 (178.4)	4,560 (179.5)
4.20	Length to Forkface	2	mm (in)	3,260 (128.4)	3,300 (129.9)	3,340 (131.5)
4.21	Overall Width	b1/b2	mm (in)	1,455 (57.3)	1,455 (57.3)	1,455 (57.3)
4.22	Fork Dimensions	s/e/l	mm (in)	50 x 150 x 1,200 (2.0 x 5.9 x 47.2)	50 x 150 x 1,200 (2.0 x 5.9 x 47.2)	50 x 150 x 1,200 (2.0 x 5.9 x 47.2)
4.23	Fork carriage ISO 2328, class/type A,B			IV	IV	IV
4.24	Fork carriage width	b ₃	mm (in)	1,330 (52.4)	1,330 (52.4)	1,330 (52.4)
4.31	Ground Clearance, laden, below mast	m1	mm (in)	160 (6.3)	160 (6.3)	160 (6.3)
4.32	Ground Clearance, center of wheelbase	m ₂	mm (in)	205 (8.1)	205 (8.1)	205 (8.1)
4.34.1	Aisle width for pallets 1,000 x 1,200 crossways	A _{st}	mm (in)	4,610 (181.5)	4,640 (182.7)	4,670 (183.9)
4.34.2	Aisle width for pallets 800 x 1,200 crossways	A _{st}	mm (in)	4,810 (189.4)	4,840 (190.6)	4,870 (191.7)
4.35	Turning Radius	Wa	mm (in)	2,850 (112.2)	2,870 (113.0)	2,900 (114.2)
4.36	Internal Turning Radius	b ₁₃	mm (in)	820 (32.3)	820 (32.3)	820 (32.3)
PERFC	DRMANCE DATA	•	/		· · ·	
5.1	Travel Speed, Laden/Unladen		km/h (mph)	24 / 26 (15 / 16)	24 / 26 (15 / 16)	24 / 26 (15 / 16)
5.2	Lift Speed, Laden/Unladen		m/s (fpm)	0.54 / 0.60 (105 / 117)	0.53 / 0.60 (103 / 117)	0.52 / 0.60 (101 / 117)
5.3	Lowering Speed, Laden/Unladen		m/s (fpm)	0.45 / 0.50 (88.5 / 98.4)	0.45 / 0.50 (88.5 / 98.4)	0.45 / 0.50 (88.5 / 98.4)
5.5	Drawbar pull, Laden/Unladen (@ 1.6 km/h)		N (lb)	33,564 (7,545 /-)	33,390 (7,505)	33,170 (7,455)
5.6	Max. Drawbar pull, Laden/Unladen		N (lb)	36,970 (8,310/-)	36,816 (8,275)	36,595 (8,225)
			%	31.5	28.5	26
5.7	Gradeability, Laden/Unladen (@ 1.6 km/n)					
5.7 5.8	Gradeability, Laden/Unladen (@ 1.6 km/h) Max. Gradeability, Laden/Unladen		%	31.5	31.5	29

COMB	USTION ENGINE				
7.1	Engine Manufacturer/type		DI	DI	DI
7.2	Engine power according to DIN ISO1585	kW (hp)	55.4 (74)	55.4 (74)	55.4 (74)
7.3	Rated Speed	min-1	2200 ~ 2300	2200 ~ 2300	2200 ~ 2300
7.3.1	Torque at 1/min	Nm (ft·lbs)	360 @ 1,400 (265.4)	360 @ 1,400 (265.4)	360 @ 1,400 (265.4)
7.4	Number of Cylinders/Displacement	cc (cm ³)	4/3409	4/3409	4/3409
7.10	Battery Voltage/normal capacity	V/Ah	12/100	12/100	12/100
ADDIT	ION DATA				
10.1	Operating pressure for attachments	Bar (psi)	160 (2,320.5)	160 (2,320.5)	160 (2,320.5)
10.2	Oil volume for attachments	l/min (gpm)	110 (29.1)	110 (29.1)	110 (29.1)
10.4	Fuel Tank Capacity	l (gal)	105 (27.7)	119 (31.4)	119 (31.4)
10.7	Sound level at th driver's ear according to EN 12 053	dB (A)	79	79	79




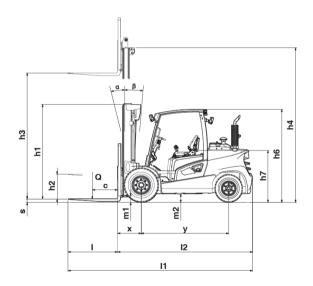


Specifications

1.2	Model designation			D40SC-9	D45SC-9
1.3	Drive: Diesel, Gasoline, LP			Diesel	Diesel
1.4	Operator type: Hand, Pedestrian, Standing, Se Order-picker	ated,		Seated	Seated
1.5	Load Capacity	Q	kg (lb)	4,500 (10,000)	5,500 (12,000)
1.6	Load center	C	mm (in)	500 (19.7)	500 (19.7)
1.8	Load Distance: Center of Driveaxle to fork	x	mm (in)	560 (22)	570 (22.5)
1.9	Wheelbase	у	mm (in)	2,015(79.5)	2,115 (83.3)
WEIGH	НТ				
2.1	Service weight		kg (lb)	5,795 (12,775)	6,100 (13,450)
2.2	Axle Loading, Laden Front / Rear		kg (lb)	8,390 / 905 (18,495 / 1,995)	9,115 / 985 (20,095 / 2,170)
2.3	Axle Loading, Unladen Front / Rear		kg (lb)	2,255 / 3,540 (4,970 / 7,805)	2,425 / 3,675 (5,345 / 8,105)
TYRE	5			(4,97077,805)	(3,3437 8,103)
3.1	Tyres: pneumatic (P), superelastic (SE), cushion (C)		Р	Р
3.2	Tyre size, Front			8.25 x 15-14PR/	300 x 15-18PR/
-				7.50 x 16-12PR	7.50 x 16-12PR
3.3	Tyre size, Rear			7.00 x 12-12PR	7.00 x 12-12PR
3.5	Wheels, number Front / Rear (x = driven wheel	<u> </u>		x 2/2	x 2/2
3.6	Tread, Front	b11	mm (in)	1,140 / 1,290 (44.9 / 50.8)	1,155 / 1,290 (45.5 / 50.8)
3.7	Tread, Rear	b ₁₂	mm (in)	1,115 (43.9)	1,115 (43.9)
		(0	٥		
4.1	Tilt of Mast /Fork carriage Forward/Backward	α/β		8 / 10	8 / 10
4.2	Height, Mast lowered	h1	mm (in)	2,225 (87.6)	2,230 (87.8)
4.3	Free Lift	h ₂	mm (in)	160 (6.3)	160 (6.3)
4.4	Lift	h₃	mm (in)	3,000 (118.1)	3,000 (118.1)
4.5	Height, Mast Extended	h4	mm (in)	4,265 (167.9)	4,270 (168.1)
4.7	Height of Overhead Guard (Cabin)	h ₆	mm (in)	2,225 (87.6)	2,230 (87.8)
4.8	Height of Seat	h ₇	mm (in)	1,220 (48.0)	1,225 (48.2)
4.19	Overall Length	11	mm (in)	4,160 (163.8)	4,200 (165.4)
4.20	Length to Forkface Overall Width	l2 b1/b2	mm (in)	2,995 (116.3)	3,000 (118.)
4.21		D ₁ /D ₂	mm (in)	1,370 (53.9) 50 x 150 x 1.050	1,455 (57.3) 50 x 150 x 1,050
4.22	Fork Dimensions	s/e/l	mm (in)	(2.0 x 5.9 x 41.3)	(2.0 x 5.9 x 41.3)
4.23	Fork carriage ISO 2328, class / type A,B			Ш	Ш
4.24	Fork carriage width	b₃	mm (in)	1,250 (49.2)	1,250 (49.2)
4.31	Ground Clearance, laden, below mast	m1	mm (in)	150 (5.9)	160 (6.3)
4.32	Ground Clearance, center of wheelbase	m ₂	mm (in)	205 (8.1)	205 (8.1)
4.34.1	Aisle width for pallets 1,000 x 1,200 crossways	A _{st}	mm (in)	4,515 (177.8)	4,560 (179.5)
4.34.2	Aisle width for pallets 800 x 1,200 crossways	Ast	mm (in)	4,715 (185.6)	4,760 (187.4)
4.35	Turning Radius	Wa	mm (in)	2,755 (108.5)	2,800 (110.2)
4.36	Internal Turning Radius	b ₁₃	mm (in)	805 (31.7)	805 (31.7)
PERFO	ORMANCE DATA		-		
5.1	Travel Speed, Laden / Unladen		km/h (mph)	24 / 26 (15 / 16)	24 / 26 (15 / 16)
5.2	Lift Speed, Laden / Unladen		m/s (fpm)	0.56 / 0.60 (109/117)	0.55 / 0.60 (107 / 117)
5.3	Lowering Speed, Laden / Unladen		m/s (fpm)	0.45 / 0.50 (88.5 / 98.4)	0.45 / 0.50 (88.5 / 98.4)
5.5	Drawbar pull, Laden / Unladen (@ 1.6 km/h)		n (lb)	34,075 (7,660)	33,540 (7,540)
5.6	Max. Drawbar pull, Laden / Unladen		v (lb)	37,498 (8,430)	36,894 (8,295)
5.7	Gradeability, Laden / Unladen (@ 1.6 km/h)		%	38.5	34.5
5.8	Max. Gradeability, Laden / Unladen		%	43	38.5
5.10	Service Brake			Foot / Hyd	Foot / Hyd

COMB	USTION ENGINE			
7.1	Engine Manufacturer/type		DI	DI
7.2	Engine power according to DIN ISO1585	kW (hp)	55.4 (74)	55.4 (74)
7.3	Rated Speed	min ⁻¹	2200 ~ 2300	2200 ~ 2300
7.3.1	Torque at 1/min	Nm (ft·lbs)	360 @ 1,400 (265.4)	360 @ 1,400 (265.4)
7.4	Number of Cylinders/Displacement	cc (cm ³)	4 / 3409	4 / 3409
7.10	Battery Voltage/normal capacity	V/Ah	12 / 100	12 / 100
ADDIT	ION DATA			
10.1	Operating pressure for attachments	Bar (psi)	160 (2,320.5)	160 (2,320.5)
10.2	Oil volume for attachments	l/min (gpm)	110 (29.1)	110 (29.1)
10.4	Fuel Tank Capacity	l (gal)	105 (27.7)	105 (27.7)
10.7	Sound level at th driver's ear according to EN 12 053	dB (A)	79	79




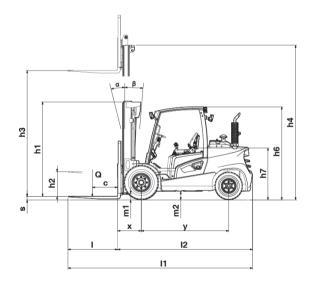


Specifications

	ACTERISTICS				
1.2	Model designation			D50SC-9	D55SC-9
1.3	Drive: Diesel, Gasoline, LP			Diesel	Diesel
1.4	Operator type: Hand, Pedestrian, Standing, Se Order-picker	ated,		Seated	Seated
1.5	Load Capacity	Q	kg (lb)	5,000 (11.000)	5,500 (12,000)
1.6	Load center	С	mm (in)	500 (19.7)	500 (19.7)
1.8	Load Distance: Center of Driveaxle to fork	х	mm (in)	560 (22)	570 (22.5)
1.9	Wheelbase	у	mm (in)	2,115 (83.3)	2,115 (83.3)
WEIGH	н				
2.1	Service weight		kg (lb)	6,530 (14,395)	6,930 (15,280)
2.2	Axle Loading, Laden Front / Rear		kg (lb)	9,960 / 1,070 (21,960 / 2,360)	10,770 / 1,160 (23,745 / 2,555)
2.3	Axle Loading, Unladen Front / Rear		kg (lb)	2,630 / 3,900	2,655 / 4,275
-	0.		Kġ (ID)	(5,800 / 8,595)	(5,855 / 9,524)
TYRES				1	
3.1	Tyres: pneumatic (P), superelastic (SE), cushion (C	;)		Р	Р
3.2	Tyre size, Front			300 x 15-18PR /7.50 x 16-12PR	300 x 15-18PR/ 7.50 x 16-12PR
3.3	Tyre size, Rear			7.00 x 12-12PR	7.00 x 12-14PR
3.5	Wheels, number Front / Rear (x = driven wheel	s)		x 2/2	x 2/2
3.6	Tread, Front	b ₁₁	mm (in)	1,155 / 1,290 (45.5 / 50.8)	1,155 / 1,290 (45.5 / 50.8
3.7	Tread, Rear	b ₁₂	mm (in)	1,115 (43.9)	1,115 (43.9)
PERFO	DRMANCE			·	
4.1	Tilt of Mast /Fork carriage Forward/Backward	α/β	٥	8 / 10	8 / 10
4.2	Height, Mast lowered	h1	mm (in)	2,230 (87.8)	2,230 (87.8)
4.3	Free Lift	h2	mm (in)	160 (6.3)	170 (6.7)
4.4	Lift	h3	mm (in)	3,000 (118.1)	3,050 (120)
4.5	Height, Mast Extended	h4	mm (in)	4,420 (174.0)	4,470 (176.0)
4.7	Height of Overhead Guard (Cabin)	h6	mm (in)	2,230 (87.8)	2,230 (87.8)
4.8	Height of Seat	h ₇	mm (in)	1,225 (48.2)	1,225(48.2)
4.19	Overall Length	lı	mm (in)	4,480 (176.4)	4,530 (178.4)
4.20	Length to Forkface	I ₂	mm (in)	3,260 (128.4)	3,300 (129.9)
4.21	Overall Width	b ₁ /b ₂	mm (in)	1,455 (57.3)	1,455 (57.3)
4.22	Fork Dimensions	s/e/l	mm (in)	50 x 150 x 1,200 (2.0 x 5.9 x 47.2)	50 x 150 x 1,200 (2.0 x 5.9 x 47.2)
4.23	Fork carriage ISO 2328, class / type A,B			IV	IV
4.24	Fork carriage width	b ₃	mm (in)	1,330 (52.4)	1,330 (52.4)
4.31	Ground Clearance, laden, below mast	m1	mm (in)	160 (6.3)	160 (6.3)
4.32	Ground Clearance, center of wheelbase	m ₂	mm (in)	205 (8.1)	205 (8.1)
4.34.1	Aisle width for pallets 1,000 x 1,200 crossways	Ast	mm (in)	4,610 (181.5)	4,640 (182.7)
4.34.2	Aisle width for pallets 800 x 1,200 crossways	Ast	mm (in)	4,810 (189.4)	4,840 (190.6)
4.35	Turning Radius	Wa	mm (in)	2,850 (112.2)	2,870 (113.0)
4.36	Internal Turning Radius	b ₁₃	mm (in)	820 (32.3)	820 (32.3)
PERFC	OR MANCE DATA				
5.1	Travel Speed, Laden / Unladen		km/h (mph)	24 / 26 (15 / 16)	24 / 26 (15 / 16)
5.2	Lift Speed, Laden / Unladen		m/s (fpm)	0.54 / 0.60 (105 / 117)	0.53 / 0.60 (103 / 117)
5.3	Lowering Speed, Laden / Unladen		m/s (fpm)	0.45 / 0.50 (88.5 / 98.4)	0.45 / 0.50 (88.5 / 98.4)
5.5	Drawbar pull, Laden / Unladen (@ 1.6 km/h)		n (lb)	33,564 (7,545)	33,390 (7,505)
5.6	Max. Drawbar pull, Laden / Unladen		v (lb)	36,970 (8,310)	36,816 (8,275)
5.7	Gradeability, Laden / Unladen (@ 1.6 km/h)		%	31.5	28.5
5.8	Max. Gradeability, Laden / Unladen		%	35	31.5
5.10	Service Brake			Foot / Hyd	Foot / Hyd

COMB	USTION ENGINE			
7.1	Engine Manufacturer/type		DI	DI
7.2	Engine power according to DIN ISO1585	kW (hp)	55.4 (74)	55.4 (74)
7.3	Rated Speed	min-1	2200 ~ 2300	2200~2300
7.3.1	Torque at 1/min	Nm (ft·lbs)	360 @ 1,400(265.4)	360 @ 1,400 (265.4)
7.4	Number of Cylinders/Displacement	cc (cm ³)	4 / 3409	4 / 3409
7.10	Battery Voltage/normal capacity	V/Ah	12 / 100	12 / 100
ADDIT	ION DATA			
10.1	Operating pressure for attachments	Bar (psi)	160 (2,320.5)	160 (2,320.5)
10.2	Oil volume for attachments	l/min (gpm)	110 (29.1)	110 (29.1)
10.4	Fuel Tank Capacity	l (gal)	119 (31.4)	119 (31.4)
10.7	Sound level at th driver's ear according to EN 12 053	dB (A)	79	79



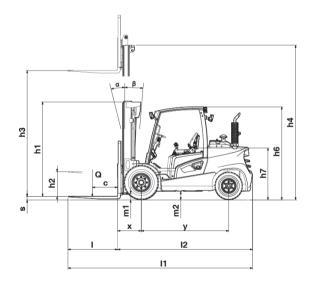

Noise and Vibration


Noise


	Noise Level [Unit : dB(A)]
Model	Sound Pressure Level at Operator's ear (Leq.)
	prEN12053
D35/40/45S-9, D50/55C-9 D40/45/50/55SC-9 (Cabin)	80.6
D35/40/45S-9, D50/55C-9 D40/45/50/55SC-9 (OVHG)	76.4


Vibration (weighted overall value)


Unit : m/sec²


Model	Measuring place		
Woder	Seat	Steering Wheel	Floor Plate
D35/40/45S-9, D50/55C-9 D40/45/50/55SC-9 (DM03V, DM03P)	0.08	1.19	0.1

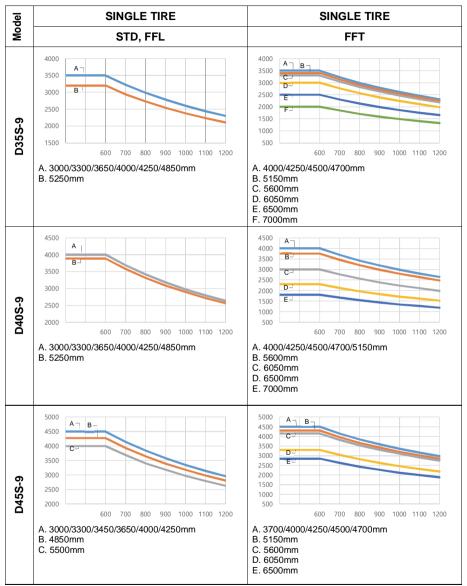


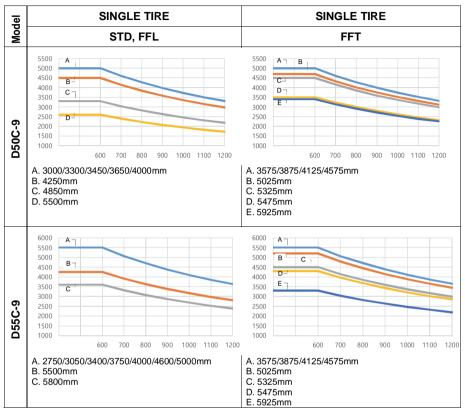


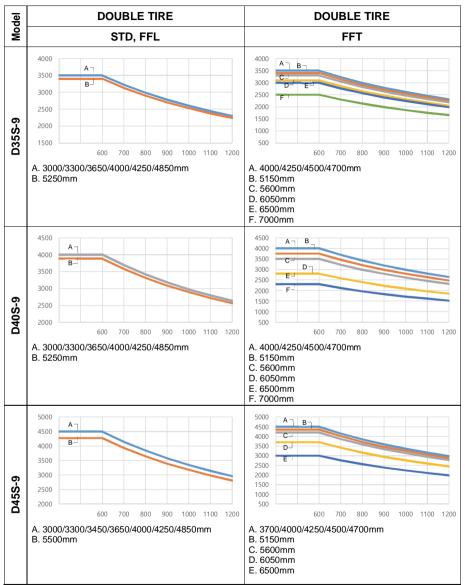


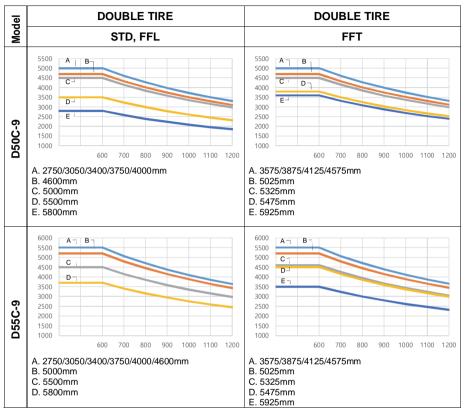


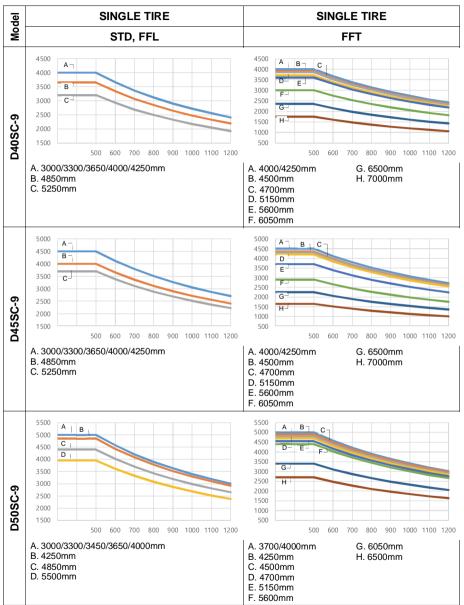


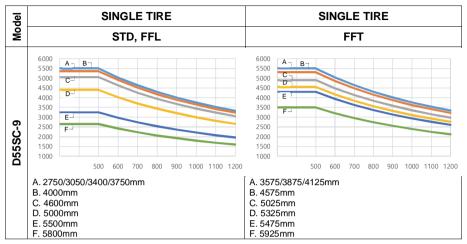


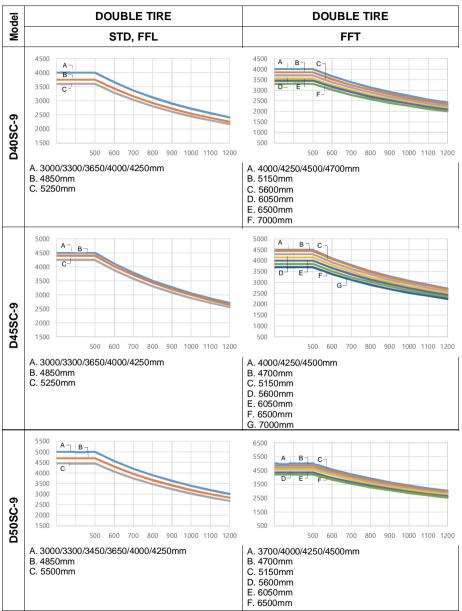


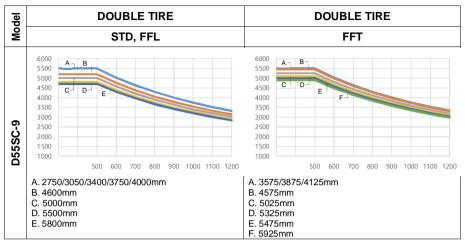


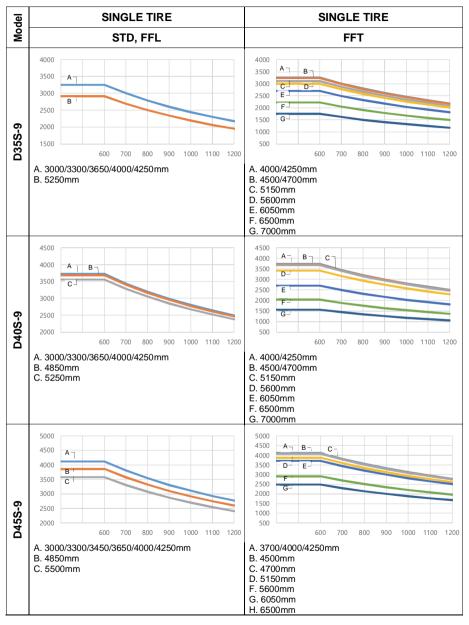


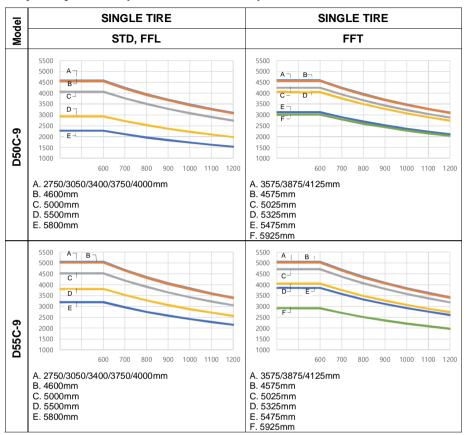


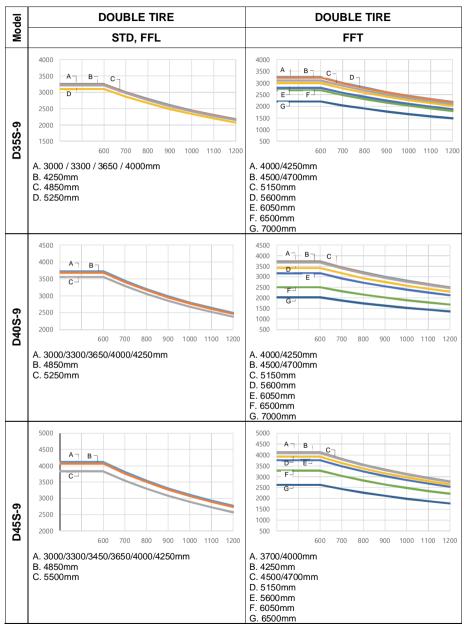


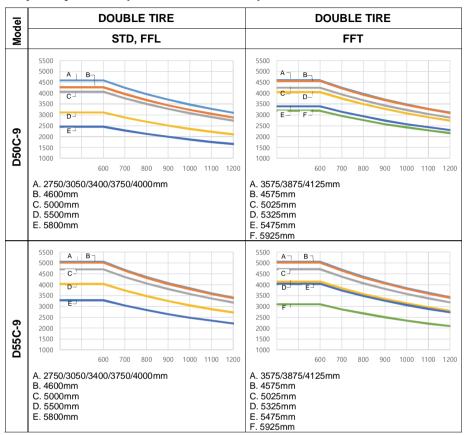

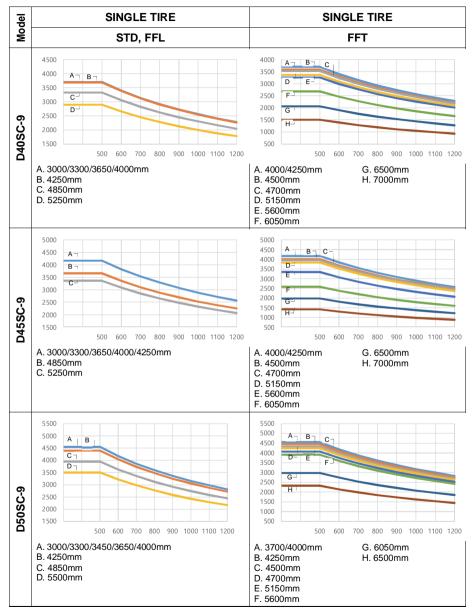

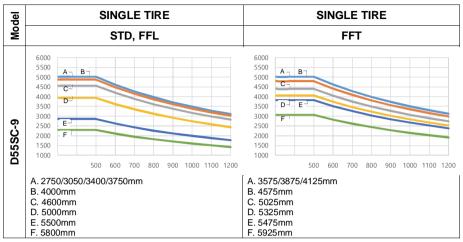

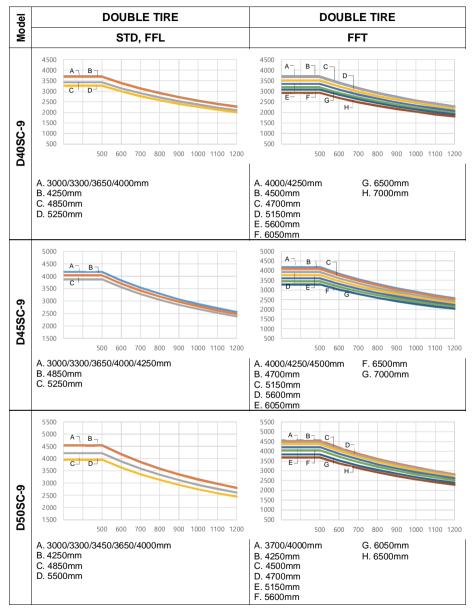

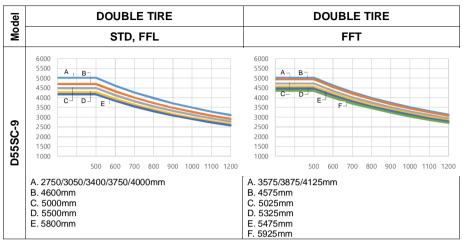

Serial Number

Serial Number Locations

For quick reference, record your lift truck's serial numbers in the spaces provided below the photographs.





Transmission Serial Number


Lift Truck Serial Number



Engine Serial Number (DM03V, DM03P)



Drive Axle Serial Number

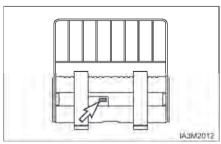

Side Shifter Serial Number (If Equipped)

Operator's Warning and Identification Plate

Familiarize yourself with the OPERATOR'S WARNING Plate, and IDENTIFICATION, LIFT CAPACITY and ATTACHMENT PLATES. Do not exceed capacity as equipped load ratings.

Operator's Warning Plate



Located on the cowl to the right side of the steering column.

Identification, Lift Capacity and Attachment Plate



Located on the front side of the FCU.

Lift Truck Capacity Rating

Do not exceed allowable lift truck working capacity load ratings.

The capacity of the lift truck is given by weight and distance to the load center. For example, a capacity of 1200kg (2640lb) at 600mm (24in) means that the lift truck can lift 1200kg (2640lb) if the load center is 600 mm (24in) from both the vertical and horizontal faces of the forks.

Before attempting to lift any load, ensure that the weight and load center combination is within the capacity of the lift truck as shown on the capacity rating plate. To determine the load center, measure the distance from the face of the carriage to the gravitational center of the load.

The rated capacity on the plate refers to the capacity of the lift truck as it left the factory. Subsequent changes of any form to the equipment or battery can alter the lift truck's rating.

The rated capacity of the lift truck applies to operating conditions where the lift truck is on level ground. The capacity of the lift truck is reduced on inclines.

Below are abbreviations that may appear on the Identification, Lift Capacity and Attachment Plate and their meanings.

Mast Abbreviations

- STD Standard Mast (single inner member, low free lift)
- FF Full Free Lift Mast (single inner member with high free lift duplex cylinder)
- FFT Triple Lift Mast (two inner members) with either low or full free lift characteristics.
- QUAD Quadruple (Quad) Mast (with three inner members)
- NOTE: When only a mast-type is listed on the identification plate, a standard carriage and forks are used.

Attachment Abbreviations (Includes Special Forks)

- SC Special Carriage-increased width, height or outreach
- SSS Shaft-type Sideshift Carriage
- HSS Hook-type Sideshift Carriage (ITA)
- CW Counterweight
- SF Special Forks
- SWS Swing Shift, Sideshift
- RAM Ram or Boom
- DBCBH Double Cube Block Handler
- HFP Hydraulic Fork Positioner
- CR Crane Arm or Crane Boom
- TH Tire Handler
- CTH Container Handler
- LPP Load Push-Pull Device
- CC Carton Clamp
- RC Roll Clamp
- LS Load Stabilizer
- PWH Pulp Wood Handler
- SS-ST Sideshift-Side Tilt Carriage

Operator's Station and Monitoring Systems

Instrument Panel

Your lift truck may not have the same indicator or warning lights as shown in the illustrations.

However, the symbols on the indicators and lights on your panel identify what those particular items are.

Also, the symbol for each of the items is identified and an explanation of their function and location is described on the following pages.



- 1. Diesel Engine Water in Fuel Filter Indicator Light
- 2. Alternator Indicator Light
- 3. Diesel Engine Start Preheat Indicator Light
- 4. Fuel Level Gauge
- 5. Engine Coolant Temperature Gauge
- 6. Transmission Oil Temperature Gauge
- 7. Engine Malfunction Indicator Light (MIL)
- 8. Seat Belt Warning Light (If Equipment)
- 9. Service Hour Meter
- 10. Parking Indicator Light
- 11. Front Floodlights
- 12. Transmission Neutral Position Light
- 13. Mast Interlock
- 14. Directional Turning Indicator Light
- 15. Brake Oil Level

- 16. ECT Warning Lamp
- 17. Engine Oil Pressure Warning Lamp
- 18. Fuel Warning Lamp
- 19. Speedometer
- 20. Odometer
- 21. Engine rpm gauge
- 22. Vehicle mode
- 23. T/M gear inform
- 24. After treatment indicator(After treatment only)
- 25. Regen guage (After treatment only)
- 26. Clock
- 27. Weight scale indicator (Optional)
- 28. Speed limit indicator
- 29. Air cleaner indicator



1. Diesel Engine Water in Fuel Filter Indicator Light - Indicates when the engine is running, there is water in the fuel filter exceeds 100cc.

The light will come ON when the ignition switch is turned to the ON position. The light should go off after the engine is started. If the light turns on with the engine running, park the lift truck and stop the engine. Drain some fuel (and any water) until clean fuel flows from the filter which approximately takes 5 to 6 seconds

2. Alternator Indicator Light - Indicates if the battery charging system is operational. The light will come on when the ignition switch is turned to the ON position.

The light should go off after the engine is started, indicating the alternator is producing sufficient voltage to charge the battery. If the light turns on with the engine running, check the alternator charging system for a malfunction.



3. Diesel Engine Start Preheat Indicator Light - The light will come ON when the key is turned to the ON position from the OFF

position. This indicates that the glow plugs are preheating the pre-combustion chambers for easier starting.

The amount of time needed to preheat the precombustion chambers is approximately seven seconds, depending on the surrounding air temperature. When the light goes OFF the maximum pre-combustion chamber temperature has been reached and the key can be turned to the START position to start the engine.



4. Fuel Level Gauge - Shows current level of the fuel in the fuel tank. Replenish fuel when the Level

Gauge indicates "E" during the forklift operation.



5. Engine Coolant Temperature Gauge Indicates coolant temperature. Shows current

temperature of the engine coolant. If the gauge pointer moves beyond the red band during the operation, the engine is overheated. Park the lift truck and stop the engine.

Check the cooling system for any defect. The pointer will be in the red band when the coolant temperature reaches approximately 110 °C on all engines.



6. Transmission Oil Temperature Gauge - Shows transmission oil

temperature If the gauge pointer moves beyond the red band during operation, the engine is overheated. Park the lift truck and stop the engine.Check the system for any defect. The pointer will be in the red band when the transmission oil temperature reaches approximately 125 °C.



7. Engine Malfunction Indicator Light (MIL)

- Engine control system is equipped with built-in fault diagnostics. Detected system faults can be displayed by the Malfunction Indicator Lamp (MIL) as Diagnostic Fault Codes (DFC) or flash codes, and viewed in detail with the use of service tool software. When the ignition key is turned ON the MIL will perform a self-test, illuminate once and then go OFF. If a detected fault condition exists, the fault or faults will be stored in the memory of the engine control unit (ECM). Once a fault occurs the MIL will light up and remain ON. This signals the operator that a fault has been detected by the SCEM.

To check the problem, hold the mode switch pressed for 3 seconds. When the display shows the main menu, select Check. Refer to topic "Operation Section - After Staring the Engine - Electronic Controlled Diesel Engines".



8. Seat Belt Warning Light (If Equipment)

Indicates when the seat belt dose not fastened by operator.

The light will come on when the ignition switch is turned to the on position.

The light should go off after engine is started.

9. Service hour Meter - Indicates the total number of hours the engine and the lift truck have operated. The hour meter will operate when the ignition switch is in the ON position, whether the engine is running or not. The hour meter is used to determine lubrication and maintenance intervals.



10. Parking indicator light - The light will come ON when the parking switch is applied.




11. Front Floodlights - Push down on the switch (14), to the first step, to turn the front floodlights on.

Front and Rear Floodlights – Push down on the switch (14), to the second step, to turn both the front and rear floodlights on. The floodlights are optional.



12. Transmission Neutral Position Light -Indicates the neutral position of transmission.





14. Directional Turning Indicator Light



15. Brake oil level - Brake oil level Lamp indicates when the brake oil level is low.



16. ECT Malfunction Warning Lamp (if installed) - electronic transmission control system has a built-in diagnosis system. If a

failure occurs, the electronic transmission control system reports the operator of the failure code by the number of flashes with the malfunction warning lamp.



17. Engine oil pressure warning lamp -The warning lamp will light up if the engine oil is short or the pressure is low.



18. Fuel warning lamp – The warning lamp will light up to warn the operator to refuel.



19. Speedometer - Shows vehicle speed



20. Odometer - Shows vehicle run time



21. Engine rpm gauge - Shows engine rpm speed



22. Vehicle mode - Shows Vehicle mode (High, Standard, ECO)



23. T/M Gear inform - Shows T/M Gear state



24. After treatment indicator - Shows After treatment warning and inform.

When this waring lamp is on, refer to topic "operation section - after staring the engine - Electronic Controlled Diesel Engines.

- 1) SCR fault warning lamp; When the first lamp is on. check the SCR system.
- 2) SCR cleaning lamp: The SCR system shall be initialized on a regular basis to maintain the emission purification efficiency at an adequate level. This process is called SCR cleaning. When the second lamp is on, start the SCR cleaning process, during which the vehicle shall not be used. The lamp lights up with a message poping up 10 hours prior to the required timing of SCR

cleaning. The cleaning process takes about 30 minutes, with this lamp flickering. Press the cleaning switch for about 3 seconds to start the cleaning process.

- 3) High-temperature exhaust lamp: During SCR cleaning the temperature of exhaust emissions exceeds 600°C. When this lamp light on, the operator shall warn other people around not to approach the vehicle or touch the exhaust system, particularly at the back of the vehicle. If there is any flammable substance such as gas or particles around the vehicle, move it to a safe place.
- 4) SCR cleaning inhibition lamp: One you press the inhibition switch, this lamp lights up and the SCR process is suspended. When in a place with flammable substances or dust, you shall preoss the inhibition switch to prevent any fire or explosion that can be casused by high temperature emssions.



25. Regen gauge - Shows DPF Soot or DeSox Level



26. Clock - Shows Time



27. Weight scale indicator (Optional) -Shows weight and over weight warning



28. Speed limit indicator - Shows limit speed



29. Air cleaner indicator - If it on, need to change the air filter


Display Cluster

Display



- 1) SCR device warning display information.
- 2) Weight information on the weight scale (Option).
- 3) SCR cleaning warning display and guideline.
- 4) Urea residual quantity warning display and guideline.
- 5) Engine check warning lamp.
- 6) Speed limit setting speed (the lamp comes ON when it is set up).
- 7) Menu button.
- 8) UP button.
- 9) Down button.
- 10) Enter button.
- 11) Rear view camera operation button (manual).

Menu

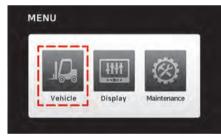

Menu - Vehicle



The password needs to be entered. The initial password is 1111.

Menu - Vehicle - Model

VEHICLE	Model
	OPTION
10.	EMISSION REGULATION
	тси
	CHANGE PASSWORD

and the second se	A Designation of the local division of the l
020/25/30/335, 03%C	🗧 C020/25/30/335, C033C
020/25/30/335.0336761/	🛑 ca720/25/30/335, CD33C/TC/
035/40/45/505, 0550	CD35/40/45/505, CD55C

Consists of the Doosan model and the Crown model. Upon selecting either model, the corresponding brand logo will be displayed at the time of initial starting.

Menu - Vehicle - Option




Menu - Vehicle - Option - Multi Torque



ECO: Fuel economy operation mode. **STANDARD:** Ordinary operation mode. **HIGH:** Heavy duty operation mode.

Menu - Vehicle - Option - T/M Option

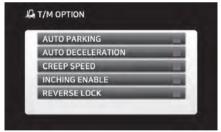

The electronic transmission option can be selected.

Auto parking: When the vehicle's speed is 0km/h, Parking turns ON.

Auto speed reduction: When the accelerator pedal is released, the speed is reduced. The vehicle can be stopped faster compared to no-load neutral operation. Ultra low speed setup: The vehicle can be operated at a lower speed than at the engine idle speed.

Inching activation: Inching pedal ON/OFF.

Forward/backward switch control: As the transmission may be damaged in the case of forward/backward switching during a high-speed operation, a specific speed can be set so that

forward/backward switching is only possible at the selected speed.

Menu - Vehicle - Option - Pin Code Access





The anti-theft function allows vehicle start-up only after entering the password.

Menu - Vehicle - Option - Speed Limitation

No Yes	DUAL
Setting	km/h
Setting(Reverse)	km/h

This function limits the maximum vehicle speed to the setting speed; and forward/backward speeds are identical in the case of regular setting, whereas forward/backward speeds differ in the case of dual setting.


Menu - Vehicle - Option - Weight Scale




There are three sub-menus: (No load setting, load setting, rated load setting).

🔓 ZERO SETTING	
	0 kg

Zero setting under no-load condition.

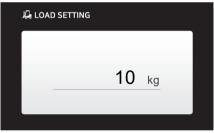


Enter the prepared load to set the corresponding load value.

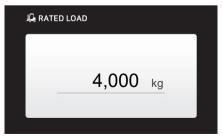

Rated load setting for warning against overload.

Menu - Vehicle - Option - Seat Belt Interlock

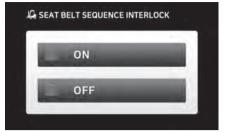

This safety function enables operation only when the seat is occupied and the safety belt is on.

Menu - Vehicle - Emission regulation

100	TIED /	
iles.	TIER-4	-
100		-
100	STAGE-5	

Tier-4, Stage-5 emission regulation setting.

Menu - Vehicle - TCU



Menu - Vehicle - TCU - Auto Clutch Calibraiton



After any service below, should conduct the auto clutch calibration. See the topic, "Drive axle Oil, Transmission Oil, Oil Filter & Strainer - Clean, Change" in First 50-100 Service hours or a week.

- the oil and filter change
- the transmission change
- the TCU change

Menu - Vehicle - TCU - Auto Inching Calibraiton



After any service below, should conduct the auto inching calibration. See the topic, "Drive axle Oil, Transmission Oil, Oil Filter & Strainer - Clean, Change" in First 50-100 Service hours or a week.


- the inching pedal adjust
- the inching sensor change
- the TCU change

Menu - Vehicle - Change Password



New password and setting by confirming


Menu

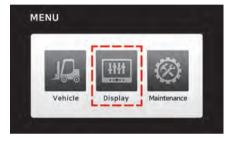

Menu - Display



Menu - Display - Rear View camera (If the rear view camera is equipped)

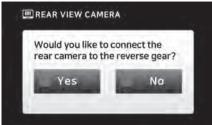


Camera connection setting while reversing

Menu - Display - Language




Setting for Korean, English, Chinese and Spanish

Menu - Display - Unit

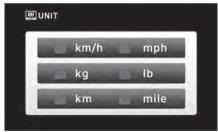

Setting for SI unit system and US unit system

Menu - Display - Time

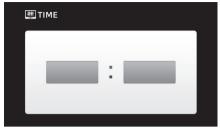


Current time setting

Menu - Display - Software Version

SOFTWARE VERSION	
DISPLAY FIRMWARE VERSION	
DISPLAY GRAPHIC VERSION	
VCU FIRMWARE VERSION	

Instrument panel firmware, graphic version and VCU firmware version can be checked.


Menu - Display - Software Update

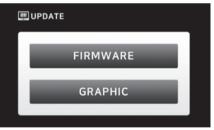



New firmware version can be updated through the USB memory.


Menu

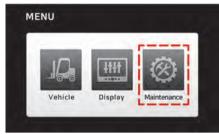

Menu - Maintenance



Menu - Maintenance - Fault Details

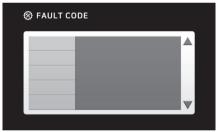

Details of faults that currently occur can be checked.

Menu - Maintenance - Consumable Item Management

Item	Cycle	Time
Transmission Oil	< 000 Hr	0 Hr
Transmission Oil Filter	2000 Hr	0 Hr
Hydraulic Oil	8 500 Hr	0 Hr
Hyd. Return Filter	1.000 Hr	0 Hr
Hyd. Air Breather Filter	1.000 Hr	0 Hr


The replacement cycles and amount (in hours) of use of consumable items can be checked.

Menu - Maintenance - Input/Output Signal Analogue

E/G RPM		RPM	
T/M Temp			
T/M Temp Sensor Resistance		Ohm	
Weight Sensor Voltage	0.0		
Cooling Water Temp			
Fuel Gauge	55	46	V

The vehicle analogue signal can be checked

Menu - Maintenance - Input/Output Signal Digital

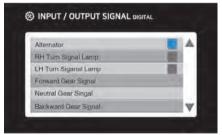

The vehicle digital signal can be checked (Alternator, RH turn signal lamp, LH turn siganal lamp, forward gear signal, neutral gear singal, Backward gear singal)

Weight Scale Mode (Optional - Hydraulic)



This option enables the operator to measure and limit the weight of the load using the LCD display. Use "WEIGHT SCALE" under the "VEHICLE" menu.

Zero Setting

Raise the forks by 1 m as unloaded and press ENTER to set the weight of the mast assembly to be zero.

Load Setting

Prepare a reference load whose weight is accurately known and enter its weight into the display. Put the reference load on the forks and raise the forks. And then press ENTER to complete the setting of a reference load value.

Since the weights of any loads will be measured based on this reference load value, it must be accurately set.

Rated Load Setting

Enter the rated load capacity of the vehicle into the display and press ENTER to complete the setting of the rated load value.

An overload warning will be given if any weight exceeding the rated load entered is measured.

Weight Scale Option (Load Cell Type)

With this weight scale option, the operator can measure and limit the load's weight using a display

panel. Using the key (, you can start settings.

1. Entering the Calibration Mode

To perform initial settings for the load cell, enter the calibration mode as follows:



Press this key when "ST.CAL" is displayed to start calibration mode.

Press this key once again.



2. Specifying a Minimum Scale

You can select a minimum scale on which the load cell displays the weight from among 1 kg, 2 kg, 5 kg, 10 kg, 20 kg, and 50 kg (for example, 1235 kg is displayed with a 5 kg minimum scale and 1250 kg displayed with a 50 kg scale). The default value is "10 kg."



Each time you press this key, the setting increases in the order of 01, 02, 05, 10, 20, and 50.

Press this key to save the minimum scale setting and proceed the subsequent step. Press this key to move to the previous step.



3. Specifying a Maximum Measuring Scale

This step is to specify the rated capacity of the vehicle on which the load cell is installed.

Since the device does not weigh a load heavier than the set capacity (determins to be overloaded), it is recommended to set the capacity to be 5% higher than the actual value taking into consideration the safety factor.



Each time you press this key, the number (0 to 9) at the cursor position increases by 1. Each time you press this key, the cursor is moved to the left by one point.



Press this key to save the set value and proceed the subsequent step.



Press this key to move to the previous step.



4. Inputting a Reference Load

This step is to input the weight of a reference load needed for weight setting.

If the weight of the reference load is 3,000 kg, input "3000" and proceed the next step (reference load lift). The initial setting value should be set to 50% to 60% of the rated capacity (for a 7 ton capacity model for example, use a 3.5 to 4 ton load).



Each time you press this key, the number (0 to 9) at the cursor position increases by 1.

Each time you press this key, the cursor is moved to the left by one point.



Press this key to save the set value and proceed the subsequent step.



Press this key to move to the previous step.



NOTE: After the initial setting, if the load weight is measured with an error, you must adjust this value.

Example: If you have inputted 3,000 kg but the actual load weighs 2,900 kg, adjust the reference load value to 2,900 kg; if the load weighs 3,100 kg, adjust the value to 3,100 kg.

5. Zero Adjustment

This step is to set the weight condition of the vehicle's unloaded front end to zero. Keeping the mast unloaded, raise it approx. 300 mm from the ground just vertically.



Press this key to save the set value and proceed the subsequent step.

Press this key to move to the previous step.



6. Reference Load Lift

Put a reference load that weighs as much as the set value on the attachment (e.g. forks).

You should align the centers of gravity of the attachment and of the reference load.

Raise the mast approx. 300 mm from the ground vertically.

Once the vehicle's vibration ends after lifting the load, press the Enter key.



Press this key.



7. Finishing Calibration


Once you have done all the steps above, a certain figure appears along with a blinking message "C._End" on the display for a while, and then the weight scale mode resumes."

Initial settings for the load cell has been finished.

Use this device after fully lowering the load for the indicator to display 0 kg.



Circuit Breaker

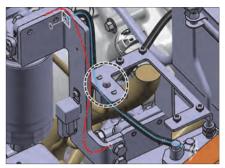

Circuit Breaker - Protects the main electrical circuits. To reset the circuit breaker, push the button in. It is located in the engine compartment.

Tilt Steering Column



To adjust the steering column, push down the knob, and move the steering column to the desired position, then release the knob.

Electrical Disconnect Switch (If Equipped)





1. ON-Connects the battery for electrical power to all electrical circuits.



2. OFF-Disconnects the battery from all electrical circuits.

Audio System (AM/FM Tuner with USB/AUX Player, If equippied)

Location of controls



- 1. AM button: Select AM Radio mode.
- 2. FM button: Select FM Radio mode.
- 3. USB button: Select USB player.
- 4. AUX button: Select AUX mode.
- 5. POWER/MUTE [☆] button with VOLUME dial: Turn the power on or mute function on/off (press); turn the power off (press and hold); control the volume level (rotate).
- 6. Display window for Play/Reception/Menu state and information.
- 7. PRESET [1 ||] [6 D+] buttons

Radio mode: Recall each stored station(press); store each station (press and hold)

USB mode: Change the playback mode ([1 ||]/[2 RPT]/[3 RDM] buttons); shows available information about the current track ([4INFO] button); move to folder down/up ([5 D-]/[6 D+] buttons). 8. SCN/AST button with | ◀ ◀ TUNE/TRACK

▶▶ | dial

Radio mode: Plays frequencies with superior reception for 5 seconds each (press); Saves frequencies with superior reception to Preset buttons (press and hold). select the reception frequency manually (rotate).

USB mode: Scans the beginning parts (approx. 10 seconds per track) of tracks (press); moves to the previous/next track (rotate); rewind or fast-forward the track (rotate and hold).

- 9. LOUD button: Turn the Loudness mode on/off.
- 10.MENU button: Enter the sound setting mode (press); show/hide the clock or when power is off, enter the clock setting mode (press and hold).
- **11. Input Terminal cover**: Open the cover to connect the external audio device or the USB device.
 - AUX IN jack: Connect the external audio device.
 - USB port: Connect the USB device.

Display window



- 1. USB/AUX indicators: When the External Device is connected, indicator is lights up.
- 2. MP3/WMA indicators: When the Audio Stream is detected, indicator is lights up.
- 3. Stereo [ST] indicator for FM stereo station: When a stereo Broadcast is received, indicator is lights up.
- 4. Playback mode indicators for USB mode

🗋 : Folder mode

INT : Intro playback

CD : Repeat playback

- : Random playback
- 5. LOUD/EQ indicators for sound effect

LOUD: Loudness mode on

EQ: EQ mode on


6. Multi-function display area for showing the information

Wired remote controller




- 1. SCAN button: In Radio mode, tune up the frequency(press): find a station (press and hold).
- POWER [PWR] button: Turn on the power or mute on/off(press): turn off the power (press and hold).
- 3. Volume [▲/▼] buttons: Adjust the volume.

Rear view/Connectors




- 1. Antenna jack: To plug the FM antenna cable.
- 2. I/O connector: To plug the 1/0 cable.

<ARA-5080WF: 18 Pin>



1. Front R (+) 10. Rear R (-) 2. Rear R (+) 11. N.C/illumination (-) 3. illumination (+) 12. N.C 4. ACC (+) 13. REM GND 5. Battery (B+) 14. GND 6. N.C 15. 5V Output 7. Rear L (+) 16. REM Data 8. Front L (+) 17. Rear L (-) 9. Front R (-) 18. Front (-)

<ARA-5081WF: 18 Pin>



- 1. Tel Mute
- Rear R (+)
 illumination (+)
- 4. ACC (+)
- 5. Battery (B+)
- 5. Ballery (B+
- 6. DMB GND
- 7. Rear L (+)
- 8. DMB L-CH 9. H/F GND
- 14. GND 15. 5V Output 16. REM Data 17. Rear L (-)

10. Rear R (-)

11. DMB Det

12. DMB Mute

13 RFM GND

18. DMB R-CH

Getting started

Turning the unit on/off



1. Turn your car's ignition key to ACC or IGN (ON) position.

Displays the current time.



2. Press the **POWER** button to turn the power on.

If the source is ready, playback also starts.

To turn on the power directly

By connecting an USB into the USB port or pressing the AM/FM or USB button (while the USB device is connected), you can also turn on the power and the unit then plays.



3. When power is on, press and hold the **POWER** button to turn power off.

Adjusting volume directly



1. Turn the **VOLUME** dial to control volume.

Available volume range: 1 - 41.

Setting the sound



1. Press **MENU** button repeatedly to select the Sound setting mode as below;

- BAS (Bass): sets the bass sound level. (-5 ~ +5)
- MID (Middle): sets the middle sound level. (-5 \sim +5)
- TRE (Treble): sets the treble sound level. (-5 ~ +5)
- FAD (Fader: Option): sets the sound fade between the front and rear speakers. (F15 ~ R15)
- BAL (Balance): sets the sound balance between the right and left speakers. (L 15 ~ R15)
- LOUD (Loudness): turn Loudness mode on/off
- EQ (Equalizer style): selects the one of the 7 EQ styles (EQ OFF, POP, ROCK, COUNTRY, VOICE, JAZZ, CLASSIC)
- BEEP (Beep): turn Beep sound on/off
- SCROLL (Scroll): turn Scroll mode on/off

• VOL (Volume): sets the sound volume level. (VOL 0 ~ VOL 41)



2. Turn the **VOLUME** dial left/right to adjust the value of the level, balance or style.

Setting the Loudness mode



1. Press the **LOUD** button to turn loudness mode on/off.

Increases the level for low frequency.

To turn the loudness option off, press the **LOUD** button again.

Muting the sound quickly



1. Press the **MUTE** button to turn mute on. "MUTE" will flash on the display and mute the sound.

Press the **MUTE** button again or turn **VOLUME** dial to restore sound.

Radio

Setting the region of radio reception

- When the power is turned on, press and hold the buttons more 3 seconds at the same time as below;
- U.S.A: Hold down

and press

FM: 87.7 - 107.9 MHz (200 kHz step)

AM: 530 - 1.7 10 kHz (10kHz step)

South America : Hold down and press
 The seconds

FM: 87.5 - 108.0 MHz (100 kHz step)

AM: 530 - 1.7 10 kHz (10kHz step)

Asia : Hold down
 Asia : Hold down
 ress
 f = +
 more 3 seconds

FM: 87.5 - 108.0 MHz (100 kHz step)

AM: 531 - 1,602 kHz (9 kHz step)

Europe: Hold down
 Anno
 Anno
 Hold down
 Seconds

FM: 87.5 - 108.0 MHz (50 kHz step)

AM: 522 - 1,629 kHz (9 kHz step)

2. Please wait for more 5 seconds with no operation, the unit will save and apply your's setting.

If the region setting is not selected correctly to your country or region, the radio reception can not be received. Retry the setting the region of radio reception correctly.

The region setting is required only for the first time

The region setting is return to the default setting when the power connector or battery is disconnected.

Tuning in a station



1. Press the **AM or FM** button to change the band in order of AM1. AM2. FM1 or FM2.

You can select the FM 1. FM2. AM 1 or AM2 radio band.

While the Auto 5tore stations are stored, you can select the AMA or FMA band by additional.

The previously chosen broadcasting station will be received.



2. Press the SCN button or turn the

◀ **TUNE** ► ► dial left/right to select the station.

Using TUNE: Briefly turn the dial, plays previous/next frequency.

Using SEEK: Turn and hold the dial, automatically search for station with superior reception.

Using SCAN: Press the button, starting from the current station, stations with superior reception are scanned for 5 seconds and the previous station is restored.

During the seeking or scanning, if press or turn the dial left/right again, the selected station will begin playing.

During the FM reception, the Stereo [ST] indicator is on.

Saving radio stations manually

You can save up to 6 preset channels each for FM 1, FM2, FMA, AM 1, AM2, and AMA.

If change the stations while driving, use preset button to prevent accidents.



1. Press the **AM or FM** button repeatedly to select the band.

2. After selecting the frequency, press and hold the **PRESET** [1 II] - [6 D+] button.

The frequency is saved to the selected preset button.

A total of 24 frequencies with 6 preset frequencies each for FM1/FM2/AM1/AM2 modes can be saved.

Saving radio stations automatically



1. Press the AM or FM button repeatedly to select the band.

The previously chosen broadcasting station will be received.



2. Press and hold the **AST** button to automatically save receivable frequencies to Preset button.

"AST" is shown, and then stores stations in the order of their frequencies on the Preset buttons.

Up to 6 stations can be stored in each of the AMA and FMA band.

Listening to a preset station



1. Press AM or FM button repeatedly to select the band.

You can select the FM 1. FM2. AM 1 or AM2 radio band.

While the Auto Store stations are stored, you can select the AMA or FMA band by additional.

The previously chosen broadcasting station will be received.



2. Press **Preset** [1 ||] - [6 D+] button.

From the 6 presets, select the frequency you want to listen to.


USB player

Before MP3 [WMA] USB playback

This unit cannot play the following files;

- MP3 files encoded with MP3i and MP3 PRO format.
 - MP3 files encoded in an inappropriate format.
 - MP3 files encoded with Layer 1/2.

Folder selection order/File playback order;

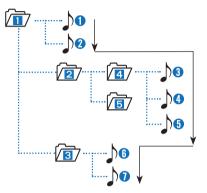

Playing a USB device



1. Open the cover, plug the USB device to the USB port.

Once a USB is connected, USB will automatically start playing from the first file within the USB.

If a previously played USB is reconnected, then the file after the most recently played file is played.

If a different USB is connected or the file information within the USB was changed, then the USB will start playing from the first song within the USB.



2. When a USB device to be played is already connected, press the USB button to play USB device.

The previously selected file is played.



3. While playing, press the $[1 \parallel]$ button to pause the file.

Press the button again to play the current file.



4. Press the [4 INFO] button repeatedly to display information about the file being played.

The information displayed includes the file name, playing time, ID3 Tag or folder name information saved with the song.

If there is no information on the playing file, then the unit will display "**NO INFO**".



5. Press **MENU** button repeatedly to select the Scroll setting mode. Tum the **VOLUME** dial to changes the display method between Scroll On/Off.

- SCROLL ON: activate the scroll function
- SCROLL OFF: deactivate the scroll function

Controlling the playback



 While playing, turn the ►TRACK < dial left/right to moves to the previous or next track.

Clockwise: move to the next file

- Counter-clockwise: move to the previous file
- You can skip files within the same folder.



2. While the ►►TRACK ◄ dial is being turned and held, the file will rewind or fast forward at high speed. Once released, the file will begin playing at normal speed.

- · Clockwise: fast forward
- · Counter-clockwise: fast rewind
- The search function works but search speed is not constant.
- While fast forwarding or rewinding, you can only hear intermittent sounds.



3. Press the [5 D-] or [6 D+] button to moves to the previous or next folder.

- [5 D-]: move to previous folder [6 D+]: move to next folder
- While folder moving, he folder name will be displayed briefly.

Change the playback mode



1. While playing, press the SCN button to begin the Intro scan playback.

 When pressed shortly, scans the beginning parts of device files. (approx. 10 seconds per file)

- **INT** : Successively plays the intro of the file in the USB device.
- INT: Successively plays the intro of the file in the current folder.
- Off : Cancels intro playback.



2. Press the [2 RPT] button to select the Repeat playback mode.

- C: The current file plays repeatedly.
- CD : The current folder plays repeatedly.
- Off: Cancels repeat playback.



3. Press the [3 RDM] button to select the Random playback mode.

- Characteristic All files of current folder play in random order
- X : All files of USB device play in random order
- Off: Cancels random playback.

About MP3/WMA

This unit can play MP3 (WMA) files with .mp3, .wma (lower case letters) or .MP3 and .WMA (capital letters) file name extensions.

This unit can display ID3 Tag (Version 1.0, 1.1, 2.2, 2.3 or 2.4) information for MP3 files. such as the album name and the artist.

This unit can recognize the Korean and English characters.

This unit can play MP3/WMA files meeting the conditions below;

- Bit rate: 8 kbps 320 kbps / VBR for MP3
- Sampling frequency:
- 48 kHz, 44.1 kHz, 32 kHz
- (for MPEG-1 Layer 2/3)
- 24 kHz, 22.05 kHz, 16 kHz
- (for MPEG-2 Layer 2/3)

This unit can recognize total of 9,999 files, of 256 folders, and 7 stages of folder structure.

This product can play MP3 files using VBR. When playing an MP3 file of this VBR type, the remaining time displayed may be different from the real time.

Handling precautions for USB device

When using the external USB device, make sure to keep the device disconnected and connect only sometime after turning on the vehicle ignition. The USB device may be damaged if the USB device already connected when the ignition is turned on. (USB device is not an electronic automotive component).

Some USB devices may not operate properly because of compatibility issues. Check that the external device is supported by the device before stating use.

The device will only recognize USB devices formatted in FAT 16/32.

When formatting the external USB device, the device may not properly recognize a Byte/Sector selection other than 512 Bytes or 2,048 Bytes.

Avoid the contact of bodily parts and foreign substances with the USB connector.

Repeatedly connecting/disconnecting the USB in a short period of time may cause damage to the device.

When disconnecting the USB, an abnormal sound may occur occasionally.

Abruptly disconnecting the external USB device while the USB is operating may cause the device to be damaged or function abnormally. Make sure to disconnect the USB device only after the audio power is turned off or when the audio is operating in a different mode.

The amount of time required to recognize the external USB device may differ depending on the type, size, or file formats stored on the USB. Such differences in the required time are not indications of malfunction. Please wait the period of time required to recognize the device.

The device support only USB devices used to play music files.

Do not use the USB I/F to charge batteries or USB accessories which generate heat. Such acts may lead to deteriorated performance or damage to the device

The device may not recognize the USB device if separately purchased USB hubs and extension cables are being used.

In the case of high capacity USB devices, there are instances where the logical drives are partitioned for user convenience. In this case, it will only be possible to play the USB music in the top level drive. When using partitioned drives, save the songs you wish to play on the device only in the top-level logical drive. In addition, certain USB devices are configured with a separate drive used to install application programs and it may not be possible to play songs from such drives for the reasons as described above.

The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.

The device will not support files locked by DRM (Digital Rights Management).

AUX player

Listening to auxiliary audio equipment

By connecting an optional portable audio device to the AUX input jack (stereo mini jack) on the unit and then simply selecting the source, you can listen on your car speakers.



1. Turn the **VOLUME** dial left to decrease the volume level.

The **AUX** volume can also be controlled separately through the connected device.



- Turn the external audio equipment off Open the cover, connect the audio output of the external audio equipment to AUX input terminal on the unit.
- Turn the external audio equipment on. Start playback of the external audio equipment at a moderate volume.



4. Press the **AUX** button to select the AUX function.



5. Set your usual listening volume by turn the **VOLUME** dial left/right on the unit.

Once the connector is disconnected, the previous mode will be restored.

AUX mode can be used only when an external audio player has been connected.

Listening to DMB sound (If Equipped)

 By connecting the optional DMB receiver, you can listen the DMB source provided for the vehicle.

When the DMB receiver is turned power on, the current operation will be paused and the "AUX 1" will be displayed on the Display window.

The DMB's sound is output from the speakers in the unit.

- 2. While playing the DMB, press the AM, FM or USB button to change the function.
- 3. While playing the DMB, if turn the DMB receiver off, the unit will be returned to previous mode.

Calling via Handsfree (If Equipped)

1. By connecting the optional Handsfree equipment, you can use the the Handsfree mode.

When make a call or receive. the bell will sound and the "PHONE" will be displayed on the Display window.

- 2. The ringtone and talker's voice are output only from the front speakers.
- 3. When the call is ended, the mute will be canceled and the unit will be returned to the previous mode.

Seat Switch System



The lift truck is equipped with a SEAT SWITCH SYSTEM. In normal operation if the direction lever is placed in either forward or reverse, the lift truck will move at a speed proportional to the accelerator pedal's position. If the operator leavers the seat without setting the parking brake, within three seconds after leaving the seat, the SEAT SWITCH SYSTEM will automatically disengage the transmission. The directional lever, however, will remain in that forward or reverse location although internally the transmission will have shifted into neutral

Before exiting the lift truck, the parking brake should always be applied.

WARNING

WHEN LEAVING MACHINE APPLY PARKING BRAKE!

- PARKING BRAKE IS NOT AUTOMATICALLY APPLIED.
- **NOTE:** Some trucks may be equipped (ask your dealer if this applies to your truck) with an alarm that will sound if the parking brake is not applied when leaving the machine.

NOTICE

- 1. Prior to operating the lift truck, be sure to understand and check the SEAT SWITCH SYSTEM.
- 2. While in normal operation and on level ground, select a direction with the directional lever and with the park brake released. You will note that the truck will move slowly in the selected direction. If you lift yours hips off of the seat, within three seconds, the SEAT SWITCH SYSTEM will desengage the transmission allowing the truck to coast but not automatically stop.
- To restore the lift truck to normal operation, while sitting in the operator's seat depress the brake pedal to hold the lift truck, return the directional lever to the neutral position, and then reselect a direction of travel (either forward or reverse). The transmission will then re-engage.
- If seat or seat switch replacement becomes necessary, be sure to use genuine DOOSAN lift truck parts. Lift trucks should never be operated without an operational SEAT SWITCH SYSTEM.

Lift Truck Controls

Direction Control Lever





1. Forward - Push the lever forward for FORWARD direction travel.

2. Neutral - Move the lever to center position for NEUTRAL.

3. Reverse - Pull the lever back for REVERSE direction travel.

Transmission Speed Range Lever



- High Rotate the lever counterclockwise for HIGH speed range.
- 2. Low Rotate the lever clockwise for LOW speed range.

Auto Shift (AUTO) Selector Switch



This switch is used to select auto/manual shift on the gearshift.

- When pressing the "AUTO" position on this switch, the blue light is illuminated on the switch, and the word "AUTO" is displayed above the gear indication on the instrument panel screen. Then, if you turn the gearshift lever to the "2nd gear" position, the auto gearshift status can be used. In the auto gearshift condition, the vehicle starts in the first gear, automatically changes to the second gear as the vehicle speeds up, and automatically changes to the first gear if the speed is reduced.
- When pressing this switch in the opposite direction, the blue light turns OFF, and the word "AUTO" above the gear indication on the instrument panel screen disappears. In this condition, the vehicle is operated according to the gear selected on the gearshift lever.

* In the auto gearshift (AUTO) mode, if the gearshift lever is turned to and kept in "1st gear," the vehicle can only be driven in the first gear without auto gearshift.

Multi-torque



ECO: Fuel economy operation mode. STANDARD: Ordinary operation mode. HIGH: Heavy duty operation mode.

- The above figure shows the multi torque screen on the display. For setting, refer to the following: Operation Section - Operator Seat and Various Instruments/Devices - Menu - Vehicle - Option Setting - Multi Torque.
- "S" means "Standard Mode" in the specifications. "E" means "Economy Mode" in which maximum engine speed is reduced by 100 ~ 200 rpm together with reduced maximum torque and output power.

"H" means "High Speed Mode", in which the maximum engine speed increases by 90 ~ 100 rpm together with reduced maximum torque and output power. For changes of the maximum torque and output power values in the "E" and "H" modes, refer to the service manual.

SCR Cleaning - DeSOx Switch




This switch initiates regular regeneration process of the post-treatment device.

 A pop-up on the SCR Display warns the operator to perform SCR Cleaning. (3 warnings: at 10 hrs remaining, 5 hrs remaining, Immediate)



Exemplary warning - 10 hrs remaining

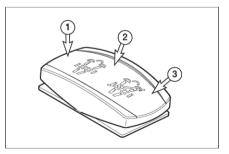

 Press this switch and release it after 3 sec, SCR Cleaning will be started and the engine speed will be increased. Screen pop-up provides information on the warning up and cleaning process.

Operation Section



Warming up process



Cleaning process



Completed

- 3. The switch returns to the normal position of "2" after pressed by the operator to position "1". However, it does not return when pressed to position "3" and the operator shall return the switch from position "3".
- Setting this switch to position "3" prohibits automatic SCR Cleaning in an environment subject to dust, explosion or regulated noise level. At position "3", a pop-up appears as shown below:



SCR Cleaning inhibited

Transmission Inching Control Pedal



Inching Control Pedal - Pushing down the inching pedal, modulates the hydraulic pressure to the clutch packs, permitting disc slippage.

Further pushing the pedal completely relieves clutch pack pressure and applies the service brakes to stop and hold the lift truck.

In order to use the inching function, "Inching Activation" must remain selected on the "T/M option function" of the instrument panel display. (Operation Section - Operator Seat and Various Instruments/Devices - Menu - Vehicle - Option Setting 1 Electronic T/M option).


NOTE: The purpose of the inching control pedal is to provide precise inching control at slow travel speed, with high engine rpm. This is used for fast hydraulic lift during load approach, pickup or positioning.

Excessive use of the inching pedal will cause the clutch to overheat and may result in damage.

If the vehicle is driven with one's foot habitually resting on the inching pedal, the vehicle will be driven in the inching condition, resulting in damage due to the clutch overheating.

If the inching pedal is used as a brake pedal, damage/overheating may occur due to frequent friction of clutch. In addition, since the engine brake does not operate at the time of braking, the regular brake may be damaged due to the increased load on the regular brake.

Service Brake Pedal

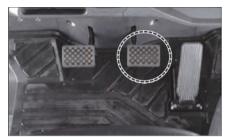



Push DOWN on the brake pedal to slow or stop the lift truck.

()))

RELEASE the brake pedal to allow the lift truck to move.

Accelerator Pedal





Push DOWN on the pedal to increase engine rpm (speed).



RELEASE the pedal to decrease engine rpm (speed).

Parking Brake Switch





Push the front side of the parking brake switch to engage the brake.

Pushe the rear side of the parking brake switch to engage the brake.

Lift Control



NOTE: To prevent a sudden change of position of the load, operate all lift, tilt and attachment controls smoothly.



1. Lower Position - Push the lever FORWARD smoothly to lower the load.

2. Hold Position - When the lever is released it will return to the HOLD or center position. Lifting or lowering action will stop.



3. Lift Position - Pull the lever BACK smoothly to lift the load.

Tilt Control





1. Mast Tilt Forward - Push the lever FORWARD smoothly to tilt the mast forward.

2. Mast Hold - When the lever is released it will return to the HOLD or center position. Tilting action will stop.

3. Mast Tilt Back - Pull the lever BACK smoothly to tilt the mast backward.

Sideshift Attachment Control (If Equipped)





1. Sideshift Left - Push the lever FORWARD to shift the carriage to the left.



2. Sideshift Hold - When the lever is released it will return to the HOLD or center position. Sideshifting action will stop.



3. Sideshift Right - Pull the lever BACK to shift the carriage to the right.

Fuel and DEF/Ad-Blue Replenishment

Diesel Engine Equipped

\Lambda WARNING

Explosive fumes may be present during refueling.

Do not smoke in refueling areas.

Lift truck should be refueled only at designated safe locations. Safe outdoor locations are preferable to those indoors.

Stop the engine and get off the lift truck during refueling.

NOTICE

Do not allow the lift truck to become low on fuel or completely run out of fuel. Sediment or other impurities in the fuel tank could be drawn into the fuel system. This could result in difficult starting or damage to components.

Fill the fuel tank at the end of each day of operation to drive out moisture laden air and to prevent condensation. In the cold weather, the moisture condensation can cause rust in the fuel system and hard starting due to its freezing. Do not fill the tank to the top. Fuel expands when it gets warm and may overflow.



 Park the lift truck only at a designated safe location. Place the transmission in NEUTRAL. Lower the forks to the ground. Engage the parking brake. Stop the engine.



- 2. Remove the filter cap.
- Fill the fuel tank slowly. Install the filter cap. If spillage occurs, wipe off excess fuel and wash down area with water.
- NOTE: Drain water and sediment from fuel tank as required by prevailing conditions. Also, drain water and sediment from the main fuel storage tank weekly and before the tank is refilled. This will help prevent water or sediment being pumped from the storage tank into the lift truck fuel tank.

Before Starting the Engine

Walk - Around Inspection

Make a thorough walk-around inspection before mounting the lift truck or starting the engine. Make sure there are no such problems as loose bolts, debris buildup, oil or coolant leaks. Check condition of tires, mast, carriage, forks or attachments. Have repairs made as needed and all debris removed.



- 1. Inspect the operator's compartment for loose items and cleanliness.
- 2. Inspect the instrument panel for broken or damaged indicator lights or gauges.
- 3. Test the horn and other safety devices for proper operation.




- 4. Inspect the mast and lift chains for wear, broken links, pins and loose rollers.
- 5. Inspect the carriage, forks or attachments for wear, damage and loose or missing bolts.
- Inspect the tires and wheels for cuts, gouges, foreign objects, inflation pressure and loose or missing bolts.



- 7. Inspect the overhead guard for damage and loose or missing mounting bolts.
- 8. Inspect the hydraulic system for leaks, worn hoses or damaged lines.
- 9. Look for transmission and drive axle leaks on the lift truck and on the ground.
- 10. Inspect the common parts and driveaxle, mast etc for damaged, loosen or missing mounting bolts.
- **11.** Inspect the engine compartment for oil, coolant and fuel leaks.



 Measure the engine crankcase oil level with the dip stick. Maintain the oil level between the MAX. and MIN., (or FULL and ADD) notches on the dip stick.

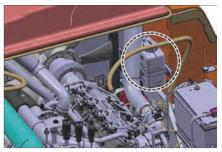

13. Observe the engine coolant level in the coolant recovery bottle. With the engine cold, maintain the level to the COLD mark. If the recovery bottle is empty, also fill the radiator at the top tank.



- **14.** Observe the fuel level gauge after starting the truck. Add fuel if necessary.
- 15. In case of LPG truck, if needed, change LPG Fuel Tank as the procedure of changing LP tanks in Refueling Section.

\Lambda WARNING

Personal injury may occur from accidents caused by improper seat adjustment. Always adjust the operator's seat before starting the lift truck engine.

Seat adjustment must be done at the beginning of each shift and when operators change.



16. To position the seat, PUSH the lever away from the seat track and move the seat forward or backward to a comfortable position.

Starting the Engine

Prestart Conditions

NOTE: The engine will not start unless the transmission directional control lever is in the NEUTRAL position.



1. Engage the parking brake, if not already engaged. Place the transmission directional control lever in the NEUTRAL position.



 In case the lift truck is equipped with a electrical disconnect switch, the engine will not start unless the disconnect switch is in the ON (closed) position. Before starting, turn the disconnect switch to the OFF(open) position.

NOTICE

When you restart the engine after turning off it, wait 4 to 5 seconds and restart it to protect the starter.

Diesel Engine

Starting a Cold Diesel Engine

 Turn the key to the ON position and the start preheat indicator light will come ON. The preheat indicator light will stay ON approximately seven seconds, depending on the surrounding air temperature.

NOTICE

Do not crank more than **10** seconds continuously.

If engine coolant is cold, engine low idle speed could be higher than normal condition. (Electronic Engine)

- 2. After the preheat light goes OFF, turn the ignition key to the START position.
- **3.** Release the ignition key after engine starting and check the engine condition.
- If the engine stalls or does not start, turn the ignition key to the OFF position, then repeat steps 1 thru 3.

Starting From a 12 Volt External Source

🛝 WARNING

Sparks occurring near the battery could cause vapors to explode.

Always connect the external power source ground cable to a point away from and below the battery, and well clear of fuel system components.



NOTICE

Do not reverse battery cables. It can cause damage to the alternator.

Always connect the external power source cables in parallel with the lift truck battery cables : POSITIVE(+) to POSITIVE(+) and NEGATIVE(-) to NEGATIVE(-).

Attach ground cable last, and remove it first. All lift trucks equipped with DOOSAN built internal combustion engines have NEGATIVE(-) ground connections.

After Starting the Engine

Observe all indicator lights and gauges frequently during operation, to make sure all systems are working properly. All of the indicator lights will come ON with the ignition switch in the ON position before the engine is started.

Diesel Engine





1. The engine oil pressure indicator light (1), will not come ON with the engine running, unless there is low or no oil pressure. Stop the engine immediately, if the light comes ON.



2. The alternator indicator light (2), should not come ON during normal operation. The alternator is not charging if the light comes ON with the engine running.



 $\label{eq:main_state} \begin{array}{l} \textbf{3.} \mbox{The engine MIL (Malfunction Indicator Light)(3)} \\ \mbox{will not come ON with engine running, unless the fault or faults are stored in the memory of the} \end{array}$

engine control module (ECM). Stop the engine and check the electric engine control system if the light comes ON. Refer Engine of this section.

The engine MIL(Malfunction Indicator Light) will not come on with engine running.

If MIL does not disappear, please contact service center.



4. Observe the diesel fuel level gauge (4) for fuel level in the tank.

5. The engine coolant temperature gauge pointer (5), will be in the green band with the engine running, unless the coolant temperature is excessive.



6. Observe the hour meter (6) to make sure it is operating properly.

Diesel Engine

Engine and After-treatment System

DM03P/V Diesel Engine Introduction


The DM03P/V engine which is a high-power engine in compliance with the Required Engine Emissions Standard is provided with various systems(DM03P: T4F, DM03V: Stage5). The DM03P/V engine is equipped with a turbo-charger intercooler system that compresses and cools air and feed it to the intake manifold. Here, AMF sensor and temperature/pressure sensors detect the air condition and transmit the data to the ECU which controls fuel injection rate according to the engine load, speed and air quantity. Fuel is supplied to a high pressure pump through a fuel filter. The fuel compressed in the high pressure pump is transferred to common rail and injected by injectors in controlled order. Surplus fuel after injection returns to the fuel tank via a return hose. The exhaust gas recirculation (EGR) system controls the quantity of recirculating air according to the engine speed and load in order to comply with applicable exhaust gas emission standards.

The DOC (Diesel Oxidation Catalyst) uses a chemical process to reduce hydrocarbons (HC) and carbon monoxide (CO). DPF (Diesel Particulate Filter),only for Stage5, is after-treatment to trap the PM(Paticulate Matters)/Soot in exhaust gas. DPF Regeneration and Ash Cleaning is regulay required to maintain proper performance.

The figure below shows the positions of the electronic control system and sensors

NOTICE

It is normal to hear a slight operating sound after Key Switch On/Off. This is the ECU checking the actuator before/after engine running.

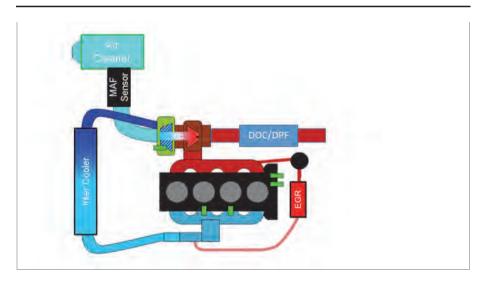

Electronic Controlled Diesel Engines (DI DM03P/V)

Check the display as follows: Menu - Maintenance - Details of Repair.

No.	SPN	Description				
1	0	Timeout Error of CAN				
2	27	EGR Valve				
3	29	Accel pedal				
4	51	Throttle valve				
5	91	Accel pedal				
6	97	Water in fuel				
8	100	Engine Oil Pressure Sensor				
9	102	Intake Manifold Pressure Sensor				
10	105	Intake manifold temperature Sensor				
11	108	Atmospheric Pressure Sensor				
12	110	Coolant Temperature Sensor				
13	132	Intake manifold pressure Sensor				
14	157	Pressure relief valve(PRV)				
15	171	Environment Temperature Sensor				
16	172	Inlet air temperature sensor				
17	173	DOC Exothermal Efficiency Fault				
18	174	Fuel temperature Sensor				
20	177	Transmission oil temperature high				
21	190	Engine over speed detection				
22	444	Battery Voltage High				
23	626	Starter switch stuck				
24	636	Crank Signal disturbed				
25	637	Cam Signal Drift				
26	639	CAN communication error				
27	651	Injector High Low side Short circuit Fault				
28	652	Injector Code(IQA) Program Missing Fault				
29	653	Injector High Low side Short circuit Fault				
30	654	Injector Code(IQA) Program Missing Fault				
31	676	Glow plug Relay driver Open circuit Fault				
32	729	Glowplug relay				
33	970	Engine shut off request through CAN				
34	975	PWM FAN Output open circuit				
36	1076	Rail pressure too low for injection				
38	1207	ECU temperature sensor Low fault				
39	1382	Fuel filter pressure Sensor				
40	1485	ECU Main relay				
42	1612	Injector				
43	1639	Fan speed too high fault				

No.	SPN	Description				
44	1761	DEF Tank Level Sensor				
45	1867	ECU over temperature for SCR Monitoring				
46	2789	Turbine inlet temperature				
47	2791	EGR H-Bridge Driver				
48	3031	DEF Tank Temperature sensor				
49	3216	Upstream NOx sensor				
50	3217	Upstream NOx sensor				
51	3219	Upstream NOx sensor				
52	3224	Upstream NOx sensor				
53	3226	Downstream NOx sensor				
54	3227	Downstream NOx sensor				
55	3229	Downstream NOx sensor				
56	3234	Downstream NOx sensor				
57	3236	EGR rate slow response positive error				
58	3242	DPF(SCRF) inlet temperature sensor				
59	3251	DPF differential pressure sensor				
60	3360	DEF pressure line heater error				
61	3361	DEF dosing valve actuator				
62	3363	DEF Tank heating coolant valve				
63	3509	ECU Sensor supply1				
64	3510	ECU Sensor supply				
65	3511	ECU Sensor supply3				
66	3516	DEF Quality failure (Tampering)				
67	3517	DEF Tank level is empty				
68	3520	DEF Quality Sensor				
69	3532	DEF Level Sensor				
70	3532	DEF Level Sensor				
71	3695	DPF regeneration inhibit switch				
72	3696	DPF regeneration switch				
74	3715	DPF regeneration failure				
75	3720	DPF Ash loading High				
76	4082	Fuel metering unit				
77	4335	DEF underpressure error				
78	4344	DEF backflow Line				
79	4354	DEF Pressure line heater				
80	4355	DEF Backflow line heater				
81	4356	DEF Suction line heater				
82	4364	SCR Efficiency Too low fault				
83	4365	DEF Temperature Sensor				
84	4374	DEF Supply Pump Motor				

No.	SPN	Description				
85	4781	DPF Soot mass too high status (> 120%)				
88	5313	Rail pressure sensor				
89	5419	Throttle valve				
90	5435	DEF pressure check error				
91	5436	DEF Reverting valve				
92	5491	DEF Pressure line heater				
93	5571	Common rail pressure relief valve				
94	5629	DPF differential pressure				
95	5706	DEF Supply module heater				
96	5965	SCR system Main relay				
98	6385	Timeout Error of CAN				
99	6875	DEF Supply Pump pressure sensor				
102	7069	DEF Backflow line heater relay				
103	7069	DEF Backflow line heater				
104	7107	DEF Supply module temperature				
105	7416	DEF Supply module heater				
106	7538	DEF Supply module temperature				
107	7540	DEF Suction line heater				
108	7748	Starter relay				
109	7749	Starter relay				
110	8614	Injection cut off demand for shut off coordinator				
111	55296	ECU EEPROM Read Error				
112	55552	ECU EEPROM Write Error				
113	57344	Timeout Error of CAN				
114	61441	Timeout Error of CAN				
115	61454	Timeout Error of CAN				
116	61455	Timeout Error of CAN				
117	64923	Timeout Error of CAN				
118	65110	Timeout Error of CAN				
119	65164	Timeout Error of CAN				
120	65241	Timeout Error of CAN				
121	65265	Timeout Error of CAN				
122	65272	Timeout Error of CAN				
123	65320	Timeout Error of CAN				
124	65400	Timeout Error of CAN				
125	65401	Timeout Error of CAN				
126	65402	Timeout Error of CAN				
127	104332	Upstream NOx sensor				
128	104385	Downstream NOx sensor				
129	520601	ECU				

No.	SPN	Description				
130	520618	ECU				
131	520641	ECU				
132	520642	ECU				
133	520643	ECU				
134	520696	ECU				
135	520697	ECU				
136	520698	ECU				
137	520699	ECU				
138	520700	ECU				
139	520701	ECU				
140	520702	ECU				
141	520703	ECU				
142	520704	ECU				
143	520705	ECU				
144	520706	ECU				
145	520707	ECU				
146	520707	ECU				
147	520723	SCR Inducement Fault Level1 (EGR Block)				
148	520724	SCR Inducement Fault Level2 (EGR Block)				
149	520725	SCR Inducement Fault Level3 Final inducement (EGR Block)				
150	520726	SCR Inducement Fault Warning (EGR Block)				
151	520727	SCR Inducement Fault Level1 (Dosing Interrupt)				
152	520728	SCR Inducement Fault Level2 (Dosing Interrupt)				
153	520729	SCR Inducement Fault Level3 Final inducement (Dosing Interrupt)				
154	520730	SCR Inducement Fault Warning (Dosing Interrupt)				
155	520736	SCR Inducement Fault Level1 (Group4 – DEF Quality)				
156	520737	SCR Inducement Fault Level2 (Group4 – DEF Quality)				
157	520738	SCR Inducement Fault Level3 Final inducement (Group4 – DEF Quality)				
158	520739	SCR Inducement Fault Warning (Group4 – DEF Quality)				
159	520740	SCR Inducement Fault Level1 (Group5 – Tampering)				
160	520741	SCR Inducement Fault Level2 (Group5 – Tampering)				
161	520742	SCR Inducement Fault Level3 Final inducement (Group5 – Tampering)				
162	520743	SCR Inducement Fault Warning (Group5 – Tampering)				
163	520790	SCR inducement Repeat offense Level1				
164	520791	SCR Inducement Repeat offense Level2				
165	520792	SCR Inducement Repeat offense Level3 Final inducement				
166	520797	MoF(Monitoring of Function) Engine speed error				

Display of Detecting Control Failure

As shown in the table below, for your information, we provide correlation between Engine fault warning strategy and LCD display.

		Warning St	trategy	LCD Display			
Warning Stage	Engine Check Buzzer R		Torque Reduction	RPM Limit	Method	Message on the Display	
	0	•					
Normal	Off	Off	0%	NA	NA	NA	
Level1	On	On	Reduced	Reduced	Continuous	ENGINE MALFUNCTION CALL DOOSAN SERVICE AGENT Engine Power Reduced!	
Level2	Blinking	On	Limp home	Limp home	Continuous	ENGINE MALFUNCTION CALL DOOSAN SERVICE AGENT Engine is in Limp home Mode	
Level3	Blinking	On	Engine Stop	Engine Stop	Continuous	FATAL ENGINE ERROR CALL DOOSAN SERVICE AGENT Engine Stop after 5min	

NCD (NOx Control Diagnosis) Inducement (Diesel Stage 5 below 55 kW only)

There are several interruption level points at which the Emission System indicator and engine check lamps light up or blink and the display shows a message to warn that the NOx is not being reduced due to a fault on the engine EGR valve. The lower the point, the more the system limits the engine power and speed. As shown in the table below, for your information, we provide correlation of NCD (NOx Control Diagnosis) Inducement strategy and LCD display.

Impeded EGR and Tampering

	Condition	Repeat Offence (within 40hrs)	Inducement Strategy						
Inducement Stage			DEF Level Indicator	Emission System Indicator	Engine Check Lamp	Buzzer	Torque Reduction	RPM Limit	
			1	쇂	Ø				
Normal	NA	≥ 95% of counter value for severe inducement (100hrs)	Green ON	Off	Off	Off	0%	NA	
Level1	Impeded EGR detected		Green ON	On	Off	Off	0%	NA	
Level2	36~100hrs		Green ON	On	On	At starting & Every 20min	25%	NA	
Level3	over 100hrs		Green ON	Blinking	Blinking	Every 10min	50%	60% (about 1500rpm)	

	Condition	Repeat Offence (within 40hrs)	LCD Display			
Inducement			Method	Message on the Display		
Stage)- F1	-F1		
Normal	NA		NA	NA		
Level1	Impeded EGR detected	≥ 95% of counter	At starting & Every 20min	DPF/Aftertreatment SYSTEM MALFUNCTION CALL DOOSAN SERVICE AGENT Engine Power will be Reduced		
Level2	36~100hrs	value for severe inducement (100hrs)	Every 10min	DPF/Aftertreatment SYSTEM MALFUNCTION CALL DOOSAN SER VICE AGENT Engine Power is Reduced By 25%		
Level3	over 100hrs		Continuous	DPF/Aftertreatment SYSTEM MALFUNCTION CALL DOOSAN SERVICE AGENT Engine Power is Reduced By 50%		

Lift Truck Operation

Power Shift Transaxle

1. Start the engine. See topic "Starting the Engine."



- 2. Push down on the service brake pedal to hold the lift truck until ready to move it.
- 3. Release the parking brake.
- **NOTE:** The parking brake must be released before the directional control can be used.



 Select the direction of travel by pushing the directional lever FORWARD for forward direction or by pulling the lever BACK for reverse direction.

WARNING

A lift truck with the engine running but without an operator can move slowly (creep) if the transmission is engaged.

This could result in personal injury.

Always place the transmission control lever in the NEUTRAL (center) position and apply the parking brake before dismounting the lift truck.



- 5. Release the service brake.
- Push down on the accelerator pedal to obtain the desired travel speed. Release the pedal to decrease travel speed.

\Lambda WARNING

Sudden reversal of a loaded lift truck traveling forward can cause the load to fall or the lift truck to tip.

Stop the loaded lift truck completely, before shifting to reverse.

Failure to comply could result in personal injury.


NOTE: Where conditions permit, directional changes can be made under full power at speeds up to 6 km/h (3.73mph). A speed of 6 km/h (3.73mph) is a fast walk. Directional shift changes at speeds above 6 km/h (3.73mph) are considered abusive.

Bring the lift truck to a complete stop where load stability or other factors prevent safe operation under full power shifts.

- 7. To change the lift truck direction of travel, release the accelerator pedal.
- 8. Push down on the service brake pedal to reduce the lift truck speed as necessary.



- Move the directional lever to the desired direction of travel. Slowly push down on the accelerator pedal as the lift truck changes direction.
- When the direction change is completed, continue to push down on the accelerator pedal to obtain the desired travel speed.

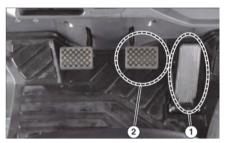

- **11.** To stop the lift truck when traveling in either direction, release the accelerator pedal (1).
- **12.** Push down on the service brake pedal (2) and bring the lift truck to a smooth stop.

Inching


NOTE: The purpose of the inching pedal is to provide precise lift truck inching control at very slow travel speed and high engine rpm. This is used for fast hydraulic lift, during load approach, pick up or load positioning.



- To inch (creep) in either direction, slowly push down on the inching pedal. This will start to apply the service brakes and allow the transmission clutch discs to slip.
- Vary the position of the inching pedal and the accelerator pedal to control the inching speed and distance.
- Pushing down further on the inching pedal will disengage the transmission completely and apply the service brakes fully to stop and hold the lift truck. This will provide full engine power for fast hydraulic lift.
- Avoid overuse of the inching pedal as this may cause the automatic transmission oil to overheat or the clutch to slip. Do not use as a footrest or for long periods of time.
- If user operates continuously pushing work or both brake pedal and accelerator pedal were depressed at the same time, it may cause the automatic transmission oil to overheat or the clutch to slip.

Steering Knob (If Equipped)

There is a steering knob available for inclusion with new truck deliveries. This option is solely intended for slow travel situations when two handed steering is not possible due to hydraulic operations.

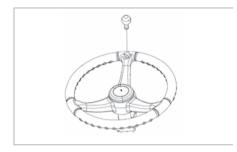

🛕 WARNING

Loss of stability can occur when a lift truck steering wheel is rotated quickly while the truck is in motion. A steering knob will assist with easy rotation of the steering wheel, but if a steering knob is improperly used (e.g., rotating the steering wheel quickly while the truck is in motion), this can contribute to truck instability and a tip over. A steering knob is intended for slow travel maneuverability ONLY.

Mono-Ped Control System (If Equipped)

The MONO-PED pedal controls the speed and direction of the lift truck. Pushing on the right side of the pedal causes the lift truck to move in REVERSE. The optional reverse lights and optional back-up alarm will be ON in the REVERSE position. Pushing on the left side of the pedal causes the lift truck to move in FORWARD.

The speed of the truck increases as the pedal is depressed





Forward-Push the left side of the pedal for FORWARD direction travel.



Neutral-The lift truck should not move when the Mono-Ped pedal is released.



Reverse-Push the right side of the pedal for REVERSE direction travel.

👠 WARNING

Sudden reversal of a loaded lift truck traveling forward can cause the load to fall or the lift trcuk to tip.

Stop the loaded lift truck completely, before shifting to reverse.

Failure to comply could result in peronsal injury.

Operating Techniques

Inching into Loads



Typical Example

 Move the lift truck slowly FORWARD into position and engage the load. The lift truck should be square with load, forks spaced evenly between pallet stringers and as far apart as load permits.



Typical Example

2. Move the lift truck FORWARD until the load touches the carriage.

Lifting the Load

1. Lift the load carefully and tilt the mast back a short distance.



Typical Example

2. Tilt the mast further back to cradle the load.



Typical Example

- 3. Operate the lift truck in reverse until the load is clear of the other material.
- 4. Lower the cradled load to the travel position.

NOTE: Lift and tilt speeds are controlled by engine rpm.

Traveling With the Load


NOTICE

Travel with the load as low as possible, while still maintaining ground clearance.



Typical Example


1. Travel with the load uphill on upgrades and downgrades.

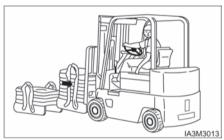

Typical Example


2. For better vision, travel in reverse with bulky loads.

Unloading

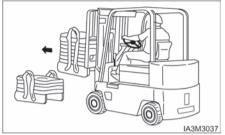

Typical Example

1. Move the lift truck into the unloading position.

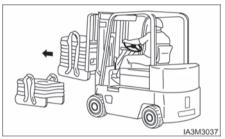


Typical Example

2. Tilt the mast FORWARD only when directly over the unloading area.

👠 WARNING

Do not tilt the mast forward with the load unless directly over the unloading area, even if the power is off.

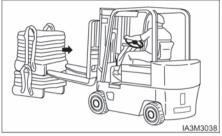

Typical Example

3. Deposit the load and BACK away carefully to disengage the forks.




Typical Example

4. Lower the carriage and forks to the travel position or to the park position.

Turning




 When turning sharp corners, keep close to the inside corner. Begin the turn when the inside drive wheel meets the corner.

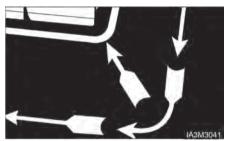


2. In narrow aisles, keep away from the stockpile when turning into the aisle. Allow for counterweight swing.

Lifting Drums or Round Objects

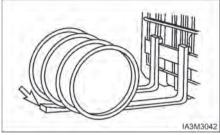

 Block drums or round objects. Tilt the mast FORWARD and slide the fork tips along the floor to get under the load.

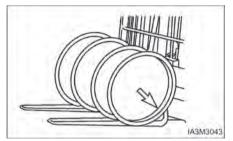


2. Before lifting, tilt the mast BACK slightly until the load is cradled on the forks.

Operating in hot weather

Keep the following points in mind when you operate the lift truck in hot weather.

- 1. Check the radiator. Clogging can cause overheating. Clean them out regularly with a blast of compressed air, also, check for leakage of water.
- 2. Check the fan belt tension and adjust to proper tension.
- 3. Even if the engine overheats and the coolant boils over, let the engine idle for a while with opening engine hood until temperature falls before shutting off the engine.

Safety instructions for attachments when transporting suspended loads

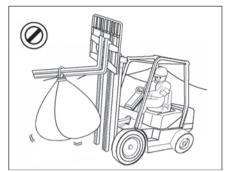



Swinging/wide loads and a reduced residual capacity can result in accidents


Adapt the travel speed to the load, less than walking pace.

Secure swinging loads for example with lifting slings.

Reduce the residual capacity and have it certified by a expert.

Failure to follow the operation precautions may cause early damage to parts.

Safety instructions for attachments when transporting wide loads

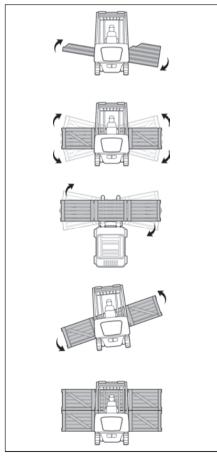

Load lateral center of gravity

Where it is necessary to lift a wide load where the lateral load center of gravity is unknown. Do a test lift first to determine lateral center of gravity and potential movement with the load during transport. Exercise extra caution when handling offcenter loads that cannot be centered.

Load Stability

Be careful when stopping or changing direction suddenly, lifting or lowering suddenly as wide loads could become unstable.

Load Swing

Be careful whilst travelling or turning, the load ends will swing wide. Make sure you have adequate clearance, and watch out for people in the area.

Load Shift

Be careful when turning, turn slowly to prevent load from shifting.

Visibility

When carrying a bulky load which blocks or restricts forward visibility the truck shall be driven with the load trailing and if necessary under the direction of a person who has visibility in the direction of travel, unless safe work practises allow otherwise.

Parking the Lift Truck

Park the lift truck on level ground, lowering the forks and tilting the mast forward until the fork tips touch the floor. Block the drive wheels when parking on an incline.




1. Park in an authorized area only. Do not block traffic



- 2. Place the transmission controls in NEUTRAL.
- 3. Engage the parking brake.
- 4. Lower the forks to the ground.

\Lambda WARNING

Blocking the wheels will prevent unexpected lift truck movement, which could cause personal injury.

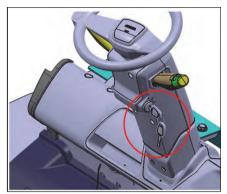

- 5. Turn the key in the ignition switch to the OFF position and remove the key.
- 6. Actuate each loading lever several times to remove the residual pressure in the respective cylinders and hoses.
- 7. Block the drive wheels if parking on an incline.

Lift Fork Adjustment

When adjusting the fork spread, be careful not to pinch your hand between forks and the carriage slot.

Hook - on type Fork



- 1. Move up the hook pin to the free position.
- 2. Raise the hook pin in each fork to side the fork on the carriage bar.
- 3. Adjust the forks in the position most appropriate for the load and as wide as possible for load stability.
- 4. When adjusting the forks, make sure that the weight of the load is centered on the truck.
- 5. After adjustment, set the fork locks to keep the forks in place.

\Lambda WARNING

Make sure the forks are locked before carrying a load.

If the fork/locking pin is not fully engaged, the fork could become unintentionally disengaged.

Storage Information

Before Storage

Before storing your lift truck, clean and inspect as the following procedures.

- Wipe away grease, oil, etc. adhering to the body of the truck with waste cloth, and use water, if needed.
- While cleaning the truck, check general condition of the truck. Especially check the truck body for dents or damage and tires for wear or nails or stones in the tread.
- Fill the fuel tank with fuel specified.
- Check for leakage of hydraulic oil, engine oil, fuel, or coolant, etc.
- Apply grease, where needed.
- Check for looseness of nuts and bolts, especially hub nuts.
- Check mast rollers to see that they rotate smoothly.
- Prime the oil into the lift cylinders by actuating the lift lever all the way several times.
- Drain off coolant completely in cold weather, if antifreeze is not used.
- Drain off DEF/Ad-Blue completely for long term storage. (If not the purity of DEF/Ad-Blue would be changed to lower quality.)

Long Time Storage

Perform the following service and checks in addition to the "Parking the lift truck" services.

- Taking the rainy season into consideration, park the machine at a higher and hard ground.
- Avoid parking on soft grounds such as asphalt ground in summer.
- Dismount the battery from the machine. Even though the machine is parked indoors, if the place is hot or humid, the battery should be kept in a dry, cool place. Charge the battery once a month.
- Apply antirust to the exposed parts which tend to rust.
- Cover components such as the breather and air cleaner which may be caught with humidity.
- The machine should be operated at least once a week. Fill the cooling system, if cooling water is discharged, and mount the battery. Start the engine and warm up thoroughly. Move the machine a little forwards and backwards. Operate the hydraulic controls several times.

To Operate the Lift Truck After a Long Time Storage

- Remove covers and antirust from each of the components and exposed parts.
- Drain the engine crankcase, transmission (clutch type machine), differential and final reduction gear, clean the inside of them and add new oil.
- Drain off foreign matter and water from the hydraulic oil tank and fuel tank.
- Remove the head cover from the engine cylinder. Oil valves and rocker shaft and check each valve for proper operation.
- Add cooling water to the specified level.
- Charge the battery and mount it on the machine. Connect the cables.
- Perform pre-operational checks carefully. (refer to "Before Starting the Engine")
- Warm up the machine.
- If deteriorated DEF/Ad-Blue warning lamp turns on and message appears, drain the fluid in the DEF/Ad-Blue tank thoroughly and refill with new DEF/Ad-Blue.
- Check level of DEF/Ad-Blue and if necessary refill DEF/Ad-Blue (refer page.72)

Transportation Hints

Lift Truck Shipping

Check travel route for overpass clearances. Make sure there is adequate clearance if the lift truck being transported is equipped with a high mast, overhead guard or cab.

To prevent the lift truck from slipping while loading, or shifting in transit, remove ice, snow or other slippery material from the loading dock and the truck bed before loading.

NOTICE

Obey all state and local laws governing the height, weight, width and length of a load.

Observe all regulations governing wide loads.

NOTICE

Remove ice, snow or other slippery material from the shipping vehicle and the loading dock.

Machine Lifting and Tiedown Information


NOTICE

Improper lifting or tiedowns can allow load to shift and cause injury and/or damage.

- 1. Weight and instructions given herein apply to lift trucks as manufactured by DOOSAN.
- 2. Use proper rated cables and slings for lifting. Position the crane for level lift truck lift.
- 3. Spreader bar widths should be sufficient to prevent contact with the lift truck.
- 4. Use the tiedown locations provided for lift truck tiedown.

Check the state and local laws governing weight, width and length of a load.

Contact your DOOSAN Lift Truck dealer for shipping instructions for your lift truck.

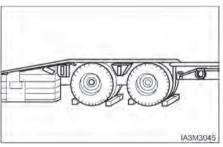

Always block the trailer or the rail car wheels before loading the lift truck.

Position the lift truck on the truck bed or the rail car.

Apply the parking brake and place the transmission control in NEUTRAL.

Turn the ignition switch to the OFF position and remove the key. If LP equipped, shut off the LP fuel tank.

Block the wheels and secure the lift truck with tiedowns.


Lifting a Forklift using a Crane

\Lambda WARNING

- 1. If lifting rope breaks, serious injury/damage may occur.
- The lifting wire rope and stay must be long enough to avoid contact with the forklift. Short rope/stay can damage the vehicle. If it's too long, it may cause interference.

If sling and LP tank contact happens during refloatation operation, you should get rid of tank of vehicle with LP tank first, and then proceed.


- 3. Rope/chain and other lifting tools must have sufficient strength, and free of any defect or wear.
- 4. Avoid impact load to the lifting devices/tools.
- 1. Check the weight, length, width and height of the vehicle before lifting.
- 2. Park the crane at an appropriate position.
- 3. Connect the rope/chain to the points A and B of the figure below.
- If the wire rope/chain contacts the vehicle, insert a rubber plate between the rope/chain and the vehicle to protect the vehicle.

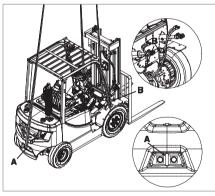


5. Lift up the vehicle slowly.

How to Fix Forklift to a Carrier

- 1. The rope/chain must have sufficient length for fixing.
- 2. Park the vehicle on a level ground.
- **3.** Set the mast vertically. Lower the fork or attachment to the lowest position.
- 4. Set all the operating devices to Neutral Position. Turn OFF the start switch.
- 5. Apply the parking brake. Stop the tires with blocks (C).
- Connect towing hooks to the mast top B (if without mast, front drive axle fix frame or front fender bottom fixing hole D) and rear tow pin A, as shown in the figure below.

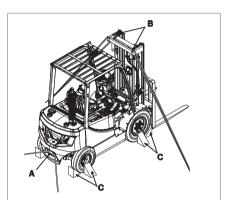

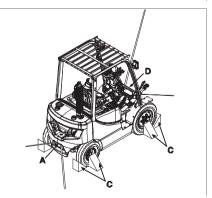

Towing Information

\Lambda WARNING

Personal injury or death could result when towing a disabled lift truck incorrectly.

Block the lift truck wheels to prevent movement before releasing the brakes. The lift truck can roll free if it is not blocked.

Follow the recommendations below, to properly perform the towing procedure.

These towing instructions are for moving a disabled lift truck a short distance, at low speed, no faster than 2 km/h (1.2 mph), to a convenient location for repair. These instructions are for emergencies only. Always haul the lift truck if long distance moving is required.

Shield must be provided on the towing lift truck to protect the operator if the tow line or bar should break.

Do not allow riders on the lift truck being towed unless the operator can control the steering and/or braking.

Before towing, make sure the tow line or bar is in good condition and has enough strength for the towing situation involved. Use a towing line or bar with a strength of at least 1.5 times the gross weight of the towing lift truck for a disabled lift truck stuck in the mud or when towing on a grade.

Keep the tow line angle to a minimum. Do not exceed a 30° angle from the straight ahead position. Connect the tow line as low as possible on the lift truck that is being towed.

Quick lift truck movement could overload the tow line or bar and cause it to break. Gradual and smooth lift truck movement will work better.

Normally, the towing lift truck should be as large as the disabled lift truck. Satisfy yourself that the towing lift truck has enough brake capacity, weight and power, to control both lift trucks for the grade and the distance involved.

To provide sufficient control and braking when moving a disabled lift truck downhill, a larger towing lift truck or additional lift trucks connected to the rear could be required. This will prevent uncontrolled rolling.

The different situation requirements cannot be given as minimal towing lift truck capacity is required on smooth level surfaces to maximum on inclines or poor surface conditions.

Consult your DOOSAN Lift Tuck dealer for towing a disabled lift truck.



1. Release the parking brake.

NOTICE

Release the parking brake to prevent excessive wear and damage to the parking brake system.

- 2. Check that the service brake pedal is released.
- 3. Key switch is in the OFF position.
- 4. Direction control lever is in neutral.
- 5. Fasten the tow bar to the lift truck.
- 6. Remove the wheel blocks. Tow the lift truck slowly. Do not tow any faster than 2 km/h (1.2 mph).

🚺 WARNING

Be sure all necessary repairs and adjustments have been made before a lift truck that has been towed to a service area is put back into operation.

Parking Brake Forced Release Method

NOTICE

When the engine stalls, the electronic parking brake remains applied at all times regardless of the status of the parking brake switch.

If the parking brake is not released before towing the vehicle, it may cause damage to the tires and driving system.

Parking Brake Forced Release Method 1 (In Case of Engine Start)

- 1. Secure the wheels with wooden blocks.
- 2. Start the engine and change the shift lever to "NEUTRAL" and then to the "2nd gear" position.
- 3. Use a spanner to fully loosen the nut on the parking brake valve in front of the transmission by turning it in the CCW direction.
- 4. Use a hex wrench to turn and fully tighten the inner bolt in the CW direction.
- 5. Install the nut (previously removed) and tighten it fully.




Restoration of Parking Brake Forced Release Method 1

- 1. Secure the wheels with blocks.
- Use a spanner to fully loosen the nut on the parking brake valve in front of the transmission by turning it in the CCW direction.
- 3. Use a hex wrench to loosen the inner bolt by making three full turns in the CCW direction.
- 4. While holding the inner bolt with a hex wrench, fully tighten the outer nut in the CW direction.
- 5. Check on the housing if the bolt height "A" is 9 \sim 12 mm.

NOTICE


If the height is lower than that, the clutch may not operate smoothly, whereas if it is higher, it may cause an oil leak.

6. Start the engine and check that the parking brake functions normally.

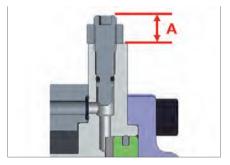

Parking Brake Forced Release Method 2 (In Case That the Engine Does Not Start)

- 1. Secure the tires with wooden blocks.
- Use a hex wrench to fully loosen the plugs in the three o'clock and nine o'clock directions on the front of the transmission.
- 3. Temporarily tighten the M8 x 30mm bolt by hand.
- 4. Use a spanner to tighten the two bolts alternately (one bolt at a time) by one turn each. (Caution: Avoid using a pneumatic impact or power tool to fully tighten the bolts as it may cause damage to the internal parts.)

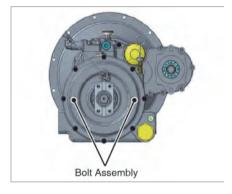

Restoration of Parking Brake Forced Release Method 2

- 1. Secure the tires with wooden blocks.
- Use a spanner to loosen alternately by one turn each the two bolts (one bolt at a time) assembled in the three o'clock and nine o'clock directions on the front of the transmission. (Caution: Avoid using a pneumatic impact or power tool to fully loosen the bolts as it may cause damage to the internal parts.)
- 3. Apply sealant to the plug (previously removed) and fully tighten it with a hex wrench.
- 4. Start the engine and check that the parking brake functions normally.

Inspection, Maintenance and Repair of Lift Truck Forks

The following section gives practical guidelines for inspection, maintenance and repair of lift truck forks. It also provides general information on the design and application of forks and the common cause of fork failures.

Lift truck forks can be dangerously weakened by improper repair or modification. They can also be damaged by the cumulative effects of age, abrasion, corrosion, overloading and misuse.

A fork failure during use can cause damage to the equipment and the load. A fork failure can also cause serious injury.

A good fork inspection and maintenance program along with the proper application can be very effective in preventing sudden failures on the job.

Repairs and modifications should be done only by the fork manufacturer or a qualified technician who knows the material used and the required welding and heat treatment process.

Users should evaluate the economics of returning the forks to the manufacturer for repairs or purchasing new forks. This will vary depending on many factors including the size and type of fork.

Forks should be properly sized to the weight and length of the loads, and to the size of the machine on which they are used. The general practice is to use a fork size such that the combined rated capacity of the number of forks used is equal to or greater than the "Standard(or rated) Capacity" of the lift truck.

The individual load rating, in most cases, will be stamped on the fork in a readily visible area. This is generally on the top or side of the fork shank.

- A fork rated at 1500 pounds at 24 inch load center will be stamped 1500X24.
- A fork rated at 2000 kg at 600 mm load center will be stamped 2000X600.

The manufacturer identification and year and date of manufacture is also usually shown.

Some countries have standards or regulations which apply specifically to the inspection and repair of forks.

Users may also refer to the International Organization For Standardization - ISO Technical Report 5057 - Inspection and Repair of Fork Arms and ISO Standard 2330 - Fork Arms-Technical Characteristics and Testing.

While there are no specific standards or regulations in the United States, users should be familiar with the requirements for inspection and maintenance of lift trucks as provided by the 29 Code Federal Register 1910.178 Powered Industrial Truck, and ANSI/ASME Safety Standard(s) B56.1, B56.5 or B56.6 as applicable to the type of machine(s) in use.

Environment Protection

When servicing this lift truck, use an authorized servicing area and an approved container to collect coolant, oil, fuel, grease, electrolyte and any other potential environmental pollutant before any lines, fittings or related items are disconnected or removed. After servicing, dispose of those materials in an authorized place and container. When cleaning the lift truck, be sure to use an authorized area.

Causes of Fork Failure

Improper Modification or Repair

Fork failure can occur as a result of a field modification involving welding, flame cutting or other similar processes which affect the heat treatment and reduces the strength of the fork.

In most cases, specific processes and techniques are also required to achieve proper welding of the particular alloy steels involved. Critical areas most likely to be affected by improper processing are the heel section, the mounting components and the fork tip.

Bent or Twisted Forks

Forks can be bent out of shape by extreme overloading, glancing blows against walls or other solid objects or using the fork tip as a pry bar.

Bent or twisted forks are much more likely to break and cause damage or injury. They should be removed from service immediately.

Fatigue

Parts which are subjected to repeated or fluctuating loads can fail after a large number of loading cycles even though the maximum stress was below the static strength of the part.

The first sign of a fatigue failure is usually a crack which starts in an area of high stress concentration This is usually in the heel section or on the fork mounting.

As the crack progresses under repetitive load cycling, the load bearing cross section of the remaining metal is decreased in size until it becomes insufficient to support the load and complete failure occurs.

Fatigue failure is the most common mode of fork failure. It is also one which can be anticipated and prevented by recognizing the conditions which lead up to the failure and by removing the fork service prior to failing. Repetitive Overloading

Repetitive cycling of loads which exceeds the fatigue strength of the material can lead to fatigue failure. The overload could be caused by loads in excess of the rated fork capacity and by use of the forks tips as pry bars. Also, by handling loads in a manner which causes the fork tips to spread and the forks to twist laterally about their mountings.

• Wear

Forks are constantly subjected to abrasion as they slide on floors and loads. The thickness of the fork blade is gradually reduced to the point where it may not be capable of handling the load for which it was designed.

Stress Risers

Scratches, nicks and corrosion are points of high stress concentration where cracks can develop. These cracks can progress under repetitive loading in a typical mode of fatigue failure.

Overloading

Extreme overloading can cause permanent bending or immediate failure of the forks. Using forks of less capacity than the load or lift truck when lifting loads and using forks in a manner for which they were not designed are some common causes of overloading.

Fork Inspection



Establish a daily and 12 month inspection routine by keeping a record for the forks on each lift truck.

Initial information should include the machine serial number on each the forks are used, the fork manufacturer, type, original section size, original length and capacity. Also list any special characteristics specified in the fork design.

Record the date and results of each inspection, making sure the following information is included.

- Actual wear conditions, such as percent of original blade thickness remaining.
- Any damage, failure or deformation which might impair the use of the truck.
- Note any repairs or maintenance.

An ongoing record of this information will help in identifying proper inspection intervals for each operation, in identifying and solving problem areas and in anticipating time for replacement of the forks.

First Installation

 Inspect forks to ensure they are the correct size for the truck on which they will be used. Make sure they are the correct length and type for the loads to be handled.

If the forks have been previously used, perform the "12 Month Inspection". If the forks are rusted, see "Maintenance and Repair".

- Make sure fork blades are level to each other within acceptable tolerances. See "Forks, Step 4," in the "2000 Service Hours or Yearly" in "Maintenance Intervals"
- 3. Make sure positioning lock is in place and working Lock forks in position before using truck. See "Forks, Step 7" in the "2000 Service Hours or Yearly" in "Maintenance Intervals".

Daily Inspection

- Visually inspect forks for cracks, especially in the heel section, around the mounting brackets, and all weld areas. Inspect for broken or jagged fork tips, bent or twisted blades and shanks.
- Make sure positioning lock is in place and working. Lock the forks in position before using the truck. See "2000 Service Hours or Yearly" in "Maintenance Intervals".
- 3. Remove all defective forks from service.

12 Months Inspection

Forks should be inspected, at a minimum, every 12 months. If the truck is being used in a multi-shift or heavy duty operation, they should be checked every six months. See "Forks" in the "2000 Service Hours or Yearly" in "Maintenance Intervals."

Maintenance and Repair

1. Repair forks only in accordance with the manufacturer's recommendations.

Most repairs or modifications should be done only by the original manufacturer of the forks or an expert knowledgeable of the materials, design, welding and heat treatment process.

- 2. The following repairs or modifications SHOULD NOT be attempted.
- Flame cutting holes or cutouts in fork blades.
- Welding on brackets or new mounting hangers.
- Repairing cracks or other damage by welding.
- Bending or resetting.

3. The following repairs MAY be performed.

- Forks may be sanded or lightly ground, to remove rust, corrosion or minor defects from the surfaces.
- Heel sections may be ground with a carbon stone to remove minor surface cracks or defects. Polish the inside radius of the heel section to increase the fatigue life of the fork. Always grind or polish in the direction of the blade and shank length.
- Repair or replace the positioning locks on hook type forks.
- Repair or replace most fork retention devices used with other fork types.
- A fork should be load tested before being returned to service on completion of repairs authorized and done in accordance with the manufacturer's recommendations.

Most manufacturers and standards require the repaired fork to be tested with a load 2.5 times the specified capacity and at the load center marked on the fork arm.

With the fork restrained in the same manner as its mounting on the lift truck, apply the test load twice, gradually and without shock. Maintain the test for 30 seconds each time.


Check the fork arm before and after the second application of the test load. It shall not show any permanent deformation.

Consult the fork manufacturer for further information as may be applicable to the specific fork involved.

Testing is not required for repairs to the positioning lock or the markings.

Tire Inflation Information

Tire Inflation

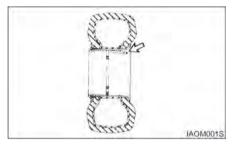

\Lambda WARNING

Personal injury or death could result when tires are inflated incorrectly.

Use a self - attaching inflation chuck and stand behind the tread when inflating a tire.

Proper inflation equipment, and training in using the equipment, are necessary to avoid overinflation. A tire blowout or rim failure can result from improper or misused equipment.

NOTICE

Set the tire inflation equipment regulator at no more than 140 kPa (20 psi) over the recommended tire pressure.

Tire Shipping Pressure

The tire inflation pressures shown in the following chart are cold inflation shipping pressures.

Size	Ply Rating or Strength Index	Shipping Pressure	
	Strength index	kPa	psi
7.00X12 Steer	12	860	125
8.25X15 Drive	14	825	120
300X15 Drive	18	785	115
7.50X16 Drive dual	12	760	110

¹ Standard tire, ply rating and inflation pressures.

The operating inflation pressure is based on the weight of a ready - to - work machine without attachments, at rated payload, and in average operating conditions. Pressures for each application may vary and should always be obtained from your tire supplier.

NOTE: Fill tires to the recommended pressures listed ±35 kPa (5 psi). Tires can be filled with nitrogen.

Tire Inflation Pressures Adjustment

A tire inflation in a warm shop area, 18° to 21°C (65° to 70°F), will be under inflated if the lift truck works in freezing temperatures. Low pressure shortens the life of a tire.

Torque Specifications

Metric Hardware

Most of the nuts, bolts, studs, and threaded holes in your lift truck are metric. In this manual we provide specifications in both metric and U.S. customary measurement. Always replace metric hardware with metric hardware. See the parts books for proper replacement.

NOTE: For proper fit, use only metric tools on metric hardware. Non-metric tools might slip and cause injury.

Torque for Standard Hose Clamps – Worm Drive

NOTICE

The chart below gives the torques for initial installation of hose clamps on new hose and for reassembly or retightening of hose clamps on existing hose.

Clamp Width	Initial Installation Torque On New Hose		
	N-m ¹	lb∙in	
16 mm (.625 in)	7.5 ± 0.5 65 ± 5		
13.5 mm (.531 in)	4.5 ± 0.5 40 ± 5		
8 mm (.312 in)	0.9 ± 0.2 8 ± 2		
Clamp Width	Reassembly Or Retightening Torque		
	N⋅m¹ lb⋅in		
16 mm (.625 in)	4.5 ± 0.5	40 ± 5	
	3.0 ± 0.5 25 ± 5		
13.5 mm (.531 in)	3.0 ± 0.5	25 ± 5	

¹ 1 Newton meter (N·m) is approximately the same as 0.1 kg·m.

Torque for Standard Bolts, Nuts, and Taperlock Studs

NOTICE

The two charts below give general torques for bolts, nuts, and taperlock studs of SAE Grade 5 or better quality.

Torques for Bolts and Nuts With Standard Threads

Thread Size	Standard Nut and Bolt Torque		
inch	N⋅m ¹	lb-ft	
1/4	12 ± 4	9±3	
5/16	25 ± 7	18±5	
3/8	45 ± 7	33 ± 5	
7/16	70 ± 15	50 ± 11	
1/2	100 ± 15	75 ± 11	
9/16	150 ± 20	110 ± 15	
5/8	200 ± 25	150 ± 18	
3/4	360 ± 50	270 ± 37	
7/8	570 ± 80	420 ± 60	
1	875 ± 100	640 ± 75	
1 1/8	1100 ± 150	820 ± 110	
1 1/4	1350 ± 175	1000 ± 130	
1 3/8	1600 ± 200	1180 ± 150	
1 1/2	2000 ± 275	1480 ± 200	

¹ 1 Newton meter (N·m) is approximately the same as 0.1 kg·m.

Torques for Taperlock Studs

Thread Size Inch	Standard Taperlock Stud Torque		
	N⋅m¹	lb-ft	
1/4	8 ± 3	6 ± 2	
5/16	17 ± 5	13 ± 4	
3/8	35 ± 5	26 ± 4	
7/16	45 ± 10	33 ± 7	
1/2	65 ± 10	48 ± 7	
5/8	110 ± 20	80 ± 15	
3/4	170 ± 30	125 ± 22	
7/8	260 ± 40	190 ± 30	
1	400 ± 60	300 ± 45	
1 1/8	500 ± 700	370 ± 50	
1 1/4	650 ± 80	480 ± 60	
1 3/8	750 ± 90	550 ± 65	
1 1/2	870 ± 100	640 ± 75	

¹ 1 Newton meter (N·m) is approximately the same as 0.1 kg·m.

Torque for Metric Fasteners

NOTICE

Be very careful never to mix metric with U.S. customary (standard) fasteners. Mismatched or incorrect fasteners will cause lift truck damage or malfunction and may even result in personal injury.

Original fasteners removed from the lift truck should be checked for any damages and kept for reassembly whenever possible. If new fasteners are needed, they must be of the same size and grade as the ones that are being replaced.

The material strength identification is usually shown on the bolt head by numbers (8.8, 10.9, etc.). This chart gives standard torques for bolts and nuts with Grade 8.8.

NOTE: Metric hardware must be replaced with metric hardware. Check parts book.

For mounting torques of main parts, Please refer to Service manual for detail.

Thread Size Metric	Standard Torque		
	N∙m¹	lb-ft	
M6	12 ± 4	9 ± 3	
M8	25 ± 7	18 ± 5	
M10	55 ± 10	41 ± 7	
M12	95 ± 15	70 ± 11	
M14	150 ± 20	110 ± 15	
M16	220 ± 30	160 ± 22	
M20	450 ± 70	330 ± 50	
M24	775 ± 100	570 ± 75	
M30	1600 ± 200	1180 ± 150	
M36	2700 ± 400	2000 ± 300	

Metric ISO² Tread

¹ 1 Newton meter (N·m) is approximately the same as 0.1 kg·m. ² ISO - International Standards Organization.

Cooling System Specifications

Coolant Information

NOTE: The following information is generic and valid for lift trucks.

Engine operating temperatures have increased to improve engine efficiency. This means proper cooling system maintenance is especially important. Overheating, overcooling, pitting, cavitation erosion, cracked heads, piston seizures, and plugged radiators are classic cooling system failures. In fact, coolant is as important as the quality of fuel and lubricating oil. Filling at over 20 liters (5 U.S. gallons) per minute can cause air pockets in the cooling system.

After draining and refilling the cooling system, operate the engine with the radiator cap removed until the coolant reaches normal operating temperature and the coolant level stabilizes. Add coolant as necessary to fill the system to the proper level.

Never operate without a thermostat in the cooling system. Cooling system problems can arise without a thermostat.

NOTICE

DOOSAN recommends that the coolant mixture contain 50% commercially available automotive antifreeze, and 50% water.

The coolant mix with concentration of antifreeze smaller than 30% does not provide sufficient corrosion protection. Concentrations over 60% adversely affect freeze protection and heat transfer rates.

Never add coolant to an overheated engine, engine damage can result. Allow the engine to cool first.

If the machine is to be stored in, or shipped to, an area with freezing temperatures, the cooling system must be protected to the lowest expected outside (ambient) temperature.

The engine cooling system is normally protected to -28°C(-20°F) with antifreeze, when shipped from the factory unless special requirements are defined.

Check the specific gravity of the coolant solution frequently in cold weather to ensure adequate protection.

Clean the cooling system if it is contaminated, the engine overheats or foaming is observed in the radiator.

Old coolant should be drained, the system cleaned and new coolant added every 2000 service hours or yearly.

Refer to topic, "Cooling System - Clean, Change" in Every 2000 Service Hours or Yearly section.

Coolant Water

Hard water, or water with high levels of calcium and magnesium ions, encourages the formation of insoluble chemical compounds by combining with cooling system additives such as silicates and phosphates.

The tendency of silicates and phosphates to precipitate out-of-solution increases with increasing water hardness. Hard water, or water with high levels of calcium and magnesium ions encourages the formation of insoluble chemicals, especially after a number of heating and cooling cycles.

DOOSAN prefers the use of distilled water or deionized water to reduce the potential and severity of chemical insolubility.

Acceptable Water		
Water Content	Limits (PPM)	
Chlorides (Cl)	50 maximum	
Sulfates (SO ₄)	50 maximum	
Total hardness	80mg/l	
Total solids	250 maximum	
PH	6.0 to 8.0	

ppm = parts per million

Using water that meets the minimum acceptable water requirement may not prevent drop-out of these chemical compounds totally, but should minimize the rate to acceptable levels.

Antifreeze

NOTICE

DOOSAN recommends using automotive antifreeze suitable for gasoline engines having aluminum alloy parts. Antifreeze of poor quality will cause corrosion of the cooling system, and thus always use automotive antifreeze prepared by a reliable maker, and never use it mixed with antifreeze of different brand.

DOOSAN recommends that the coolant mix contain 50% commercially available automotive antifreeze, or equivalent and acceptable water to maintain and adequate water pump cavitation temperature for efficient water pump performance.

Premix coolant solution to provide protection to the lowest expected outside (ambient) temperature. Pure undiluted antifreeze will freeze at -23° C (-10°F).

Use a greater concentration (above 50%) of commercially available automotive antifreeze only as needed for anticipated outside (ambient) temperatures. Do not exceed the recommendations, provided with the commercially available automotive antifreezes, regarding the coolant mixture of antifreeze to water.

Make proper antifreeze additions.

Adding pure antifreeze as a makeup solution for cooling system top-up is an unacceptable practice. It increases the concentration of antifreeze in the cooling system which increase the concentration of dissolved solids and undissolved chemical inhibitors in the cooling system. Add antifreeze mixed with water to the same freeze protection as your cooling system.

Use the chart below to assist in determining the concentration of antifreeze to use.

Antifreeze Concentrations		
Protection Temperature	Concentration	
Protection to -15°C (5°F)	30% antifreeze and 70% water	
Protection to -23°C (-10°F)	40% antifreeze and 60% water	
Protection to -37°C (-34°F)	50% antifreeze and 50% water	
Protection to -51°C (-60°F)	60% antifreeze and 40% water	

Specifications of Fuel and DEF/Ad-Blue

General Fuel Information

Use only the fuel recommended in this section.

NOTICE

Fill the fuel tank at the end of each day of operation to drive out moisture laden air and to prevent condensation. Maintain a constant level near the top of the day tank to avoid drawing moisture into the tank as the level decreases. Do not fill the tank to the top. Fuel expands as it gets warm and can overflow.

Do not fill the fuel filters with fuel before installing them. Contaminated fuel will cause accelerated wear to the fuel system parts.

Drain the water and sediment from main fuel storage tank before it is refilled. This will help prevent water and/or sediment from being pumped from the fuel storage tank into the engine fuel tank.

Diesel Specifications

These engines utilize Tier 4 standards, the use of Ultra Low Sulfer Diesel (ULSD) is mandatory for these engines.

Diesel Fuel Specification	Location
ASTM D975 No.1D/2D S15	USA
EN590:96	EU
IS0 8217 DMX	International
BS 2869-A1 or A2	United Kingdom
JIS K2204 Grade No. 2	Japan
KSM-2610	Korea
GB252	China

Additional Technical Fuel Requirements

- Cetane Rating: The minimum recommended Fuel Cetane Rating is 45. A cetane rating greater than 50 is preferred, especially for ambient temperatures below 20 °C (4 °F) or elevations above 1500 m.
- Diesel Fuel Specification Type and Sulfer Content % (ppm) used, must be compliant with all applicable emission regulations for the area in which the engine is operated.
- DO NOT USE Fuels that have sulfer content greater than 0.0015 % (15 ppm).
- Diesel fuels specified to EN 590 or ASTM D975 are recommended.
- No.2-D is a distillate fuel of lower volatility for engines in industrial and heavy mobile service. (SAE J313 JUN87)
- These engines utilize Tier 4 standards, the use of Ultra Low Sulfer Diesel is mandatory for these engines, when operated in US EPA regulated areas. Therefore, please use No.2-D S15 diesel fuel as an alternative to
- No.2-D, and use No.1-D S15 diesel fuel as an alternative to No.1-D for ambient temperature below 10 °C (14 °F).
- a) No.1-D or No.2-D, S15: Ultra Low Sulfer Diesel (ULSD) 15 ppm or 0.0015 wt.%

Bio-Diesel Fuels

In Europe and the United States, as well as some other countries, non-mineral oil based fuel resources such as RME (Rapeseed Methyl Ester) and SOME (Soybean Methyl Ester), collectively known as FAME (Fatty Acid Methyl Esters), are being used as extenders for mineral oil derived diesel fuels.

Doosan approves the use of bio-diesel fuels that do not exceed a blend of 5% (in volume) of FAME with 95% (by volume) of approved mineral oil derived diesel fuel. Such bio-diesel fuels are known in the marketplace as B5 diesel fuels.

These 95 diesel fuels must meet certain requirements.

- 1. The bio-fuels must meet the minimum specifications for the country in which they are used.
- In Europe, bio-diesel fuels must comply with the European Standard EN14214.
- In the United States, bio-diesel fuels must comply with the American Standard ASTM D-6751.

Bio-fuels should be purchased only from recognized and authorized diesel fuel suppliers.

Precautions and concerns regarding the use of bio-fuels:

- 1. Free methanol in FAME may result in corrosion of aluminum and zinc FIE components.
- 2. Free water in FAME may result in plugging of fuel filters and increased bacterial growth.
- High viscosity at low temperatures may result in fuel delivery problems, injection pump seizures, and poor injection nozzle spray atomization.
- FAME may have adverse effects on some elastomers (seal materials) and may result in fuel leakage and dilution of the engine lubricating oil.
- 5. Even bio-diesel fuels that comply with a suitable standard as delivered, will require additional care and attention to maintain the quality of the fuel in the equipment or other fuel tanks. It is important to maintain supplied fuels clean and fresh. Regular flushing of the fuel system, and/or fuel storage containers, is necessary.
- 6. The use of bio-diesel fuels that do not comply with the standards as agreed to by the diesel engine manufacturers and the diesel fuel injection equipment manufacturers, or biodiesel fuels that have degraded as per the precautions and concerns above, may affect the warranty coverage of your engine.

Lubricant Specifications

Lubricant Information

Certain abbreviations follow Society of Automotive Engineers (SAE) J754 nomenclature and some classifications follow SAE J183 abbreviations.

The MIL specifications are U.S.A. Military Specifications.

The recommended oil viscosities can be found in the Lubricant Viscosities chart in this publication.

Grease is classified by the National Lubricating Grease Institute (NLGI) based on ASTM D217-68 Worked Penetration characteristics which are given a defined consistency number.

Engine Oil (DEO and EO)

The following oil specifications provide guidelines for the selection of commercial products:

- API CJ-4 for 500 hours service interval
- API CK-4 for 1,000 hours service interval

NOTICE

Failure to follow the oil recommendations can cause shortened engine lift due to carbon deposits or excessive wear.

Consult the EMA Lubricating Oils Data Book for a listing of oil brands.

NOTE: The percentage of sulfur in the fuel will affect the engine oil recommendations. For fuel sulfur effects, the Infrared Analysis or the ASTM D2896 procedure can be used to evaluate the residual neutralization properties of an engine oil. The sulfur products formation depends on the fuel sulfur content, oil formulation, crankcase blowby, engine operating conditions and ambient temperature.

Hydraulic Oil (HYDO)

The following commercial classifications can be used in the hydraulic system.

- ISO 6743/4 HM
- AFNOR NFE 48-603 HM
- DIN 51524 TEIL 2 H-LP
- HAGGLUNDS DENISON HFO-HF2
- CINCINNATI P68,69,70

Viscosity: ISO VG 32

Industrial premium hydraulic oils that have passed the Vickers vane pump test (35VQ25). These oils should have antiwear, antifoam, antirust and antioxidation additives for heavy duty use as stated by the oil supplier. ISO viscosity grade of 32 would normally be selected.

NOTICE

Make-up oil added to the hydraulic tanks must mix with the oil already in the systems. Use only petroleum products unless the systems are equipped for use with special products. If the hydraulic oil becomes cloudy, water or air is entering the system. Water or air in the system will cause pump failure. Drain the fluid, retighten all hydraulic suction line clamps, purge and refill the system. Consult your DOOSAN Lift Truck dealer for purging instructions.

Transmission Oil (TDTO)

NOTICE

This oil is formulated for transmissions and drive trains only, and should not be used in engines. Shortened engine life will result.

- NOTE: Multi-grade oils are not blended by DOOSAN for use in transmissions. Multi-grade oils which use high molecular weight polymers as viscosity index improvers lose their viscosity effectiveness by permanent and temporary shear of the viscosity index improver and therefore, are not recommended for transmission and drive train compartments.
- NOTE: Failure to follow this recommendation can cause shortened transmission life due to material incompatibility, inadequate frictional requirements for disk materials and/or excessive gear wear.

Select the oil that meets the following specification.

- GM DEXRON III
- FORD MERCON V

Drive Axle Oil

NOTE: Failure to follow the recommendation will cause shortened life due to excessive gear wear.

Brake Fluid



Use heavy duty hydraulic brake fluid certified by oil supplier to meet the latest version of following classifications.

- ISO 6743/4 HM
- AFNOR NFE 48-603 HM
- DIN 51524 TEIL 2 H-LP
- HAGGLUNDS DENISON HFO-HF2
- CINCINNATI P68,69,70

Viscosity: ISO VG32

Brake reservoir oils that have passed the Vickers vane pump test (35VQ25). These oils should have antiwear, antifoam, antirust and antioxidation additives for heavy duty use as stated by the oil supplier. ISO viscosity grade of 32 would normally be selected.

The following products are authorized for use.

Supplier	Product Name
TOTAL	AZOLLAZS
SHELL	TELLUS
MOBIL	DTE20S'
CALTEX	RANDO HD
ESS	NOTO H
CASTROL	HYSPIN AWS

Lubricating Grease (MPGM)

Use Multipurpose Molybdenum Grease (MPGM) for all lubrication points. If MPGM grease can not be used, a multipurpose type grease which contains 3% to 5% molybdenum disulfide can be used.

NLGI No.2 grade is suitable for most temperatures. Use NLGI No.1 or No.0 grade for extremely low temperature.

Lubricant Viscosities and Refill Capacities

Lubricant Viscosities					
for Ambient (Outside) Temperatures Compartment Oil °C °F				F	
or System	Viscosities	Min	Max	Min	Max
	SAE 5W30	-30	+30	-22	86
	SAE10W30	-20	+30	-4	86
Engine	SAE5W40	-30	+40	-22	104
Crankcase (Diesel)	SAE10W40	-20	+40	-4	104
API CJ/CK-4	SAE15W40	-15	+40	5	104
	SAE15W50	-15	+50	5	122
	SAE20W50	-10	+50	14	122
Hydraulic and Power Steering System ISO 6743/4 HM	ISO VG32	-20	+30	-4	+86
	ISO VG46	-10	+40	+14	+104
	ISO VG68	0	+50	+32	+122
Power Shift Transmission and Drive Axle Housing DEXRON III	DEXRON III	-20	+50	-4	+122
Brake Reservoir	ISO VG32	-20	+30	-4	+86
(Only for OCDB) ISO 6743/4HM	ISO VG46	-10	+40	+14	+104
	ISO VG68	0	+50	+32	+122

Lubricant Viscosities

The SAE grade number indicates the viscosity of oil. A proper SAE grade number should be selected according to ambient temperature.

Capacities for Refilling

Refill Capacities-(Approximate)			
Compartment or System Liters		U.S. Gal.	
Engine Crankcase w/Filter	12.6	3.33	
Cooling System /Coolant Reservoir tank	13.0	3.43	
Fuel Tank – Diesel	90.0	23.78	
Power Shift Transmission	20.0	5.28	
Hydraulic & Power Steering System	73.0	19.3	
Brake Reservoir	0.6	0.16	

Maintenance Intervals

NOTICE

Never exceed the Maintenance Intervals specified in the manual. Defects and/or damage to the important functional components may be resulted in.

NOTICE

All maintenance and repair, except Every 10 Service Hours or Daily, on the lift truck must be performed by qualified and authorized personnel only.

NOTICE

Careless disposal of waste oil can harm the environment and can be dangerous to persons. Always dispose of waste oil to authorized personnel only.

When Required

Battery Terminal - Clean, Inspect134
SCR Cleaning - DeSOx134
Water Separator138
Discharge of Foreign Matter in the Fuel138
Priming the Fuel System139
Seat, Hood Latch & Support Cylinder - Check,
Lubricate139
Fuses, Bulbs & Circuit Breaker - Change, Reset.140
Circuit Breaker141
Tires and Wheels - Check, Inspect141
Carriage Roller Extrusion - Check, Adjust142

Every 10 Service Hours or Daily

Inspect Engine for Fluid Leaks	143
Engine Oil Level - Check	143
Coolant Level - Check, Clean	143
Inspect Engine for Exhaust Leaks	144
Walk - Around Inspection - Inspect	144
Transmission Oil Level - Check	145
Mast Channels – Lubricate	145
Brake Oil Level – Check	145
Hydraulic Oil Level – Check	146
Drive Axle Oil Level - Check	146

First 50 - 100 Service Hours or a Week

Engine Oil & Filter - Change	. 147
Drive Axle Oil, Transmission Oil, Oil Filter & Stra	iner
- Clean, Change	.148
Parking Brake - Test, Adjust	. 150

Every 500 Service Hours or 3 Months

Air Intake System - Check, Clean	;
Mast Hinge Pins – Lubricate	
Tilt Cylinders - Check, Adjust, Lubricate 154	ŀ
Crosshead Rollers - Inspect 155	,
Carriage Side Rollers Thrust (If Equipped) -	
Lubricate	,
Carriage Sideshifter (If Equipped) - Lubricate 156	,
Mast, Carriage, Lift Chains, & Attachments - Check,	
Lubricate	
Carriage Side Rollers - Lubricate 157	'
Parking Brake - Test, Adjust158	,
Horn & Lights (If Equipped) - Check 158	5
Overhead Guard - Inspect 158	6
Steer Suspension - Inspect 159	ł
Steering Mechanism - Check, Lubricate159	,
Wheel Bolts and Nuts - Inspect 160)

Every 1000 Service Hours or 6 Months

Air Intake System - Change Fuel Lines & Fittings - Check Engine Oil & Filter - Change (with CK-4 Grade	161
	161
Fuel Filter (with Pre/Main Filter) - Change	162
Belt - Check, Adjust	163
Hydraulic Return Filter - Change	163
Air Breather - Change	164
Lift Chains - Test, Check, Adjust	
Universal Joint - Inspect, Lubricate	

Every 2000 Service Hours or Yearly

Drive Axle Oil, Transmission Oil, Oil Filter & Strainer					
- Clean, Change	167				
Steer Wheel Bearings - Reassemble	167				
Cooling System - Clean, Change	168				
Forks - Inspect	169				

Every 2500 Service Hours or 15 Months

Hydraulic Oil - Check, Clean, Change	171
Inspect Battery System	171

Every 5000 Service Hours or 30 Months

DPF Maintenance (DM03V Stage 5 Engine Only) -	
Ash Cleaning172	

Environment Protection

Quick Reference to Maintenance Schedule				1st			Ev	ery		
ITEMS SERVICES PAGE		When Required	50-100 Service Hours or a Week	10 Service Hours or Daily	500 Service Hours or 3 Months	1000 Service Hours or 6 Months	2000 Service Hours or Yearly	2500 Service Hours or 15 Months	5000 Service Hours or 36 Months	
Air Breather	Change	164					0			
Air Intake System	Check, Clean	151				0				
Air Intake System	Change	161					0			
Battery Terminal	Clean, Inspect	134	0							
Belt	Check, Adjust	163					0			
Brake Oil Level	Check	145			0					
Carriage Roller Extrusion	Check, Adjust	142	0							
Carriage Side Rollers	Lubricate	157				0				
Carriage Side Rollers Thrust (If Equipped)	Lubricate	156				0				
Carriage Sideshifter (If Equipped)	Lubricate	156				0				
Circuit Breaker		141	0							
Coolant Level	Check, Clean	143			0					
Cooling System	Clean, Change	168						0		
Crosshead Rollers	Inspect	155				0				
Discharge of Foreign Matter in the Fuel DPF Maintenance (DM03V Stage 5 Engine Only) - Ash Cleaning		138 172	0							0
Drive Axle Oil Level	Check	146			0					
Drive Axle Oil, Transmission Oil, Oil Filter & Strainer	Clean, Change	148, 167		0	-			0		
Engine Oil & Filter (with CJ-4 Grade Only)	Change	154				0				
Engine Oil & Filter (with CK-4 Grade Only)	Change	161					0			
Engine Oil & Filter	Change	147,153,161		0		0	0			
Engine Oil Level	Check	143			0					
Forks	Inspect	169						0		
Fuel Filter	Change	153				0				
Fuel Filter (with Pre/Main Filter)	Change	162					0			
Fuel Lines & Fittings	Check	161					0			
Fuses, Bulbs & Circuit Breaker	Change, Reset	140	0							
Horn & Lights (If Equipped)	Check	158				0				
Hydraulic Oil	Check, Clean, Change	171							0	
Hydraulic Oil Level	Check	146			0					
Hydraulic Return Filter	Change	163					0			
Inspect Battery System		171							0	
Inspect Engine for Exhaust Leaks		144			0					
Inspect Engine for Fluid Leaks		143			0					
Lift Chains	Test, Check, Adjust	164					0			

Quick Reference to Maintenance Schedule				1st			Ev	ery		
ITEMS SERVICES PAGE			When Required	50-100 Service Hours or a Week	10 Service Hours or Daily	500 Service Hours or 3 Months	1000 Service Hours or 6 Months	2000 Service Hours or Yearly	2500 Service Hours or 15 Months	5000 Service Hours or 36 Months
Mast Channels	Lubricate	145			0					
Mast Hinge Pins	Lubricate	154				0				
Mast, Carriage, Lift Chains, & Attachments	Check, Lubricate	157				0				
Overhead Guard	Inspect	158				0				
Parking Brake	Test, Adjust	149, 158		0		0				
Priming the Fuel System		139	0							
SCR Cleaning - DeSOx		134	0							
Seat, Hood Latch & Support Cylinder	Check, Lubricate	139	0							
Steer Suspension	Inspect	159				0				
Steer Wheel Bearings	Reassemble	167						0		
Steering Mechanism	Check, Lubricate	159				0				
Tilt Cylinders	Check, Adjust, Lubricate	154				0				
Tires and Wheels	Check, Inspect	141	0							
Transmission Oil Level	Check	145			0					
Drive Axle Oil, Transmission Oil, Oil Filter & Strainer	Clean, Change	148, 167		0				0		
Universal Joint	Inspect, Lubricate	166					0			
Walk - Around Inspection	Inspect	144			0					
Water Separator		138	0							
Wheel Bolts and Nuts	Inspect	160				0				

When Required

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Battery Terminal - Clean, Inspect

\Lambda WARNING

Batteries give off flammable fumes that can explode.

Do not smoke when observing the battery electrolyte levels.

Electrolyte is an acid and can cause personal injury if it contacts skin or eyes.

Always wear protective glasses when working with batteries.



Typical Example

Diesel Engine Truck

- 1. Clean the top of the battery and terminals.
- 2. Check terminals for corrosion. Coat terminals with heavy grease.

SCR Cleaning - DeSOx

SCR Cleaning - DeSOx Display Pop-up


In order that the SCR system may maintain its exhaust cleaning efficiency at a proper level, it should be periodically initialized—"SCR cleaning."



DOC & SCR Position



SCR Cleaning switch Position

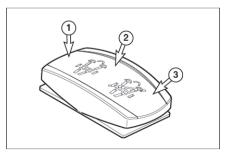

SCR Cleaning switch

NOTICE

Keep monitoring the vehicle condition via the SCREEN display.

- At a workplace which is near inflammables or, heavily populated, or an indoor space, disable the SCR cleaning function.
- · Be careful of the high temperature of the exhaust tube or other parts during SCR cleaning.
- Do not operate the vehicle (e.g. pushing the accelerator pedal) during SCR cleaning.
- · Do not switch off the ignition during SCR cleaning. The SCR system might be damaged.

Automatic SCR Cleaning

The ECU attempts to start SCR cleaning during working-"automatic SCR cleaning"-at a proper moment after determining the moment. Once automatic SCR cleaning starts, the high temperature indicator lamp lights up with a popup appearing for the operator to notice it



Display that notifies the operator of automatic SCR cleaning

If automatic SCR cleaning is failed due to a low exhaust temperature, you should perform it after the vehicle stops. Therefore, it is recommended to keep the vehicle working as far as possible in order to ensure automatic SCR cleaning is fully completed. While automatic SCR cleaning is being carried out, exhaust emissions above

500 °C may cause fires or burns.

Setting this switch to position "3" prohibits automatic SCR Cleaning in an environment subject to dust, explosion or regulated noise level. At position "3", a pop-up appears as shown below:

The switch returns to the normal position of "2" after pressed by the operator to position "1". However, it does not return when pressed to position "3" and the operator shall return the switch from position "3".



SCR Cleaning inhibited

If automatic SCR cleaning is failed, you should carry it out a while after the vehicle starts working.

A pop-up on the SCR Display warns the operator to perform SCR Cleaning. (3 warnings: at 10 hrs remaining, 5 hrs remaining, Immediate)



Exemplary warning - 10 hrs remaining

Limit the engine power and stop the current work when SCR cleaning is not used; you will be violating the exhaust regulations if you do not.

To carry out SCR cleaning safely, observe the following steps:

- 1. Park the vehicle at a safe place. White smoke can be emitted during SCR Cleaning.
- 2. Remove the flammable material or stained oil from exhaust system. High temperature of exhaust system and gas can cause fire.
- 3. Engage the parking brake, and make sure the gear is in neutral.
- 4. Allow engine to warm up sufficiently; the SCR cleaning is not possible in cold condition.
- After holding down the switch at the "3" position for three seconds, check that SCR cleaning has started.
- 6. Once SCR cleaning finishes, the LCD display will show a notification.

Press this switch and release it after 3 sec, SCREEN Cleaning will be started and the engine speed will be increased. Screen pop-up provides information on the warning up and cleaning process.



Warming up process



Proceeding



Completed

Display for SCR Cleaning

As shown in the table below, for your information, we provide Information about correlation between Symbol and message (Display).

No	State	SYMBOL	Lamp	Message on the Display			
1			-	Recommend SCR Cleaning in 10hr Need Engine Warm up			
2	Request Service SCR Cleaning		ON	Should Do SCR Cleaning in 5hr Need Engine Warm up			
3			Blink Must Do SCR Cleaning Imm Need Engine Warm				
4	Progressing Passive SCR Cleaning Progressing Service SCR Cleaning	шîĵ	ON Hot Exhaust Ga				
5	Service SCR Cleaning Preparation Lamp		ON	Warming up for SCR Cleaning			
6	Under Cleaning SCR	(jîm	ON	Cleaning SCR DO NOT STOP ENGINE			
7	SCR Cleaning Finish	-	ON	SCR Cleaning completed			
8	SCR Cleaning inhibit switch ON	Ŵ	ON	SCR Cleaning is inhibited			

Water Separator

- If the engine check lamp indicates any fault related to water separator, remove the water in the separator immediately, regardless of regular maintenance schedule. (SPN 97)
- Lower part of the fuel filter is the water separator, in which a sensor is installed to monitor water and contaminants and transmit warning signal to the indicator to notify the operator of the water accumulated in the separator.
- 3. Drain the water in the water separator as follows.
- 4. Place an approved container under the water separator for collecting the water and contaminants.
- Open the drain cock on the bottom of the water separator of the fuel filter. Drain the water in the water separator. (Figure, 1 for Main Filter Only, 2 for Pre Filter Option)
- 6. Close the drain cock by hand.
- 7. Having completed above procedures, check that the fuel system is filled with fuel. Filling fuel system with fuel.



👠 WARNING

Prior to any service or maintenance activity, Test Fuel System for Leaks.

Discharge of Foreign Matter in the Fuel

The pressure sensor warning function is activated when foreign substances are detected in the fuel. Once triggered, one or all of the following may be activated depending on the vehicle settings: warning buzzer, engine check lamp illumination, and derating of engine power. In the event that the pressure sensor warning is triggered, check the system as follows:

1. Take off the fuel tank cover and remove the filter.



- 2. Wipe foreign substances off the filter with a clean cloth or blow them off using an air compressor.
- 3. Put the filter and cover back on the fuel tank.
- 4. Turn the key ON after assembly, and check that the warning function operates normally.
- If the pressure sensor warning persists, replace the fuel filter cartridge. This is one of the items described in the sub-section: "Every 500 Service Hours or 3 Months".

NOTICE

Be careful not to damage the fuel tank's filter when cleaning it. A damaged filter may lead to contamination with foreign substances, resulting in a serious engine problem.

🚺 WARNING

Before servicing or maintenance, test the fuel system for leaks.

Priming the Fuel System

In any one of the following cases, the fuel system requires priming.

Before starting up the engine for the first (priming completed at factory), exhaust all fuel and refuel the fuel tank.

After replacing fuel filter or other part of the fuel system, drained water from oil-water separator, or after any maintenance work with the fuel system, perform priming as deAftertreatmentibed below:

Place an approved container under the air bleed port.

Loosen the plug of air bleed port (1).

Press the pump (3) with your hand until the oil comes out. In this operation, all the fuel hoses must be connected. (2)

Retighten the plug of air bleed port (1).

Wipe out spilled fuel and dispose of properly.


Never try to crank the engine with the starting motor to feed the fuel system with fuel. Otherwise, the starting motor can be overheated and the coil, pinion, and/or ring gear can be damaged.



Seat, Hood Latch & Support Cylinder - Check, Lubricate



 Check the operation of the seat adjuster rod. Make sure that the seat slides freely on its track. Lightly oil the seat slider tracks if necessary.

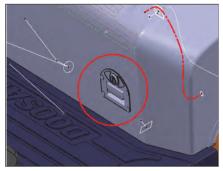

2. Pull the latch to raise the hood and seat assembly. Make certain the support cylinder will hold the hood open.



3. Lightly oil the hood latch mechanism and the rod for the hood support cylinder.

Fuses, Bulbs & Circuit Breaker -Change, Reset

Fuses

NOTE: If a fuse filament separates, use only the same type and size fuses for replacement. If the filament in a new fuse separates, have the circuits and instruments checked.

NOTICE

Always replace fuses with ones of the correct ampere rating.



Remove the front cover from the box. The fuses are in the box.



Fuse - Protects an electrical circuit from an overload. Opens (filament separates) if an overload occurs.

Fuses are identified as follows :

- 1. Horn 10 A
- 2. Head Lamp, Clearance Lamp, Tail Lamp 15 A
- 3. Lamp Relay Coil, Fwd/Rev. Solenoid, Rear Lamp Relay & Back-up Lamp/Alarm 15 A
- 4. Instrument Panel, Hour Meter, Preheat Controller, Fuel Shut off Solenoid - 15 A
- 5. Stop Lamp, Turn Signal Lamp, Strobe Lamp 15 A
- 6. Starter Relay 10 A

Bulbs

Bulbs are identified as follows:

[Diesel Engine]

- 1. Bulb head lamp halogen (24V 55W)
- *2. Bulb back up (24V 10W)
- ***3**. Bulb turn signal (24V 25W)
- *4. Bulb stop & tail (24V 25/10W)

*Optional lamp or light

Circuit Breaker



1. Raise the hood and seat assembly. Make sure the support cylinder securely holds the hood open.



Typical Example Diesel Engine Truck

- 2. The main circuit breaker is located on the rear of the support for the controls.
- NOTE: To reset circuit breakers push in on the button. The button should stay in if the breaker is reset. If the button will not stay in, or comes out shortly after reset, have the circuits checked.

Tires and Wheels - Check, Inspect

🛝 WARNING

Servicing and changing tires and rims can be dangerous and should be done only by trained personnel using proper tools and procedures.

If correct procedures are not followed while servicing tires and rims, the assemblies could burst with explosive force and cause serious physical injury or death.

Follow carefully the specific information provided by your tire servicing man or dealer.

Check Inflation and Damage

Inspect tires for wear, cuts, gouges and foreign objects. Look for bent rims and correct seating of locking ring.

Check tires for proper inflation. See "Tire Inflation Pressures".

To inflate tires always use a clip-on chuck with a minimum 60 cm (24 inches) length of hose to an in-line valve and gauge.

Always stand behind the tread of the tire, NOT in front of the rim.



Do not reinflate a tire that has been run while flat or underinflated, without first checking to make sure the locking ring on the rim is not damaged and is in the correct position. When tires are changed, be sure to clean all rim parts and, if necessary, repaint to stop detrimental effects of corrosion. Sand blasting is recommended for removal of rust.

\Lambda WARNING


Deflate tire before removing wheel nuts from the truck.

Check all components carefully and replace any cracked, badly worn, damaged and severely rusted or corroded parts with new parts of the same size and type. If there is any doubt, replace with new parts.

Do not, under any circumstances, attempt to rework, weld, heat or braze any rim components.

Carriage Roller Extrusion - Check, Adjust

- 1. Set the mast vertical.
- 2. Lower the carriage completely.
- On full free lift and full free triple lift models, the bottom of the inner mast must be flush with the bottom of the stationary mast.

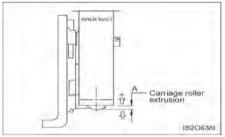

- Measure the distance from the bottom of the inner upright to the bottom of carriage bearing.
- 5. The measurement (A) must be as follows in Chart below.

Height of carriage roller extrusion (A) [unit : mm]		
STD mast	FF mast	FFT mast
-7	43	43

Every 10 Service Hours or Daily

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Inspect Engine for Fluid Leaks

- 1. Start the engine and allow it to reach operating temperatures.
- 2. Turn the engine off.
- 3. Inspect the entire engine for oil and/or coolant leaks.
- 4. Repair as necessary before continuing.


Engine Oil Level - Check

📐 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Park the lift truck on level ground, with the forks lowered, the parking brake applied, the transmission in NEUTRAL, and the engine stopped.

1. Raise the hood and seat assembly. Make certain the support cylinder securely holds the hood open.

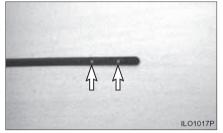

 The oil level should be close as possible to upper point of the oil dip stick. Do not refill more than upper point.



An excessive amount of oil may cause "Dieseling", resulting in damage to the engine.

Coolant Level - Check, Clean

Check Coolant Level

👠 WARNING


At operating temperature, the engine coolant is hot and under pressure.

Steam can cause personal injury.

Check the coolant level only after the engine has been stopped and the filter cap is cool enough to touch with your bare hand.

Remove the filter cap slowly to relieve pressure.

Cooling system conditioner contains alkali. Avoid contact with the skin and eyes to prevent personal injury.

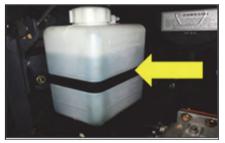

- Observe the coolant level with engine cold. Maintain coolant level to the proper line on expansion bottle. If the expansion bottle has no coolant, it will be necessary to check coolant at the radiator filter neck.
- 2. Remove the radiator cap. Fill radiator to the top of the filter neck. Inspect radiator cap. Replace if damaged. Install the radiator cap.



- Start and run the engine to stabilize the coolant level in the filter neck. If low add coolant until it reaches the top of the filter neck. Install the radiator cap. Observe coolant level in the expansion bottle. If necessary, add coolant to bring the coolant to the appropriate line on the expansion bottle.
- 4. Stop the engine.
- 5. Inspect the cooling system for leaks, hose cracks or loose connections.

👠 WARNING

Pressure air can cause personal injury.

When using pressure air for cleaning, wear a protective face shield, protective clothing and protective shoes.

Maximum air pressure must be less than 205 kPa (30 psi) for cleaning purposes.

6. Blow any dust and lint from the radiator fins.

Inspect Engine for Exhaust Leaks

Start the engine and allow it to reach operating temperatures.

Perform visual inspection of exhaust system.

Repair any/all leaks found.

Walk - Around Inspection - Inspect

For maximum service life of the lift truck, make a thorough walk-around inspection. Look around and under the truck for such items as loose or missing bolts, debris or dirt buildup, fuel, oil or coolant leaks and cut or gouged tires.

Have any repairs made and debris removed, as needed.




- Inspect the tires and wheels for cuts, gouges, foreign objects, inflation pressure and loose or missing bolts.
- 2. Inspect the mast and lift chains for wear, broken links, pins and loose rollers.
- 3. Inspect the hydraulic system for leaks, worn hoses or damaged lines.
- 4. Look for transmission and drive axle leaks on the lift truck and on the ground.
- 5. Inspect the operator's compartment for loose items and cleanliness.
- 6. Inspect the instrument panel for broken gauges and indicator lights.
- 7. Test the horn and other safety devices for proper operation.
- 8. Inspect the cooling system for leaks, worn hoses and debris buildup.
- 9. Inspect engine compartment for oil, coolant and fuel leaks.
- 10. Inspect the forks.
- Visually inspect forks for cracks, especially in the heel section, around the mounting brackets, and all weld areas.
- Inspect for broken or jagged fork tips, bent or twisted blades and shanks.
- Make sure positioning lock is in place and working.
- Lock the forks in position before using the truck. See Step 7 of "Forks" in "Every 2000 Service Hours or Yearly".
- Remove all defective forks from service.

Transmission Oil Level - Check

🛝 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

- 1. Start and operate the lift truck until the engine reaches normal operating temperature.
- Park the lift truck on level ground, with the forks lowered, the parking brake applied, and the transmission controls in NEUTRAL.
- With the brake applied and the engine at low idle, shift the directional control lever to forward and then to reverse, to fill the clutches.
- Shift the direction control lever to the NEUTRAL position.

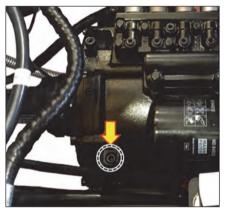

- 5. Open the access door in floor plate.
- 6. Remove the dipstick/filter cap. Observe the oil level.
- 7. Maintain the oil level between the Min and Max marks on the dipstick/filter cap.

When the oil temperature is 40°C approximately, the cold side mark on the dipstick is applicable. When the oil temperature is 80°C approximately, the hot side mark on the dipstick is applicable.


- 8. Close the access door in floor plate.
- 9. Stop the engine.

Mast Channels - Lubricate



The channels on the roller-type mast require a break-in period. Apply a light film of lubricant on the channels where the rollers ride. This will prevent metal peel until the rollers set a pattern.

Brake Oil Level – Check

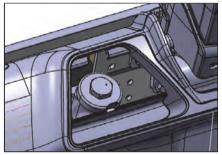

The brake reservoir is located on the left side of the steering column.

- 1. Remove the filler cap.
- 2. Maintain the brake fluid level to the fluid level mark on the brake system reservoir.
- 3. Clean the filter cap and install it again.

Hydraulic Oil Level – Check

🛝 WARNING

At operating temperature, the hydraulic tank is hot and under pressure.

Hot oil can cause burns.

Remove the filter cap only when the engine is stopped, and the cap is cool enough to touch with your bare hand. Remove the filter cap slowly to relieve pressure.

- Operate the lift truck for a few minutes to warm the oil. Park the lift truck on a level surface, with the forks lowered, mast tilted back, parking brake engaged, transmission in NEUTRAL and the engine stopped.
- 2. Raise the hood and seat assembly. Make sure the air lift cylinder securely holds the hood open.




Remove the dipstick/ filter cap. Maintain the oil level to the FULL mark on the breather/dip stick.

Drive Axle Oil Level – Check

🛝 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Park the lift truck on a level surface. Apply the parking brake. The engine is at the low idle. Place the directional control level in NEUTRAL.

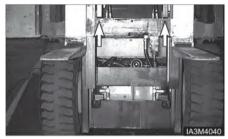

- 1. Lift the carriage high enough to access the drive axle housing oil level plug and fill plug.
- 2. Put blocks under the carriage.

Oil Cooled Disc Brake (OCDB) Type



- 1. Remove the dip stick/filter cap. Observe the oil level.
- 2. Maintain the oil level between lower mark and upper mark on the dip stick/filter cap.
- 3. Install the dip stick/filter cap.

First 50 - 100 Service Hours or a Week

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Engine Oil & Filter – Change


Diesel Engine Crankcase

The percentage of sulfur in the fuel will affect the engine oil recommendations. If the fuel has over 0.5% sulfur content, the CD engine oil must have a TBN of 20 times the percentage of fuel sulfur (TBN as measured by the ASTM D-2896 method). Your oil supplier should be able to furnish the correct oils.

- 1. Operate lift truck a few minutes to warm oil. Park the lift truck with the forks lowered, parking brake applied, Transmission in neutral and the engine stopped.
- 2. Raise rear of lift truck off ground and block securely.

\Lambda WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

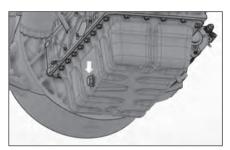

- Remove the crankcase drain plug and allow oil to drain into a suitable container. Clean and install drain plug.
- 4. Remove and discard oil filter element.
- 5. Wipe sealing surface of oil filter element mounting base. Make sure the entire gasket is removed.
- 6. Before installing a new filter element, apply a small amount of clean engine oil to the filter element gasket.
- Install the new filter element. When the gasket contacts the base, tighten it 3/4 of a turn more. Do not overtighten.
- 8. Raise the lift truck, remove the blocking and lower the lift truck.
- 9. Raise the hood and seat assembly.

- 10. Fill the crankcase. See "Refill Capacities".
- **11.** Start the engine and allow the oil to fill the filter and passages.
- 12. Check for oil leaks.
- Stop the engine and measure the oil level. The oil level should be close as possible to upper point of the oil dip stick.
- 14. Close hood and seat assembly.

\Lambda WARNING

Do not refill more than upper point.

NOTICE

Servicing of the engine oil and oil filter element has large affects on the engine performance as well as the engine life.


Engine oil and filter element must be changed after the first 50 hours.

Drive Axle Oil, Transmission Oil, Oil Filter & Strainer - Clean, Change

🛝 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Park the lift truck on level ground, with the forks lowered, the parking brake engaged, the transmission in NEUTRAL, and the engine stopped.

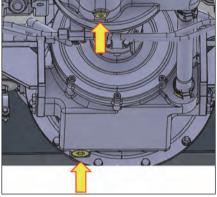


1. Remove the drain plug, spring and strainer. Allow the oil to drain.

NOTICE

Careless disposal of waste oil can harm the environment and can be dangerous to persons.

Always dispose of waste oil to authorized and licensed personnel only.

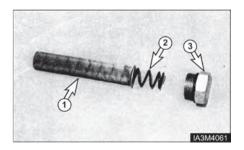

- 2. Wash the strainer (screen, 1), spring (2) and drain plug (3) in clean, nonflammable solvent. Dry and install the strainer, spring and drain plug.
- 3. Raise the hood and seat assembly.



- 4. Remove and discard the oil filter. Wipe off the filter base. Make sure all of the old seal is removed.
- Put a small amount of clean oil on the seal on the new filter. Install the filter by hand. When the filter contacts the base, tighten it an additional 3/4 turn.
- 6. Close the hood and seat assembly.
- 7. Open the access door in the floor plate.



- Remove the dipstick/filter cap. Fill the transmission with new oil. See "Refill Capacities" Install the dipstick/ filter cap.
- 9. Start the engine.
- 10. With the service brake applied and engine at low idle, shift the transmission to forward and reverse to fill the clutches.
- **11.** Shift the transmission into NEUTRAL. Apply the parking brake.
- 12. Remove the dipstick/ filter cap.
- **13.** Maintain the oil level between the Min and Max marks on the dipstick/filter cap.

When the oil temperature is 40°C approximately, the cold side mark on the dipstick is applicable. When the oil temperature is 80°C approximately, the hot side mark on the dipstick is applicable.

- 14. Check for oil leaks at the filter and drain plug.
- 15. Stop the engine.
- 16. Select Menu Vehicle TCU "Auto clutch calibration" in the display.
- 17. Check that transmission oil temperature is between 40 ~ 90 degree Celsius. If the temperature is too low, warm up the transmission. In reverse, if the temperature is too high, cool down the transmission.
- **18.** When the parking brake is ON and the gear is in neutral, the color of "start" button is changed to blue.
- **19.** With the service brake pedal depressed, click Start button. Then, calibration will be automatically conducted. It would take about 2 minutes.

\Lambda WARNING

While conducting the calibration, make sure to keep engaging the service brake thoroughly until being finished. Otherwise, the vehicle may be moved and this would cause some damage or injury.

- **20.** Select Menu Vehicle TCU "Auto inching calibration" in the display.
- 21. Make sure if the inching pedal is not depressed.
- 22. When the parking brake is ON and the gear is in neutral, the color of "start" button is changed to blue.
- 23. Click the start button then, the calibration will be conducted automatically. It would take about (2) seconds.

NOTICE

Do not press the inching pedal during calibration.

Parking Brake - Test, Adjust

Parking Brake Testing

NOTICE

OSHA requires the parking brake to hold the lift truck, with capacity load, on a 15% grade.

Testing requires a test load equal to the capacity of the truck and a 15% grade.

If the maximum grade in the workplace is less than its capacity, use the Parking Brake inspection procedure covered in 'Inspection from Operator's Seat, Engine On' in "Every 10 Service Hours or Daily" section.

- 1. Pick up capacity load and drive over to a 15% grade.
- 2. Drive forward up the 15% grade. Halfway up the grade, stop the lift truck with its service brakes.



- Engage the parking brake and shift the transmission to NEUTRAL. Slowly release the service brakes.
- 4. The parking brake adjustment is proper if it holds the lift truck on the grade.
- 5. If the lift truck starts to move in reverse down the grade with the parking brake engaged, stop it with the service brakes, disengage the parking brake and reverse slowly down the grade controlling your speed with the service brakes.

\Lambda WARNING

If the parking brake is used for emergency braking while the vehicle is running, the parking brake must be tested.

If the forklift continues to move even when the parking brake is on, park the vehicle in a safe place and insert a block of wood underneath the wheel to prevent the vehicle from moving. Then contact the service center and have the vehicle serviced.

🚺 WARNING

To prevent personal injury, the operator MUST be ready to use the service brake if the parking brake is not adjusted correctly and the lift truck starts to move.

Every 500 Service Hours or 3 Months

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Air Intake System - Check, Clean

Servicing Filter Element

Precleaner (If Equipped)

NOTICE

Never service precleaner with the engine running.



Typical Example

Diesel Engine Truck

 Check the precleaner bowl for dirt build-up. If the dirt is up to the line, remove the precleaner bowl and empty it. Periodically wash the cover and bowl in water.

NOTICE

Never service precleaner with the engine running.



Typical Example

Diesel Engine Truck

Service the air cleaner when the red target in the service indicator stays locked in the visible position with the engine stopped.

1. To service the air cleaner, loosen the cover latches and remove the cover.



- 2. Rotate the element slightly to separate it from its base and remove it from the air cleaner housing.
- 3. Clean and inspect the element or replace with a new element. See topic, "Cleaning Primary Filter Elements".
- Clean the inside of air cleaner housing and the cover. Inspect all connections between the air cleaner and engine. Check intake hose for cracks, damage and loose clamps. Tighten or replace parts as necessary to prevent leakage.

NOTICE

Do not allow dirty air to enter the intake hose when cleaning the inside of the air cleaner housing.

- 5. Check the air cleaner housing for loose latches.
- 6. Reset the air cleaner service indicator.
- 7. Install the air filter element.
- 8. Install the cover and tighten the cover latches.
- Start the engine and observe the position of the indicator. If the indicator shows RED after the installation of the primary element, install another clean or a new element or, replace the secondary element. See topic, "Air Intake System - Change" in Every 1000 Service Hours or 6 months section.
- **10.** Stop the engine and close the hood and seat assembly.

Cleaning Primary Filter Elements

👠 WARNING

Pressure air can cause personal injury.

When using pressure air for cleaning, wear a protective face shield, protective clothing and protective shoes.

The maximum air pressure must be below 205 kPa (30 psi) for cleaning purposes.

NOTICE

Do not clean the elements by bumping or tapping them.

Inspect filter elements after cleaning. Do not use a filter with damaged pleats, gaskets or seals.


When cleaning with pressure air, use 205 kPa (30 psi) maximum pressure to prevent filter element damage.

When cleaning with pressure water, use 280 kPa (40 psi) maximum pressure to prevent filter element damage.

Have spare elements on hand to use while cleaning used elements.


The primary element should be replaced after a year's service or after cleaning no more than 6 times.

Air-205 kPa (30 psi) Maximum Pressure

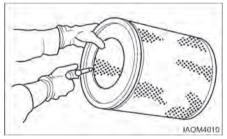

Direct air on the inside and outside of the element along the length of the pleats. Check the element for any tears, rips or damage.

Water - 280 kPa (40 psi) Maximum Pressure

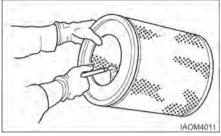

Direct water on the inside and outside of the element along the length of the pleats. Air dry it thoroughly and then examine it.

Detergent

- 1. Wash the element in warm water and mild household detergent.
- 2. Rinse the element with clean water. See instructions in preceding topic for cleaning with water.
- 3. Air dry it thoroughly, and then examine it.

Checking Element



- Insert a light inside the clean dry element and examine it. Discard the element if tears, rips or damage are found.
- 2. Wrap and store good elements in a clean, dry place.


Fuel Filter - Change

The fuel filter element must be replaced on a regular basis to prevent foreign materials from entering the diesel fuel system.

Stop and cool down the engine.

Disconnect wire harness connector (1) and disconnect the fuel hose (2) connected to the fuel filter port.

When removing the fuel filter, hold it carefully to prevent fuel from flowing out. Wipe and clean spilled fuel.

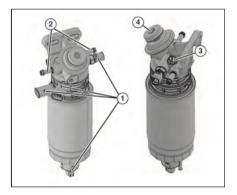

Install a new fuel filter and assemble the fuel filter cap.

Connect the wire harness connector and fuel hose connector. When connecting the fuel hose, take care to prevent foreign material from entering the hose.

After replacing the fuel filter or element, or having exhausted fuel, it is necessary to remove the air in the fuel system for safe engine start up.

Loosen the plug of air bleed port (3).

Press the pump (4) with your hand until the oil comes out. In this operation, all the fuel hose (2) must be connected.

Retighten the plug of air bleed port (3).

Check the fuel leakage

Engine Oil & Filter - Change (with CJ-4 Grade Only)

See topic, "Engine Oil & Filter - Change" in "First 50-100 Service Hours".

\Lambda WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Mast Hinge Pins – Lubricate




Typical Example

- 1. Lower the forks and tilt the mast forward.
- 2. Lubricate the two fittings for the mast hinge pins, one on each side of the mast.

Tilt Cylinders - Check, Adjust, Lubricate

Chassis Pivot Eyebolts

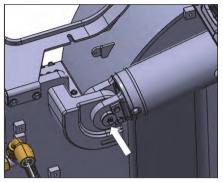

Typical Example

- 1. Lubricate two fittings for the pivot eyebolts, one on each tilt cylinder.
- 2. Check the pivot eye pins for loose retainer bolts and wear.

Mast Pivot Eyes




Typical Example

- 1. Lubricate two fittings for the mast pivot eyes, one on each side of the mast.
- 2. Check the pivot eye pins for loose retainer bolts and wear.


Cylinder Rod Extension

NOTE: The following description is for forward tilt. For cylinder rod back tilt, the collar should be stationary by the tilt eye. If it is not, the O-ring inside the collar may need to be replaced. To adjust back tilt, spacers must be added or removed.

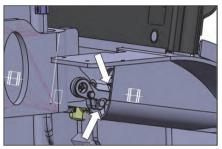

Typical Example

- 1. Check the tilt cylinders to make sure they extend and retract evenly.
- If one cylinder continues to move after the other cylinder has stopped in full forward or backward tilt, an adjustment must be made to one cylinder.

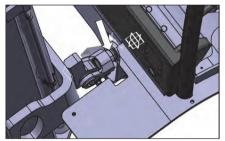


Typical Example

- 3. To adjust the cylinder rod extension, move the spacer to the rear and loosen the pinch bolt on the clevis.
- 4. Turn the cylinder rod in or out of the clevis to obtain the proper adjustment. Turning the rod into the clevis shortens the stroke. Turning the rod out of the clevis lengthens the stroke. When turning for extending rod, the overlapped length between clevis's thread and cylinder rod must be minimum 32 mm
- Tighten the pinch bolts to a torque of 95 ± 15 N·m (70 ± 10 lb·ft). Check the cylinder rods again for even travel.

Crosshead Rollers - Inspect


1. Operate the mast through a lift cycle. Watch the chains move over the crosshead rollers. Make sure the chain is tracking over the rollers properly.

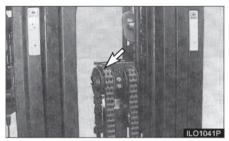


Typical Example

2. Check for damaged crosshead rollers, guards and retainer rings.

Carriage Side Rollers Thrust (If Equipped) - Lubricate

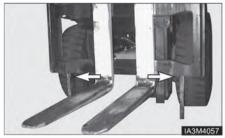


 Raise the carriage high enough to gain access to the side thrust rollers on the back side of the carriage. Block the carriage in this position.

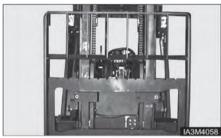

- 2. Lubricate 2 side thrust roller fittings, one on each side of the mast.
- 3. Raise the carriage, remove the blocking. Lower the carriage to the floor.


Carriage Sideshifter (If Equipped) – Lubricate

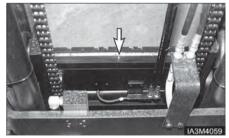

- 1. Lubricate 4 (6) fittings. The forks may have to be moved to gain access to all of the fittings.
- 2. Operate the sideshifter carriage through several complete cycles to distribute the grease the carriage to the floor.

Mast, Carriage, Lift Chains, & Attachments - Check, Lubricate

- 1. Operate the lift, tilt and attachment controls. Listen for unusual noises. These may indicate a need for repair.
- 2. Inspect for loose bolts and nuts on the carriage. Remove any debris from the carriage and mast.
- 3. Inspect the forks and attachments for free operation and damage. Have repairs made if necessary.

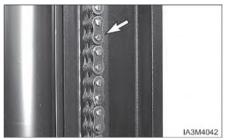



- 4. Brush a film of oil on all links of the chain.
- 5. Raise and lower the carriage a few times to work lubricant into the chain links.

NOTICE

Lubricate chains more frequently than normal in applications where the lift truck is operating in a atmosphere which could cause corrosion of components or when lift truck must work in rapid lift cycles.

6. Inspect the chain anchors and individual links for wear, loose pins or cracked leaves.

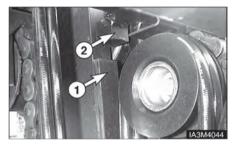

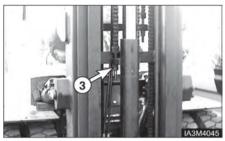

- In case of Full Free Lift Mast, extend the primary cylinder to full length and then check the clearance and over lapped dimension between carriage stopper bolt or block (1) and Inner mast stopper block (2). Adjust the chain anchor bolt (3) so that clearance should be 14 ± 2 mm.
- 8. And adjust the overlapped dimension to be 10 ± 2 mm by moving or inserting washer.

Carriage Side Rollers – Lubricate



D35/40S-9



D45S-9, D50/55C-9

Lubricate 2 side roller fittings, one on each side of the carriage.

Parking Brake - Test, Adjust

See topic, "Parking Brake - Test, Adjust" in "First 50-100 Service Hours."


Horn & Lights (If Equipped) - Check



- 1. Press horn button, to determine if horn is operational.
- Check all lights such as warning, directional, backup, driving and flood lights for correct operation. Replace all burned-out bulbs, and repair them if needed.

Overhead Guard – Inspect



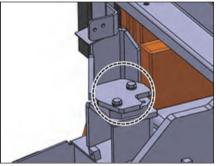

- 1. Check tightness of overhead guard mounting bolts at 95 N·m (70 lb-ft).
- 2. Check overhead guard for bent or cracked sections, and repair them if needed.

Steer Suspension - Inspect



 Inspect the suspension mounting bolts. Tighten suspension mounting bolts, if necessary, to 240±30 N·m (180±20 lb-ft).



- 2. Look for leaks at the power steering hose connections.
- 3. Remove any trash buildup on the suspension or the steer axle.

Steering Mechanism - Check, Lubricate



- 1. Lubricate the steer axle king pins, total of four fittings. Two on the right side and two on the left side.
- 2. Lubricate the steering link bearings, total of four fittings. Two on the right side and two on the left side.
- Check for any worn or loose components of the steering mechanism. Remove any debris or trash as required.

Wheel Bolts and Nuts – Inspect

Inspect Tightness

NOTICE

Do not lubricate ball seas of wheels or ball faces of wheel nuts.

Be sure mounting faces of hub, wheel nuts and flat mounting surfaces are clean.

Tighten wheel nuts again after 24 hours of operation.

NOTE: Always tighten wheel lug nuts in a sequence opposite (180°) each other.

If equipped with dual wheels, follow the same nut tightening sequence for both wheels.

Steer Wheels



Install steer wheel. Put two nuts opposite (180°) each other. Tighten both. Install remaining nuts. Tighten all nuts in a sequence opposite (180°) each other. Tighten to 440+35 N·m (325+25 lb-ft).

Drive Wheels



Install drive wheel. Put two nuts opposite (180°) each other. Tighten both.

Install the remaining nuts. Tighten all nuts in a sequence opposite (180°) each other. Tighten to 600 ± 90 N·m (440 ±60 lb-ft).

Every 1000 Service Hours or 6 Months

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Air Intake System - Change

Changing Primary Element

See topic, "Air Intake System - Check, Clean" in "Every 500 Service Hours or 3 Months".

Changing Secondary Element

Replace the secondary element after the primary element has been cleaned three times or yearly.

- 1. Remove the primary air cleaner element. See topic "Servicing Filter Element". Clean the inside of the air cleaner housing and cover.
- Remove the secondary element. Inspect the gasket between the air cleaner housing and the engine inlet. Replace the gasket if it is damaged.

NOTICE

Always replace the secondary element. Do not attempt to reuse it by cleaning.

- Install a new secondary element. Install a new or cleaned primary element. Install the cover. Tighten the latches.
- Start the engine and observe the air cleaner service indicator. If the indicator shows RED after installing a new secondary element and a cleaned primary (outer) element, replace the cleaned primary filter with a new element.
- 5. Stop the engine. Close the hood and seat assembly.

Fuel Lines & Fittings - Check

Visually inspect fuel lines and fittings for physical damage. Replace as required.

Engine Oil & Filter - Change (with CK-4 Grade Only)

See topic, "Engine Oil & Filter - Change" in "First 50-100 Service Hours".

🚺 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Fuel Filter (with Pre/Main Filter) – Change

The fuel filter element must be replaced on a regular basis to prevent foreign materials from entering the diesel fuel system.

Stop and cool down the engine.

Disconnect wire harness connector (1) and disconnect the fuel hose (2) connected to the fuel pre filter port.



When removing the fuel filter, hold it carefully to prevent fuel from flowing out. Wipe and clean spilled fuel.

Install a new fuel filter and assemble the fuel filter ap.

Connect the wire harness connector and fuel hose connector. When connecting the fuel hose, take care to prevent foreign material from entering the hose.

Disconnect wire harness connector (3) and disconnect the fuel hose (4) connected to the fuel main filter port.

When removing the fuel filter, hold it carefully to prevent fuel from flowing out. Wipe and clean spilled fuel.



Install a new fuel filter and assemble the fuel filter cap.

Connect the wire harness connector and fuel hose connector. When connecting the fuel hose, take care to prevent foreign material from entering the hose.

After replacing the fuel filter or element, or having exhausted fuel, it is necessary to remove the air in the fuel system for safe engine start up.

Loosen the plug of air bleed port (5).

Press the pump (6) with your hand until the oil comes out. In this operation, all the fuel hose (2) and (4) must be connected.

Retighten the plug of air bleed port (5).


Check the fuel leakage.

Belt - Check, Adjust


1. The belt is equipped with an auto tensioner which automatically adjusts the belt tension so there is no need for extra adjustment of the tension.

During daily inspections, be sure to inspect whether the pointer on the auto tensioner is indicating that it is time for a replacement, as well as whether there is any damage to the belt due to external factors.

 Replacing the Micro V-Belt if necessary. Replace the belt set in the event that the pointer on the auto tensioner indicates that it is time for a replacement, or cases where damage to the belt from external factors has been confirmed and there are concerns of severe damage occurring.

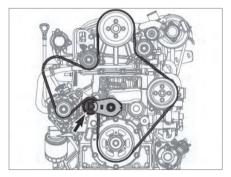

 Inspecting the condition Inspect the Micro V-belt for cracks, oil, overheating and wear.

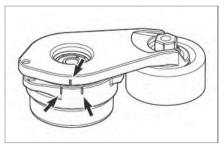

The vertical rod shown by the arrow is the "pointer," and the belt replacement period is indicated when this "Pointer" enters the horizontal range shown in orange.

NOTE: The minimum/maximum range indication is a reference value; the belt must be inspected according to its maintenance schedule.

Hydraulic Return Filter - Change


👠 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Park the lift truck on level ground, with the forks lowered, the parking brake engaged, the transmission in NEUTRAL, and the engine stopped.



 Raise the hood and seat assembly. Loosen the bolts of the hydraulic tank cover, and remove the hydraulic tank cover with filter assembly.

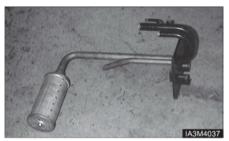

- 2. Remove filter assembly from the hydraulic tank cover.
- 3. Install new filter assembly in the hydraulic tank cover.
- 4. Inspect cover gasket for damage, replace it if necessary.
- 5. Clean and Install the cover and tighten retaining bolts.
- 6. Lower the hood and seat assembly.

Air Breather - Change

Park the lift truck on level ground, with the forks lowered, the parking brake engaged, the transmission in NEUTRAL, and the engine stopped.

- 1. Raise the hood and seat assembly.
- 2. Remove and discard the air breather.



- 3. Install a new air breather.
- 4. Lower the hood and seat assembly.

Lift Chains - Test, Check, Adjust

Lift Chain Wear Test

Inspect the part of the chain for its normal operation over the cross head roller. When the chain bends over the roller, the movement of the parts against each other causes wears.

Inspect to make sure that chain link pins do not extend outside of the link hole. If any single link pin is extended beyond its connecting corresponding link, it should be suspected of being broken inside of its link hole. Lift chains are required to check for wear about every 1,000 service hours or 6 months.

Chain wear test is a measurement of wear of the chain links and pins. Take the following steps to check chain wear.

1. Lift the mast and carriage enough for getting tension on lift chains.



Typical example

- 2. Measure precisely ten links of chain distance at the center of pins in millimeter.
- 3. Calculate chain wear rate*.
- 4. If the chain wear rate is 2% or more, replace the lift chain.

*Chain wear rate (%)

$$= \left(\frac{\text{Actual measurement - Pitch** X 10}}{\text{Pitch** X 10}}\right) X 100$$

Check for Equal Tension



Typical example

Lift the carriage and the mast high enough for getting tension on lift chains. Check the chains, and make sure the tension is the same. Lift chains are required to check for equal tension about every 1,000 service hours or 6 months.

👠 WARNING

Personal injury can be caused by sudden movement of the mast and carriage.

Keep hands and feet clear of any parts that can move.

Lift Chain Adjustment



Typical example for carriage equal tension


If the tension is not the same on both chains, take the procedure as follows.

NOTE: If carriage height is not correct, make adjustments by following procedures.


Carriage Chain Adjustment

Make sure that carriage height is correct. If correct, adjust the chain for equal tension. If not, adjust the chain for correct carriage height by adjusting anchor nuts (1),(2).

- NOTE: See the previous section, "Carriage Roller Extrusion" in "When Required" for proper height of carriage.
- 1. Fully lower the carriage and tilt mast forward or lift the carriage and put blocks under the carriage to release the tension from the lift chains.
- Loosen nut (1) and adjust nut(2) to get proper distance from bottom of inner upright to the bottom of carriage bearing.

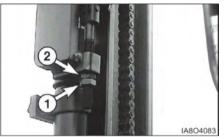


Typical example for carriage chain of STD mast

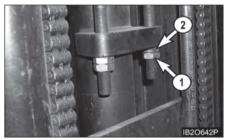


Typical example for carriage chain of FF,FFT mast

- **3.** Make adjustment anchor nut (1),(2) for equal chain tension.
- Set the mast vertical and raise the carriage and check equal chain tension. If not equal, repeat the same procedure as step 1 through step 3.
- Put LOCTITE No. 242 Tread lock on the threads of the anchor nuts (1),(2) after the adjustment is completed.

Mast Chain Adjustment - FF, FFT Mast

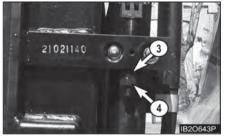

Typical example for FF mast

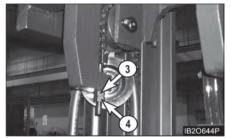

Typical example for FFT mast

Make sure that mast height is correct. If correct, adjust chain for equal tension. If not, adjust mast chain for correct mast height by adjusting anchor nuts (3), (4).

- NOTE: See the previous section, "Carriage Roller Extrusion" in "When Required" for proper inner mast height.
- 1. Lift the inner mast and put blocks under the inner mast to release the tension from the lift chains.
- 2. Loosen nut (3) and adjust nut (4) to make inner mast rail flush with outer mast rail bottom.
- **3.** Make adjustment anchor nuts (3),(4) for equal chain tension.
- Raise the inner mast and check equal chain tension. If not equal, repeat the same procedure as step 1 through step 3.
- Put LOCTITE No. 242 tread lock on the threads of the anchor nuts (3),(4) after the adjustment is completed.

Universal Joint - Inspect, Lubricate



- 1. Inspect for loose retaining bolts. Check for worn or damaged bearings.
- 2. Have worn or damaged bearings replaced. Tighten the bolts if necessary.



3. Lubricate the grease into the nipples of the universal joint.

Every 2000 Service Hours or Yearly

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Drive Axle Oil, Transmission Oil, Oil Filter & Strainer - Clean, Change

See the topic, "Drive axle Oil, Transmission Oil, Oil Filter & Strainer - Clean, Change" in First 50-100 Service hours or a week.

Steer Wheel Bearings - Reassemble

Park the lift truck on level ground, with the forks lowered, the parking brake engaged, the transmission in NEUTRAL, and the engine stopped.




Typical Example

- Lift the steer wheels off the ground. Place stands or blocking under the frame and steer axle to support the lift truck.
- 2. Remove the hub cap.



Typical Example

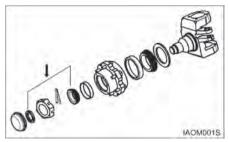

- 3. Remove the cutter pin.
- 4. Remove the castle nut and washer.
- Remove the wheel assembly. Examine the seal for damage and wear. Replace the seal if necessary.

\Lambda WARNING

Deflate tire before removing wheel nuts at tire change.

- Remove the inner bearing. Clean and lubricate the steering knuckle. Reassemble both the inner and outer bearing cones.
- 7. Install the inner bearing. Lubricate the seal and install the wheel assembly on the knuckle.
- 8. Install the outer wheel bearing and the outer washer. Install a new lock washer and fit the locknut.



Typical Example

- 9. Tighten the locknut to 135 N·m (100 lb·ft), while turning wheel hub to seat the bearing.
- Loosen the locknut. Retorque it to 50 ± 5 N·m (37 ± 4 lb·ft). Bend the lockwasher tang to secure locknut.

- 11. Install the hub cap.
- **12.** Raise the lift truck and remove the blocking Lower the lift truck to the ground.

Cooling System - Clean, Change

WARNING

At operating temperature, the engine coolant is hot and under pressure.

Steam can cause personal injury.

Check the coolant level only after the engine has been stopped and the filter cap is cool enough to touch with your bare hand.

Remove the filter cap slowly to relieve pressure.

Cooling system conditioner contains alkali. Avoid contact with the skin and eyes to prevent personal injury.

Use all cleaning solutions with care.


The lift truck must be level, the forks lowered, the parking brake engaged, the transmission in NEUTRAL and the engine stopped and cool.



- 1. Turn the radiator cap slowly to relieve the pressure, then remove the cap.
- 2. Remove the block drain plug.
- **3.** Open radiator drain valve. Allow the coolant to drain. Drain the recovery bottle.
- Close radiator drain valve and install block drain plug. Fill the cooling system with 1 kg (2 lb) sodium bisulphate per 40 liters (10 gallons) of water. Most commercial cooling system cleaners can be used.
- 5. Start and run the engine for 30 minutes.
- 6. Stop the engine and drain the cleaning solution.
- 7. Flush the system with clean water, until draining water is clear.

- Close the drain valve and install the block drain plug. Fill the system with neutralizing solution, 250g (1/2 lb) sodium carbonate per 40 liters (10 gallons) of water.
- 9. Start and run the engine for 10 minutes.
- **10.** Stop the engine and drain the neutralizing solution.
- 11. Flush the system with clean water until draining water is clear.
- **12.** Close the drain valve and install the block drain plug. Add coolant to the top of the filter neck.
- Start and run the engine to stabilize the coolant level. See "Every 10 Service hours or Daily", "Coolant Level-Check", in this manual.

Forks – Inspect

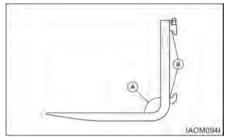


Forks should be inspected, at a minimum, every 12 months. If the truck is being used in a multi-shift or heavy duty operation, they should be checked every six months.


 Inspect the forks carefully for cracks. Special attention should be given to the heel section (A), all weld areas and mounting brackets (B). Inspect the top and bottom hooks on forks used on hook type carriages and tubes on shaft mounted forks.

Forks with cracks should be removed from service. "Wet Test" magnetic particle inspection is generally preferred due to its sensitivity and the ease of interpreting the results. Portable equipment is usually recommended so it can be moved to the lift truck.

Inspectors should be trained and qualified in accordance with The American Society for Non Destructive Testing, Level II Qualifications.

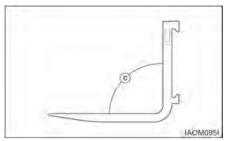


 Check the angle between the upper face of the blade and the front face of the shank. The fork should be withdrawn from service if angle (C) exceeds 93 degrees or deviates by more than 3 degrees from an original angle other than 90 degrees, as may be found in some special application forks.

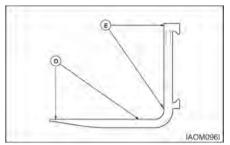

 Check the straightness of the upper face of blade (D) and the front face of shank (E) with a straight edge.


The fork should be withdrawn from service if the deviation from straightness exceeds 0.5 percent of the length of the blade and/or the height of the shank respectively 5 mm/1000 mm (0.18"/36").

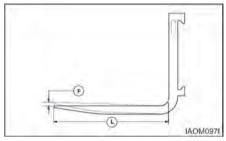

 Check the difference in height of one fork tip to the other when mounted on the fork carrier. A difference in fork tip height can result in uneven support of the load and cause problems with entering loads.


The maximum recommended difference in fork tip elevation (F) is 6.5 mm (0.25^{m}) for pallet forks and 3 mm (0.125^{m}) for fully tapered forks. The maximum allowable difference in fork tip elevation between the two or more forks is 3 percent of blade length (L).

Replace one or both forks when the difference in fork tip height exceeds the maximum allowable difference. Contact your local DOOSAN Lift Truck Dealer for further information.

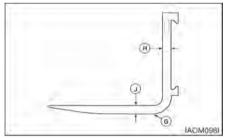

 Check the fork blade (J) and shank (H) for wear with special attention to the heel (G). The fork should be withdrawn from service if the thickness is reduced to 90 percent or less of the original thickness.

Fork blade length may also be reduced by wear, especially on tapered forks and platens. Remove the forks from service when the blade length is no longer adequate for the intended loads.

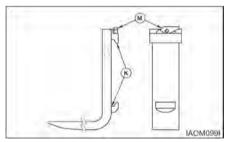


- 6. Check the fork mountings (K) for wear, crushing and other local deformation, which can cause excessive side to side wobble of the forks. Excessive clearance on hook type forks may allow them to fall from the carrier. Forks which show visible signs of such damage should be removed from service.
- 7. Check the positioning lock and other fork retention devices to make sure they are in place and working.

Hook type forks use a spring loaded pin (M), located in the top hook, to engage notches in the top carriage bar to hold the fork in place.

When adjusting the fork spacing, the forks are prevented from sliding off the end of the carriage by stop blocks. These stop blocks are at both ends of the carriage and in the path of the bottom fork hook. The load backrest extension may be used in place of the stop blocks in some cases.

Shaft mounted forks may use set collars or spacers on the shaft to either side of the fork. They may also use U bolts, pins, or similar devices which engage the fork through the top structure of the carriage.

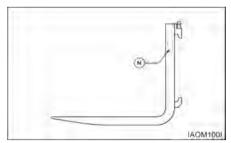

- 8. Check fork markings (N) for legibility. Renew markings as required to retain legibility.
 - a. Lift the mast and operate the tilt control lever, until the top surface of the forks is parallel with the floor. Place two straight bars that are the same width as the carriage, across the forks as shown.
 - b. Measure the distance from the bottom of each end of the two bars to the floor. The forks must be parallel within 3 mm (.12 in) for Full Tapered and Polished (FTP) forks, all other forks 6.4 mm (.25 in), for their complete length.
 - c. Put one fork, one third from the tip, under a fixture that will not move. Then operate the tilt control with caution until the rear of the truck lifts just off the floor. Follow the same procedure with the second fork. Repeat Step a.

Every 2500 Service Hours or 15 Months


You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures.

Hydraulic Oil - Check, Clean, Change

👠 WARNING

Hot oil and components can cause personal injury. Do not allow hot oil or components to contact skin.

Park the lift truck on level ground, with the forks lowered, the mast tilted back (all cylinders retracted), the parking brake engaged, transmission in NEUTRAL, and the engine stopped.

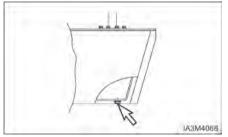

- 1. Remove the hydraulic tank drain plug. Allow the oil to drain. Clean and install the plug.
- 2. Raise the hood and seat assembly.
- 3. Remove dipstick/filter cap. Fill the hydraulic tank. See "Refill Capacities." Install the breather/dipstick.
- 4. Lower the hood and seat assembly.
- Start the engine and operate the hydraulic controls, and the steering system, through a few cycles to fill the lines. Look for oil leaks.



6. Stop the engine and check the oil level. With all cylinders retracted, maintain the oil level to the FULL mark on the dipstick.

Inspect Battery System

- 1. Clean battery outer surfaces with a mixture of baking soda and water.
- 2. Inspect battery outer surfaces for damage and replace as necessary.
- 3. Remove battery cable and clean, repair and/or replace as necessary.

Every 5000 Service Hours or 30 Months

You must read and understand the warnings and instructions contained in the Safety section of this manual, before performing any operation or maintenance procedures

DPF Maintenance (DM03V Stage 5 Engine Only) - Ash Cleaning

\Lambda WARNING

Ash cleaning services is recommended by the designated repair shop, if not, it can lead to damage of the product and system.

Visit designated Repair & Inspection Shop for Ash Cleaning service every 5000 Hours or 30 Months. If not the efficiency of filtering and performance of back pressure would be reduced.



DPF

Use recommended engine oil to reduce the amount of generated ash (API CJ/CK-4 Grade).

Environment Protection

When servicing this lift truck, use an authorized servicing area and an approved container to collect coolant, oil, fuel, grease, electrolyte and any other potential environmental pollutant before any lines, fittings or related items are disconnected or removed. After servicing, dispose of those materials in an authorized place and container. When cleaning the lift truck, be sure to use an authorized area.

Index

#

12 Months	Inspection		119
-----------	------------	--	-----

Α

Accelerator Pedal	85
Additional Technical Fuel Requirements	125
After Starting the Engine	92
Air-205 kPa (30 psi) Maximum Pressure	
Air Breather - Change	164
Air Intake System - Change	
Air Intake System - Check, Clean	
Antifreeze	
Attachment Abbreviations (Includes Special	Forks)
	,
Audio System (AM/FM Tuner with USB/AUX P	
If equippied)	73
Auto Shift (AUTO) Selector Switch	
Avoiding Lift Truck Tipovers	

в

Battery Terminal - Clean, Inspect	134
Before Operating the Lift Truck	12
Before Starting the Engine	88
Before Starting the Lift Truck	12
Before Storage	110
Belt - Check, Adjust	163
Bent or Twisted Forks	117
Bio-Diesel Fuels	126
Brake Fluid	128
Brake Oil Level – Check	145
Brake Pedal Adjustment Warning	8
Bulbs	140
Burn Prevention	15

С

Capacities for Refilling129
Capacity Chart (with Side Shifter)43, 45
Capacity Chart41, 42
Carriage Chain Adjustment165
Carriage Roller Extrusion - Check, Adjust
Carriage Side Rollers – Lubricate157
Carriage Side Rollers Thrust (If Equipped) -
Lubricate156
Carriage Sideshifter (If Equipped) – Lubricate 156
Causes of Fork Failure117
Center of Gravity (CG)22

Changing Primary Element	161
Changing Secondary Element	
Chassis Pivot Eyebolts	154
Check Coolant Level	
Check for Equal Tension	165
Check Inflation and Damage	141
Checking Element	153
Circuit Breaker	
Cleaning Primary Filter Elements	152
Coolant Information	123
Coolant Level - Check, Clean	143
Coolant Water	124
Cooling System - Clean, Change	168
Cooling System Specifications	123
Crosshead Rollers - Inspect	155
Crushing or Cutting Prevention	14
Cylinder Rod Extension	155
5	

D

Daily Inspection	118
Declaration of Conformity	31
Detergent	
Diesel Engine Crankcase	147
Diesel Engine Equipped	87
Diesel Engine90	, 92, 93
Diesel Specifications	125
Direction Control Lever	82
Discharge of Foreign Matter in the Fuel	138
Display Cluster	63
Display for SCR Cleaning	137
Display of Detecting Control Failure	98
DPF Maintenance (DM03V Stage 5 Engine C)nly) -
Ash Cleaning	172
Drive Axle Oil Level - Check	146
Drive Axle Oil	128
Drive Axle Oil, Transmission Oil, Oil Filter & S	Strainer
- Clean, Change1	48, 167
Drive Wheels	160

Е

Electrical Disconnect Switch (If Equipped) Electrical Parking Brake	
Electronic Controlled Diesel Engines (DI DI	,
Engine and After-treatment System	
Engine Oil & Filter - Change (with CJ-4 Grad	
	154
Engine Oil & Filter - Change (with CK-4 Grad	de Only)
	161
Engine Oil & Filter – Change	147
Engine Oil (DEO and EO)	127
Engine Oil Level - Check	143
Environment Management	

Environment Protection	116, 173
Every 10 Service Hours or Daily	143
Every 1000 Service Hours or 6 Months	
Every 2000 Service Hours or Yearly	
Every 2500 Service Hours or 15 Months	
Every 500 Service Hours or 3 Months	151
Every 5000 Service Hours or 30 Months	172

F

Falling Objects Protective Structure(FOPS)15
Fatigue117
Fire or Explosion Prevention16
First 50 - 100 Service Hours or a Week147
First Installation118
Fluid Penetration14
Foreword2
Fork Inspection118
Forks – Inspect
Forward and Backward Adjustment
Fuel and DEF/Ad-Blue Replenishment
Fuel Filter - Change153
Fuel Filter (with Pre/Main Filter) - Change
Fuel Lines & Fittings - Check161
Fuses140
Fuses, Bulbs & Circuit Breaker - Change, Reset.140

G

General Fuel Information	125
General Hazard Information	10
General Warnings to Operator	6

н

Hand Placement Warning	7
Hook - on type Fork	
Horn & Lights (If Equipped) - Check	158
Hot Muffler Warning	9
How to Fix Forklift to a Carrier	112
How to Survive in a Tipover	30
Hydraulic Oil - Check, Clean, Change	171
Hydraulic Oil (HYDO)	127
Hydraulic Oil Level – Check	146
Hydraulic Return Filter - Change	163

I

Identification, Lift Capacity and Attachment Plate58
If Optional Suspension Seat (weight adjusting type)
Equipped19
Important Safety Information4

Improper Modification or Repair	117
Inching into Loads	103
Inching	101
Inspect Battery System	171
Inspect Engine for Exhaust Leaks	144
Inspect Engine for Fluid Leaks	143
Inspect Tightness	160
Inspection, Maintenance and Repair of Lift	Truck
Forks	116
Instrument Panel	60

L

Lift Chain Adjustment	
Lift Chain Wear Test	164
Lift Chains - Test, Check, Adjust	164
Lift Control	
Lift Fork Adjustment	109
Lift Truck Capacity Rating	
Lift Truck Controls	
Lift Truck Operation	100
Lift Truck Parking	14
Lift Truck Shipping	
Lift Truck Stability Base	23
Lift Truck Stability	
Lifting a Forklift using a Crane	112
Lifting Drums or Round Objects	106
Lifting the Load	103
Literature Information	2
Load Backrest Must Be In Place Warning	7
Loading or Unloading Trucks/Trailers	13
Long Time Storage	110
Lubricant Information	127
Lubricant Specifications	127
Lubricant Viscosities and Refill Capacities	129
Lubricant Viscosities	129
Lubricating Grease (MPGM)	128

М

Machine Lifting and Tiedown Information Maintenance and Repair	
Maintenance Information	
Maintenance Intervals	3, 130
Maintenance	3
Make proper antifreeze additions	124
Mast Abbreviations	59
Mast Chain Adjustment - FF, FFT Mast	166
Mast Channels - Lubricate	
Mast Hinge Pins - Lubricate	154
Mast Pivot Eyes	
Mast, Carriage, Lift Chains, & Attachments -	Check,
Lubricate	157
Metric Hardware	121
Metric ISO ² Tread	122

Mono-Ped Control System (If Equipped)	102
Mounting and Dismounting	11
Moving Fan Warning	9
Multi-torque	83

Ν

No Riders Warning8	
No Standing On Forks Warning, No Standing Under	
Forks Warning7	
Noise and Vibration40	
Noise	

ο

Oil Cooled Disc Brake (OCDB) Type	146
Operating in hot weather	106
Operating Techniques	103
Operating the Lift Truck	13
Operation Information	11
Operation	2
Operator's Warning and Identification Plate	58
Operator Restraint System (If Equipped)	2
Operator's Station and Monitoring Systems	60
Operator's Warning Plate	58
Overhead Guard - Inspect	158
Overhead Guard Must Be In Place Warning.	8
Overloading	117

Ρ

Parking Brake - Test, Adjust
Parking Brake Forced Release Method 2 (In Case
That the Engine Does Not Start)115
Parking Brake Forced Release Method114
Parking Brake Switch
Parking Brake Testing150
Parking the Lift Truck108
Power Shift Transaxle
Precleaner (If Equipped)151
Pressure Air14
Pressure Warning7
Prestart Conditions
Priming the Fuel System

R

Restoration Method 1	0		
Restoration			

s

Safety instructions for attachments when transporting suspended loads
Seat Adjustment 18
Seat Switch System
Seat, Hood Latch & Support Cylinder - Check,
Lubricate
Serial Number Locations57
Serial Number
Service Brake Pedal85
Servicing Filter Element151
Sideshift Attachment Control (If Equipped)
Specifications of Fuel and DEF/Ad-Blue125
Specifications
Stability and Center of Gravity 22
Starting a Cold Diesel Engine90
Starting From a 12 Volt External Source91
Starting the Engine
Starting the Lift Truck12
Steer Suspension - Inspect159
Steer Wheel Bearings - Reassemble
Steer Wheels 160
Steering Mechanism - Check, Lubricate
Storage Information

т

Table of Contents 1 Tilt Control 86 Tilt Cylinders - Check, Adjust, Lubricate 154
Tilt Steering Column72
Tire Inflation Information 120
Tire Inflation Pressures Adjustment120
Tire Inflation 120
Tire Shipping Pressure 120
Tires and Wheels - Check, Inspect141
To Operate the Lift Truck After a Long Time Storage
Torque for Metric Fasteners
Torque for Standard Bolts, Nuts, and Taperlock
Studs

Torques for Taperlock Studs Towing Information	
Training Required to Operate or Service Warning	ing5
Transmission Inching Control Pedal	85
Transmission Oil (TDTO)	128
Transmission Oil Level - Check	145
Transmission Speed Range Lever	82
Transportation Hints	111
Traveling With the Load	104
Turning	

U

Universal Joint - Inspect, Lubricate	166
Unloading	104

v

Vibration (weighted overall value)	40
------------------------------------	----

w

Walk - Around Inspection - Inspect	144
Walk - Around Inspection	88
Warning Signs and Labels	5, 18
Water - 280 kPa (40 psi) Maximum Pressure	153
Water Separator	138
Weight adjustment	19
Weight Scale Mode (Optional - Hydraulic)	69
Weight Scale Option (Load Cell Type)	70
Wheel Bolts and Nuts - Inspect	160
When Required	134